

## Finnhomy F20FLS4D90N4

# Finnhomy 4-Drawer Rattan Dresser Instruction Manual

**MODEL: F20FLS4D90N4**

Brand: Finnhomy

[Introduction](#) [Safety Information](#) [Setup & Assembly](#) [Operation](#) [Maintenance](#)  
[Troubleshooting](#) [Specifications](#) [Support](#)

### 1. INTRODUCTION

Thank you for choosing the Finnhomy 4-Drawer Rattan Dresser. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new furniture. Please read this manual thoroughly before beginning assembly and retain it for future reference.



*Image 1.1: Finnhome 4-Drawer Rattan Dresser, front view.*

## 2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Always assemble the dresser on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- Do not overload drawers. Adhere to the maximum load capacities specified in the "Specifications" section.
- **Anti-Tip Device:** It is crucial to install the included anti-tip device to prevent the dresser from tipping over, especially in households with children or pets. Follow the instructions carefully for proper installation.

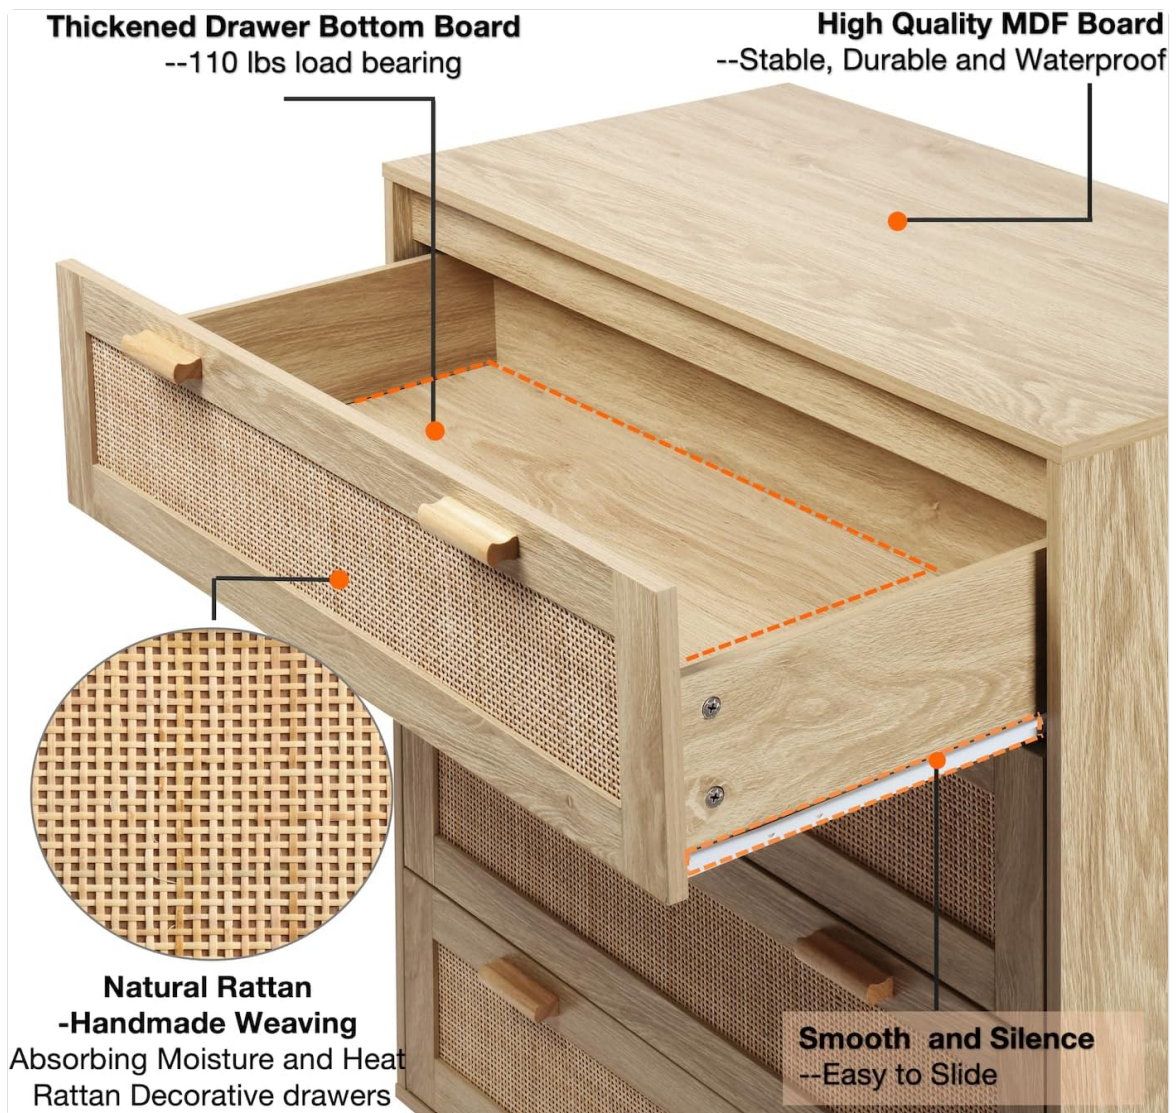


Image 2.1: Diagram illustrating the installation of the anti-tip device for enhanced stability.

### 3. SETUP AND ASSEMBLY

Assembly typically requires two people and takes approximately 35 minutes. All necessary hardware and tools are included, and each part is labeled for easy identification.

#### 3.1 Unpacking

Carefully remove all components from the packaging. Inspect all parts for any damage. If any parts are missing or damaged, please contact customer support immediately.

#### 3.2 Parts Identification

Refer to the included installation manual for a complete list of parts and hardware. Each component is labeled with a letter or number to correspond with the assembly steps.

#### 3.3 Assembly Steps

1. Follow the step-by-step instructions provided in the separate installation manual.
2. Note that the frame's sliding system for the drawers is pre-installed to simplify assembly.
3. Attach the four solid wood legs to the base of the dresser. Ensure anti-slip pads are correctly positioned.

4. Assemble the drawers according to the manual. The drawers feature a thickened bottom board for durability.
5. Install the anti-tip device as instructed in the safety section and the assembly manual. This step is critical for stability.



Image 3.1: Overview of dresser dimensions and key components for assembly.



Image 3.2: Detailed view of drawer construction, highlighting natural rattan, thickened bottom board, and smooth metal guide rail.

## 4. OPERATION

### 4.1 Drawer Usage

The dresser features four spacious drawers designed for smooth and silent operation. Gently pull the wooden handles to open and push to close. The metal guide rails ensure easy movement.

### 4.2 Storage Capacity

Each drawer is designed to hold various items, from clothing and blankets to smaller household clutter. Refer to the "Specifications" section for individual drawer load capacities. The overall dimensions of the dresser are 35.43" L x 17.72" W x 42.9" H, providing ample storage.

### 4.3 Placement

This versatile dresser is suitable for various rooms, including bedrooms, living rooms, hallways, and entryways. Its natural wood and rattan design complements diverse home decor styles.



Image 4.1: Examples of dresser placement in a living room, entryway, and bedroom.

## 5. MAINTENANCE

### 5.1 Cleaning

To clean the dresser, simply wipe it with a dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish and natural rattan.

### 5.2 General Care

- Keep the dresser away from direct sunlight and heat sources to prevent warping or fading.
- Periodically check all connections and tighten any loose screws to maintain stability.
- If the dresser needs to be moved, lift it rather than dragging it to prevent damage to the legs and structure.

## 6. TROUBLESHOOTING

### 6.1 Drawers Not Sliding Smoothly

If drawers are difficult to open or close, ensure they are correctly aligned on the metal guide rails. Check for any obstructions within the drawer or on the rails. Verify that all assembly screws for the drawer and the frame are securely tightened. The design includes a mechanism to prevent drawers from opening on their own, which may result in a slightly firmer pull or push compared to drawers without this feature.

### 6.2 Instability or Wobbling

Ensure the dresser is placed on a level surface. Check that all four legs are firmly attached and that the anti-tip device is correctly installed and secured to the wall. Re-tighten all assembly screws if

necessary.

### 6.3 Missing or Damaged Parts

If you discover any missing or damaged parts during unpacking or assembly, please contact Finnhome customer support immediately for assistance.

## 7. SPECIFICATIONS

Feature	Detail
Model Name	F20FLS4D90N4
Material	Engineered Wood, MDF, Solid Wood Legs, Natural Rattan Drawers
Product Dimensions (L x W x H)	35.43" x 17.72" x 42.9" (90cm x 45cm x 109cm)
Drawer Dimensions (L x W x H)	33.85" x 15.75" x 8.66" (86cm x 40cm x 22cm)
Max. Static Load Capacity (Dresser Top)	250 lb
Max. Static Load Capacity (Each Drawer)	110 lb
Overall Max. Static Load Capacity (Dresser)	600 lb
Item Weight	101 Pounds (46 kg)
Color	Natural Wood
Assembly Required	Yes
Product Care Instructions	Wipe with Dry Cloth



*Image 7.1: Visual representation of product dimensions and key specifications.*

## **8. WARRANTY AND SUPPORT**

### **8.1 Customer Support**

For any questions regarding assembly, missing parts, or product issues, please contact Finnhome customer support. We aim to reply within 24 hours to assist you.

You can typically find contact information on the product packaging or through the retailer where the product was purchased.

### **8.2 Returns and Replacements**

Please refer to the retailer's return policy for information on returns and replacements. Typically, a 30-day easy return policy is available for eligible purchases.