

[Manuals.plus](#) /

› [LUXOAK](#) /

› LUXOAK 75-inch Fireplace TV Stand with 3-Sided Glass Electric Fireplace Instruction Manual

LUXOAK CFT016

LUXOAK 75-inch Fireplace TV Stand with 3-Sided Glass Electric Fireplace Instruction Manual

Model: CFT016

1. INTRODUCTION

Thank you for purchasing the LUXOAK 75-inch Fireplace TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new media entertainment center. Please read these instructions thoroughly before beginning assembly or use to ensure proper function and longevity of the product.



Figure 1.1: LUXOAK 75-inch Fireplace TV Stand (Wash Gray)

2. SAFETY INFORMATION

Your safety is paramount. Please adhere to the following guidelines:

- **Electrical Safety:** The electric fireplace component is ETL certified and includes overheat protection. Do not overload electrical outlets. Ensure the power cord is not pinched or routed under the unit where it could be damaged.
- **Placement:** Place the TV stand on a flat, stable surface. Avoid placing it near flammable materials or in areas with high humidity.
- **Ventilation:** Ensure adequate clearance around the fireplace unit for proper ventilation. Do not block the air vents.
- **Weight Capacity:** The TV stand is designed to accommodate TVs up to 85 inches and supports a maximum weight of 250 lbs. Do not exceed this weight limit.
- **Children and Pets:** Keep children and pets away from the fireplace unit, especially when it is operating and emitting heat.
- **Assembly:** Assembly requires careful attention to instructions. It is recommended that two adults

assemble the unit to prevent injury and ensure stability.

3. PACKAGE CONTENTS

The LUXOAK 75-inch Fireplace TV Stand is shipped in two separate packages, which may arrive at different times. Please verify all components are present before beginning assembly.

Included components:

- 1 x TV Stand (unassembled components)
- 1 x Electric Fireplace Insert
- 1 x Screw Bag (containing all necessary hardware)

If any parts are missing or damaged, please contact customer support immediately.

4. SETUP AND ASSEMBLY

Assembly of the TV stand is required. LUXOAK does not provide installation services. While assembly is straightforward, it requires patience and adherence to the provided instructions. It is highly recommended to have two people for assembly due to the weight and size of the components.

1. **Preparation:** Clear a spacious area for assembly. Lay out all components and hardware. A Phillips head screwdriver and possibly other basic tools may be required beyond what is supplied.
2. **Review Instructions:** Carefully read the step-by-step assembly guide included in your package. Identify each part before starting.
3. **Assembly Steps:** Follow the numerical sequence of the assembly instructions. Pay close attention to diagrams.
4. **Door Alignment:** Some users have noted that pre-drilled holes for the glass doors may require minor adjustments for perfect alignment. If a door does not shut completely, a slight modification to the hinge placement might be necessary.
5. **Fireplace Insertion:** Once the TV stand frame is assembled, carefully insert the electric fireplace unit into its designated opening.



Figure 4.1: Detail of Glass Door



Figure 4.2: Woodgrain Finish Detail

5. OPERATING INSTRUCTIONS

5.1 Electric Fireplace Operation

The integrated 40-inch panoramic electric fireplace offers both aesthetic flame effects and heating functionality. It can heat areas up to 400 sq. ft. with 5120 BTUs of heat output.

- **Power On/Off:** Use the power button on the control panel or remote control to turn the fireplace on or off.
- **Flame Colors:** Select from 12 distinct flame colors to match your ambiance. Cycle through options using the flame color button.

- **Dimmer Settings:** Adjust the flame brightness with 5 levels of dimmer control.
- **Heat Function:** The fireplace can operate with or without heat. Activate the heating element using the heat button. The temperature can be set between 62°F and 82°F.
- **Timer:** Utilize the timing function to set the fireplace to turn off automatically.

40" PANORAMA FIREPLACE



5 Levels of
Brightness



Temperature
62° -82°



Timing



ETL
Certification



Figure 5.1: Electric Fireplace Features and Controls



Figure 5.2: Fireplace Control Panel and Remote

5.2 Storage and Cable Management

The TV stand features open storage shelves and two glass door cabinets, providing ample space for media devices, books, and decorative items.

- **Organize:** Use the various compartments to organize your entertainment accessories.
- **Cable Management:** Utilize the pre-drilled cable management holes on the back panel to route wires and reduce clutter, maintaining a tidy appearance.

LARGE STORAGE SPACE



Figure 5.3: Large Storage Space



6. MAINTENANCE

To ensure the longevity and appearance of your LUXOAK Fireplace TV Stand, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the engineered wood and finish.
- **Dusting:** Regularly dust the unit to prevent buildup, especially around the fireplace vents.
- **Glass Care:** Clean the glass doors and fireplace panel with a glass cleaner applied to a cloth, not directly to the surface, to avoid streaks and damage to surrounding materials.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your Fireplace TV Stand, refer to the following troubleshooting tips:

- **Fireplace Not Turning On:**
 - Ensure the power cord is securely plugged into a functional electrical outlet.
 - Check if the circuit breaker has tripped.
 - Verify the remote control batteries are functional and correctly inserted.
- **No Heat Output:**
 - Confirm the heat function is activated on the control panel or remote.
 - Check the temperature setting; ensure it is set above the current room temperature.
 - Ensure the air vents are not obstructed.
- **Doors Not Aligning/Closing Properly:**
 - During assembly, ensure all hinges are correctly installed and tightened.
 - Minor adjustments to hinge screws can often correct door alignment issues.
- **Unstable Unit:**
 - Ensure all assembly hardware is fully tightened.
 - Verify the unit is placed on a level surface.

For issues not covered here, please contact LUXOAK customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	LUXOAK
Model Name	CFT016
Product Dimensions	75"W x 18.5"D x 31"H

Accommodates TV Size	Up to 85 inches
Weight Capacity	250 lbs
Electric Fireplace Dimensions	40"W (panoramic)
Heat Output	5120 BTUs
Heating Coverage	Up to 400 sq. ft.
Flame Colors	12 options
Brightness Levels	5 levels
Material	Engineered Wood
Finish Type	Woodgrain
Color	Wash Gray
Power Source	Corded Electric
Certifications	ETL Certified

SUITABLE FOR TV SIZE UP TO 85"

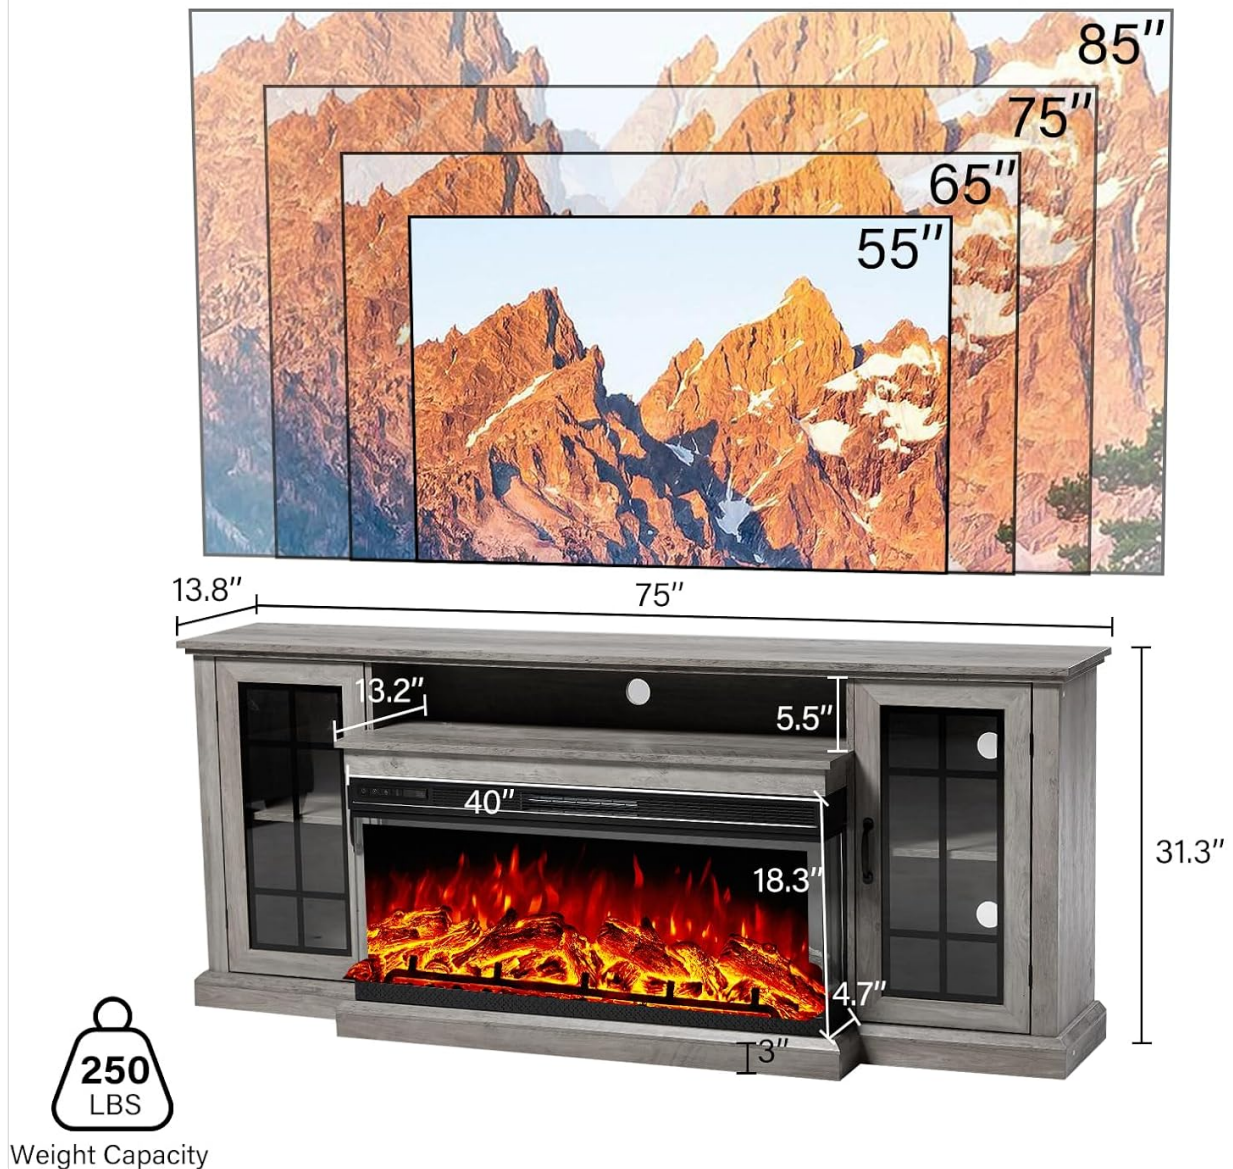


Figure 8.1: Product Dimensions and TV Compatibility

9. WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your LUXOAK Fireplace TV Stand, please contact LUXOAK customer support. While LUXOAK does not provide installation services, our support team can assist with product-related inquiries and troubleshooting.

Please refer to your purchase documentation for specific warranty details. Keep your proof of purchase for any warranty claims.

Contact Information: Refer to the contact details provided with your product packaging or on the official LUXOAK website.

