

Nostalgia GDLSAS8RDSL

Nostalgia Gameday Heated Slow Cooker and Lazy Susan Serving Set

Model: GDLSAS8RDSL

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Nostalgia Gameday Heated Slow Cooker and Lazy Susan Serving Set. Please read all instructions carefully before initial use and retain for future reference.



Figure 1: The Nostalgia Gameday Heated Slow Cooker and Lazy Susan Serving Set, fully assembled and filled with appetizers.

SETUP

- 1. Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present: the main base, the removable ceramic warming pot with lid, the Lazy Susan tray, and the six serving trays (four single-sized and two double-sized).
- 2. Initial Cleaning:** Before first use, wash the ceramic warming pot, its lid, the Lazy Susan tray, and all six serving trays in warm, soapy water. Rinse thoroughly and dry completely. Wipe the heated base with a soft, damp cloth. Do not immerse the heated base in water or any other liquid.
- 3. Assembly:** Place the Lazy Susan tray onto the main heated base. Insert the ceramic warming pot into the center of the Lazy Susan tray. Arrange the six serving trays around the warming pot.



Figure 2: Removable serving trays for easy setup and cleaning.

OPERATING INSTRUCTIONS

- 1. Prepare Food:** Prepare your desired hot food (e.g., meatballs, queso, chili) and place it into the ceramic warming pot. Place cold appetizers or dippable snacks (e.g., chips, vegetables, crackers) into the surrounding serving trays.
- 2. Power On:** Plug the appliance into a standard 120V AC electrical outlet. The unit is designed to maintain a warm temperature for the central pot.

3. **Using the Warming Pot:** The central ceramic pot is designed to keep pre-cooked foods warm. It is not intended for cooking raw food. Place the lid on the warming pot to retain heat.
4. **Using the Lazy Susan:** The entire serving set features a rotating Lazy Susan design, allowing guests to easily access all food items by gently spinning the tray.



Figure 3: The removable 20-ounce warming pot keeps food at the perfect temperature.



Figure 4: The Lazy Susan design facilitates easy serving for all guests.

Official Product Video

Video 1: An overview of the Gameday 6-Tray Lazy Susan and 20 Oz Warming Pot, demonstrating its features and use for serving appetizers.

MAINTENANCE AND CLEANING

- Disconnect Power:** Always unplug the appliance from the electrical outlet and allow it to cool completely before cleaning.
- Disassembly:** Remove the ceramic warming pot, its lid, the Lazy Susan tray, and all six serving trays from the heated base.
- Cleaning Trays and Pot:** The ceramic warming pot, its lid, and all serving trays are dishwasher safe. Alternatively, they can be hand washed in warm, soapy water, rinsed, and dried thoroughly.
- Cleaning Heated Base:** Wipe the heated base with a soft, non-abrasive, damp cloth. Do not use abrasive cleaners or scouring pads. Ensure no water gets inside the heated base.
- Storage:** Once all parts are clean and dry, reassemble the unit or store components neatly for future use. The design allows for compact storage.

TROUBLESHOOTING

- **Appliance Not Heating:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the outlet itself is functioning by plugging in another appliance.

- **Food Not Staying Warm Enough:**

- Ensure the lid is properly placed on the ceramic warming pot to retain heat.
- Pre-heat the food before placing it in the warming pot, as it is designed for warming, not cooking.

- **Lazy Susan Not Rotating Smoothly:**

- Check for any food debris or obstructions beneath the rotating tray.
- Ensure the tray is correctly seated on the base.

SPECIFICATIONS

Brand	Nostalgia
Model Number	GDLSAS8RDSL
Material	Ceramic, Stainless Steel, Plastic
Capacity (Warming Pot)	20 ounces (approx. 1.3 pounds)
Number of Pieces	10 (Heated Base, Lazy Susan Tray, Warming Pot with Lid, 6 Serving Trays)
Product Dimensions	14.88"W x 15.12"H
Item Weight	2.5 pounds
Dishwasher Safe	Yes (Trays and Pot)
Microwaveable	No



Figure 5: Product dimensions for the serving set.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product at the time of purchase or contact Nostalgia customer service directly. Contact details can typically be found on the manufacturer's website or on the product packaging.