

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [InnoVibe](#) /

› [InnoVibe Toilet Disco Speaker Light - Model INTL1509SP Instruction Manual](#)

## InnoVibe INTL1509SP

# InnoVibe Toilet Disco Speaker Light

Model: INTL1509SP - Instruction Manual

## INTRODUCTION

The InnoVibe Toilet Disco Speaker Light is a motion-activated LED light and Bluetooth speaker designed to enhance your bathroom experience. This device features multiple light modes, a wireless speaker for audio streaming, and a flexible design for easy installation. This manual provides detailed instructions for proper setup, operation, and maintenance of your device.

## SAFETY INFORMATION

- Do not immerse the device in water. It is water-resistant, not waterproof.
- Keep out of reach of children.
- Use only the provided or a certified USB charging cable.
- Avoid extreme temperatures.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if needed.

## PACKAGE CONTENTS

Please check the package for the following items:

- InnoVibe Toilet Disco Speaker Light (Model INTL1509SP)
- USB Charging Cable
- Instruction Manual

## PRODUCT OVERVIEW

Familiarize yourself with the components of your InnoVibe Toilet Disco Speaker Light:

# PARTY POTTY

## DISCO SPEAKER LIGHT

Stream your favorite tunes while getting ready, or during a party when you connect your device via Bluetooth®. The fun doesn't stop there though, enjoy 4 vibrant colors (blue, red, green, & purple) or switch to the disco mode to enjoy all 4 colors at once. Party Potty Disco Speaker Light is activated when both darkness & motion are detected, then turns off automatically, shortly, after use.



Image: Diagram of the InnoVibe Toilet Disco Speaker Light components.

- **Motion Sensor:** Detects movement to activate the light.
- **Flexible Clip:** Allows for secure attachment to the toilet bowl rim.
- **Wireless Speaker:** For Bluetooth audio playback.
- **Disco Light:** Projects various colors and patterns.
- **USB Charging Port:** For recharging the internal battery.

## SETUP

### 1. Charging the Device

Before first use, fully charge the device using the provided USB cable. Connect the USB cable to the device's charging port and a standard USB power adapter (not included). The charging indicator light will show the charging status.

### 2. Installation

The device features an adjustable, flexible arm designed to fit around any toilet bowl rim. Bend the arm to securely attach the disco light unit to the rim of your toilet bowl. Ensure the motion sensor is facing outwards for optimal detection.



Image: Close-up of the InnoVibe Toilet Disco Speaker Light.

### 3. Bluetooth Pairing

To use the wireless speaker function:

1. Turn on the InnoVibe Toilet Disco Speaker Light.
2. Enable Bluetooth on your smartphone or other audio device.
3. Search for available Bluetooth devices and select "InnoVibe Speaker" (or similar name) to pair.
4. Once paired, you can stream audio from your device to the speaker.

## OPERATING INSTRUCTIONS

## Motion-Activated Light

The LED Toilet Light is equipped with a high-quality light sensor and motion sensor. It will automatically turn on when it detects movement in a dark environment and will remain on for approximately 2 minutes after motion ceases.

## Light Modes

The device offers various light modes to suit your preference:

- **Individual Colors:** Enjoy vibrant single colors including blue, red, purple, and green.
- **Disco Mode:** Switches between all four colors for a dynamic light show.

Refer to the device's controls (buttons or switches) to cycle through the available light modes.



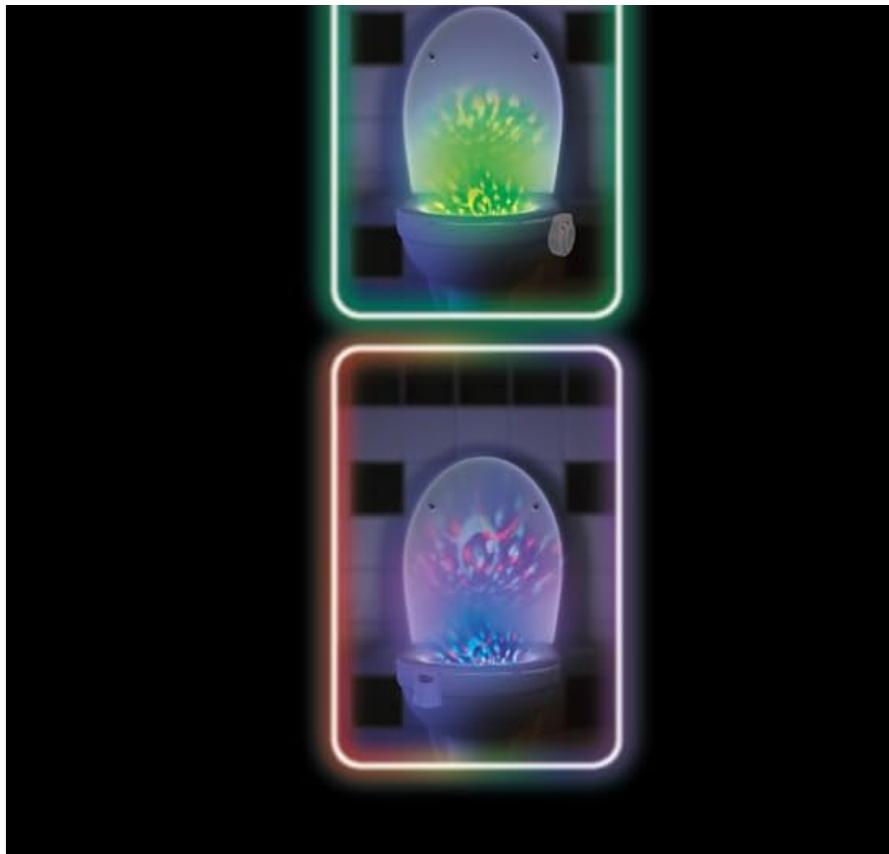


Image: Various light modes displayed by the InnoVibe Toilet Disco Speaker Light.

## Wireless Speaker

After successful Bluetooth pairing, you can play music or other audio through the integrated speaker. Control playback and volume directly from your connected device.

## MAINTENANCE

---

### Cleaning

The simple design of the InnoVibe Toilet Disco Speaker Light makes it easy to clean. Use a damp cloth to wipe down the exterior. Do not use abrasive cleaners or submerge the device in water.

### Battery Care

Recharge the device when the battery is low to ensure continuous operation. Avoid completely draining the battery frequently to prolong its lifespan.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Light not turning on	Low battery; insufficient darkness; motion sensor obstructed or faulty.	Charge the device. Ensure the environment is dark enough for activation. Clear any obstructions from the motion sensor.
Light stays on constantly	Motion sensor malfunction or continuous motion detected.	Ensure no continuous motion is present. If the issue persists, the sensor may be faulty. Try resetting the device by turning it off and on.

Problem	Possible Cause	Solution
Bluetooth not connecting	Device not in pairing mode; out of range; already connected to another device.	Ensure the device is powered on and in pairing mode. Move your audio device closer. Disconnect from other Bluetooth devices.
Poor sound quality	Low battery; device too far from audio source; interference.	Charge the device. Move the audio source closer. Reduce potential interference from other electronic devices.

## SPECIFICATIONS

---

Feature	Detail
Model Number	INTL1509SP
Power Source	USB Rechargeable
Light Source Type	LED
Brightness	200 lumens
Bulb Features	Motion sensing
Product Dimensions	3.4" L x 3" W x 3.5" H
Item Weight	2.4 ounces
Material	Plastic
Color	Multicolored
UPC	810106634913

## WARRANTY AND SUPPORT

---

InnoVibe products are designed for quality and reliability. For warranty information, technical support, or any questions regarding your Toilet Disco Speaker Light, please refer to the contact information provided on the product packaging or visit the official InnoVibe website. Please retain your proof of purchase for warranty claims.