

BRIKSMAX 10325

BRIKSMAX LED Lighting Kit for LEGO 10325 Alpine Lodge - Standard Lighting Instruction Manual

Model: 10325 Standard Lighting

1. INTRODUCTION

This instruction manual provides detailed guidance for installing and operating your BRIKSMAX LED Lighting Kit for the LEGO 10325 Alpine Lodge. This kit is designed to enhance the visual appeal of your LEGO model by illuminating its various features. Please read these instructions carefully before beginning installation.

Note: The LEGO 10325 Alpine Lodge building set is not included with this lighting kit.

2. SAFETY INFORMATION

- Keep small parts away from children to prevent choking hazards.
- Handle LED lights and wires with care to avoid damage.
- Ensure power is disconnected before making or changing any connections.
- Do not expose the lighting kit to water or extreme temperatures.

3. PACKAGE CONTENTS

Before starting, please verify that all components listed below are present in your package:

- LED Light Strips and Individual LEDs
- Connection Cables
- USB Power Cables
- Expansion Boards
- Battery Box (batteries not included)
- Instruction Manual

NO
LEGO

PACKAGE LIST



57*LED LIGHTS



18*CABLES



3*USB CABLES



11*EXPANSION BOARDS



2*BATTERY BOX

Image: Contents of the BRIKSMAX LED lighting kit, showing various lights, cables, and power components.

4. SETUP AND INSTALLATION

Follow the step-by-step instructions provided in the included printed manual for precise installation. The general process involves integrating the LED components into your pre-assembled LEGO 10325 Alpine Lodge.

1. Carefully disassemble necessary sections of your LEGO model as indicated in the detailed instructions.
2. Position the LED lights and light strips in the designated areas. Ensure wires are neatly tucked away to maintain the model's aesthetic.
3. Connect the LED components to the expansion boards using the provided cables. The reversible plugs allow for easier insertion in any direction.
4. Connect the expansion boards to the power source (battery box or USB cable).
5. Reassemble the LEGO model sections, ensuring no wires are pinched or damaged.

REVERSIBLE PLUGS EASIER INSERTION



All-direction



Quick



stable

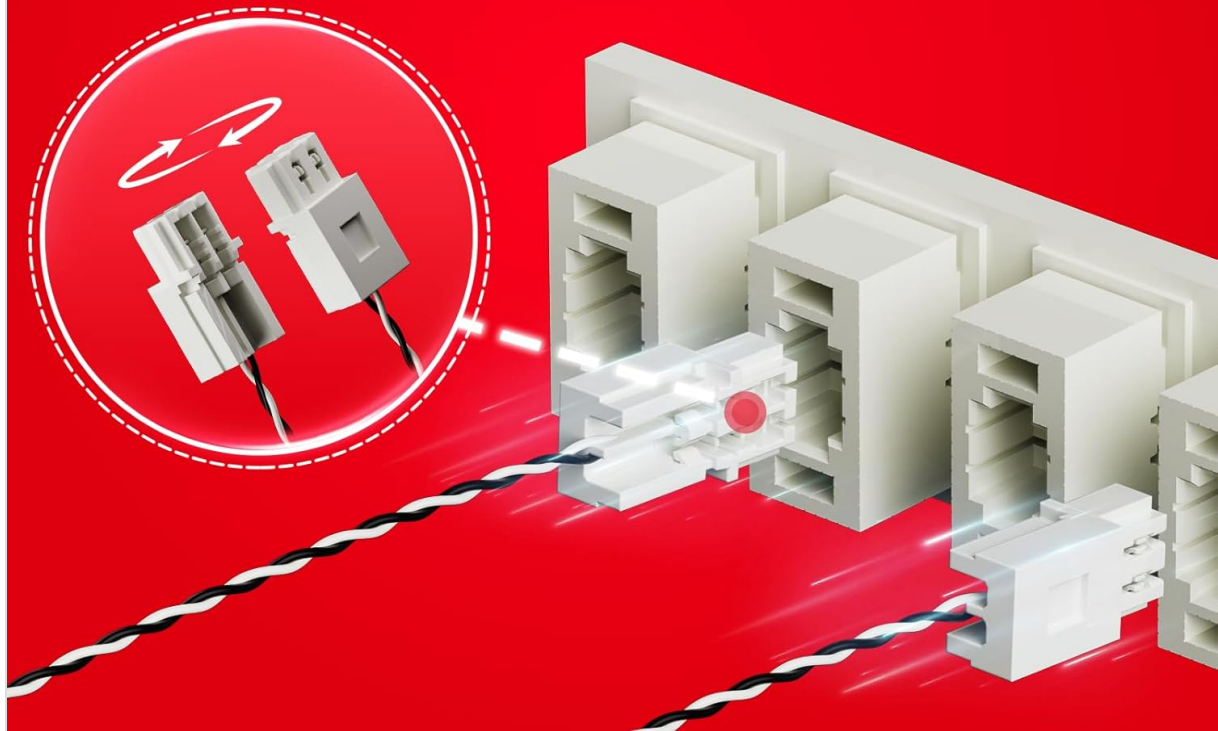


Image: A close-up view of the BRIKSMAX reversible plugs, illustrating their design for easy and stable connection to expansion boards.

Installation Video Guide

Your browser does not support the video tag.

Video: An official BRIKSMAX video demonstrating the installation process and showcasing the illuminated LEGO 10325 Alpine Lodge.

5. OPERATING INSTRUCTIONS

Once installed, connect the power source. If using the battery box, ensure fresh batteries are inserted (3x AA batteries, not included). If using a USB cable, connect it to a compatible USB power adapter (5V/1A recommended, not included). The lights will illuminate, bringing your LEGO Alpine Lodge to life.



Image: The LEGO 10325 Alpine Lodge model fully illuminated by the BRIKSMAX LED lighting kit, displaying various colors and warm white lights.



Image: A detailed view of the BRIKSMAX LED lighting installed on the LEGO 10325 Alpine Lodge, highlighting the colorful lighting and illuminated interior.

ONE KIT, VARIOUS POSSIBILITIES



Great Addition



Family Activity



Home Decor



Image: An interior view of the LEGO 10325 Alpine Lodge, showcasing the warm and inviting illumination provided by the BRIKSMAX lighting kit.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe dust from the LED components and wires. Avoid using liquids or abrasive cleaners.
- **Battery Replacement:** If using the battery box, replace all batteries simultaneously when lights dim or stop working. Ensure correct polarity.
- **Wire Management:** Periodically check that all wires are securely connected and not exposed or damaged. Re-tuck any loose wires.

7. TROUBLESHOOTING

If you encounter issues with your BRIKSMAX LED Lighting Kit, please refer to the following common problems and solutions:

- **Lights not turning on:**
 - Check that the power source (battery box or USB) is correctly connected and functional.
 - Ensure batteries in the battery box are fresh and inserted with correct polarity.

- Verify all cables are securely plugged into the LEDs and expansion boards.
- **Flickering lights:**
 - This may indicate a loose connection. Re-check all cable connections.
 - If using batteries, they may be low. Replace them with new ones.
- **Individual lights not working:**
 - Inspect the specific LED and its connection for any damage or dislodgement.
 - Ensure the wire leading to the non-functional LED is not pinched or cut.

If problems persist after following these steps, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	6.69 x 4.72 x 2.17 inches
Item Weight	8.3 ounces
Item Model Number	10325
Manufacturer Recommended Age	8 years and up
Power Source	Battery Box (3x AA, not included) or USB (5V/1A, adapter not included)

9. WARRANTY AND SUPPORT

BRIKSMAX is committed to providing quality products and excellent customer service. If you encounter any difficulties with your product, please contact us. We offer a 10-year coverage period for our products.

Support Resources:



 



- **PDF Manual:** A digital version of this instruction manual is available.
- **Printed Guide:** A physical copy of the guide is included with your kit.
- **YouTube Tutorials:** Official video tutorials are available for visual guidance on installation.



Image: An image depicting customer support, highlighting the availability of PDF manuals, printed guides, and YouTube tutorials for assistance.

For further assistance, please reach out to BRIKSMAX customer service via the contact information provided on our official website or through your purchase platform.

Related Documents - 10325

	<p>BRIKSMAX Alpine Lodge Building Set (BX617) - Lighting Kit Instructions</p> <p>Detailed assembly instructions and guide for the BRIKSMAX Alpine Lodge building set (BX617) with lighting kit. Learn how to build and illuminate your model.</p>
	<p>BRIKSMAX Holiday Main Street 10308 LED Light Kit Installation Guide</p> <p>Detailed step-by-step instructions for installing the BRIKSMAX LED lighting kit for the LEGO Holiday Main Street 10308 building set. Enhance your holiday display with illuminated details.</p>
	<p>BRIKSMAX LED Lighting Kit for Icons Loop Coaster 10303 - Installation Guide</p> <p>Detailed instructions for installing the BRIKSMAX LED lighting kit on the LEGO Icons Loop Coaster 10303 building set. Enhance your model with custom lighting effects and create a stunning display.</p>
	<p>BRIKSMAX THE BATMAN – BATCYCLE 42155 Instruction Manual</p> <p>Official instruction manual for the BRIKSMAX THE BATMAN – BATCYCLE 42155 building set. Learn how to assemble this detailed model with step-by-step guidance, including lighting integration.</p>
	<p>BRIKSMAX LED Light Kit Installation Guide for The Downtown Diner 10260</p> <p>Step-by-step instructions for installing the BRIKSMAX LED lighting kit for the LEGO Creator Expert The Downtown Diner 10260 model. Enhance your building set with custom lighting.</p>
	<p>BRIKSMAX BX454 Lighting Kit Instructions for Hogsmeade Village Visit 76388</p> <p>Detailed instructions for installing the BRIKSMAX BX454 LED lighting kit for the LEGO Hogsmeade Village Visit 76388 set. Enhance your display with custom lighting.</p>