

- Manuals.plus /
- > LARKSOUND /
 - > LARKSOUND SA Soundbar Remote Control User Manual for L200M, L210BWM, L200N, L210BW

LARKSOUND SA Soundbar Remote

LARKSOUND SA Soundbar Remote Control User Manual

For LARKSOUND Soundbar Models: L200M, L210BWM, L200N, L210BW

1. INTRODUCTION

This manual provides essential instructions for the proper use and maintenance of your LARKSOUND SA Soundbar Remote Control. This remote is specifically designed as a replacement for LARKSOUND Soundbar models L200M, L210BWM, L200N, and L210BW. Please read this manual thoroughly before first use to ensure optimal performance and longevity of your device.



Image 1.1: Example of a LARKSOUND Soundbar setup, which this remote controls.

2. PRODUCT OVERVIEW

The LARKSOUND SA Soundbar Remote Control is an infrared (IR) remote designed for seamless control of your compatible LARKSOUND soundbar. It features a compact design and intuitive button layout for easy operation.

2.1 Remote Control Layout



Image 2.1: Front and angled view of the remote control, showing all primary buttons.



Image 2.2: Side profile of the remote control.



Image 2.3: Back view of the remote control, showing the battery compartment area.

2.2 Package Contents

- 1 x LARKSOUND SA Soundbar Remote Control
- *Note: AAA batteries are not included and must be purchased separately.*

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

3.2 Initial Use

No programming is required for this replacement remote. Once batteries are installed, the remote is ready for use with compatible LARKSOUND soundbars. Ensure your soundbar is powered on.

Important: Always point the remote control directly at the IR sensor on your LARKSOUND soundbar for proper function. Obstructions between the remote and the soundbar's sensor will prevent the remote from working.

4. OPERATING INSTRUCTIONS

The remote control provides access to various functions of your LARKSOUND soundbar. Below is a general guide to common button functions:

- **Power Button (RED):** Turns the soundbar on or off.
- **Mute Button:** Mutes or unmutes the sound.
- **Volume Up/Down (+/-):** Adjusts the soundbar's volume level.
- **Input/Source Button:** Cycles through available input sources (e.g., Bluetooth, Optical, AUX, HDMI ARC).
- **Play/Pause Button:** Controls media playback (e.g., for Bluetooth or USB sources).
- **Previous/Next Track Buttons:** Skips to the previous or next track (e.g., for Bluetooth or USB sources).
- **EQ/Sound Mode Buttons:** Selects different equalizer presets or sound modes (e.g., Movie, Music, News, Night).



Image 4.1: Illustrates using the remote control to select a sound mode, such as 'Night Mode'.

5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

Problem	Possible Cause	Solution
Remote is not responding.	- Dead or incorrectly inserted batteries. - Obstruction between remote and soundbar. - Remote is out of range.	- Replace batteries with new AAA batteries, ensuring correct polarity. - Remove any objects blocking the line of sight to the soundbar's IR sensor. - Move closer to the soundbar (within 33 feet/10 meters).
Remote only works intermittently.	- Weak batteries. - Interference from other devices.	- Replace batteries. - Ensure no other IR devices are causing interference.
Remote does not control my soundbar.	- Incompatible soundbar model. - Soundbar is not powered on.	- Verify your soundbar model (L200M, L210BWM, L200N, L210BW) by checking the label on the back of the soundbar. - Ensure the soundbar is plugged in and powered on.

6. SPECIFICATIONS

Feature	Detail
Brand	LARKSOUND
Model Name	SA Soundbar Remote
Compatible Soundbars	LARKSOUND L200M, L210BWM, L200N, L210BW
Connectivity Technology	Infrared (IR sensor)
Color	Black
Max Number of Supported Devices	1
Battery Type	2 x AAA batteries (not included)
Maximum Range	33 Feet (10 meters)
Item Weight	0.07 Pounds (approx. 32 grams)

7. MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- Keep the remote clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, direct sunlight, or moisture.
- Do not drop or subject the remote to strong impacts.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

8. WARRANTY AND SUPPORT

LARKSOUND provides a **1-Year Warranty** for this product, covering manufacturing defects from the date of purchase. For warranty claims or technical assistance, please contact our customer support team.

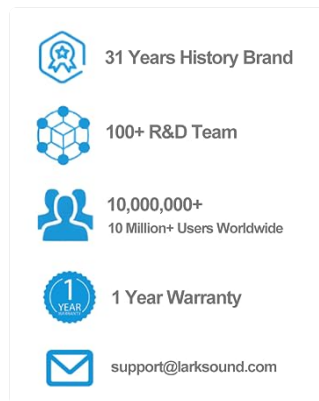


Image 8.1: LARKSOUND customer support details.

Customer Support Email: support@larksound.com

For more information about LARKSOUND products and services, please visit our official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CJLWC975>

More documents and user manuals: **<https://manuals.plus/>**