

Bennett Read KMW112

Bennett Read Digital Microwave Instruction Manual

Model: KMW112

INTRODUCTION

The Bennett Read 20L Digital Microwave is a stylish and versatile kitchen solution designed for quick and satisfying meals. Its beautiful chrome finishes and sleek mirror glass door add a touch of modern elegance to any kitchen setting. This manual provides essential information for the safe and efficient operation of your new microwave oven.

This microwave offers a range of convenient features, including an integrated 60-minute cooking timer for precise cooking. It also boasts 8 easy-to-use preset functions, allowing you to effortlessly cook pasta, pizza, popcorn, heat beverages and more with a simple touch of a button, eliminating guesswork. With 10 programmable power levels tailored for specific foods, you can prepare a variety of dishes with precision. This microwave is ideal for steaming, baking and heating meals for the entire family.



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded. Connect only to properly grounded outlets.
- Do not operate the microwave oven empty.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not attempt to service or repair the appliance yourself. Refer all servicing to qualified service personnel.
- Do not allow children to use the microwave oven without supervision.
- Always use microwave-safe cookware.
- Clean the microwave regularly and remove any food deposits.
- Do not immerse the cord, plug, or the appliance in water or other liquid.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

PRODUCT FEATURES

- Stylish and versatile kitchen solution
- Modern design with chrome finishes and mirror glass door
- Integrated 60-minute cooking timer for precise cooking
- 8 Easy-to-use preset functions for convenience
- 10 Programmable power levels for precision

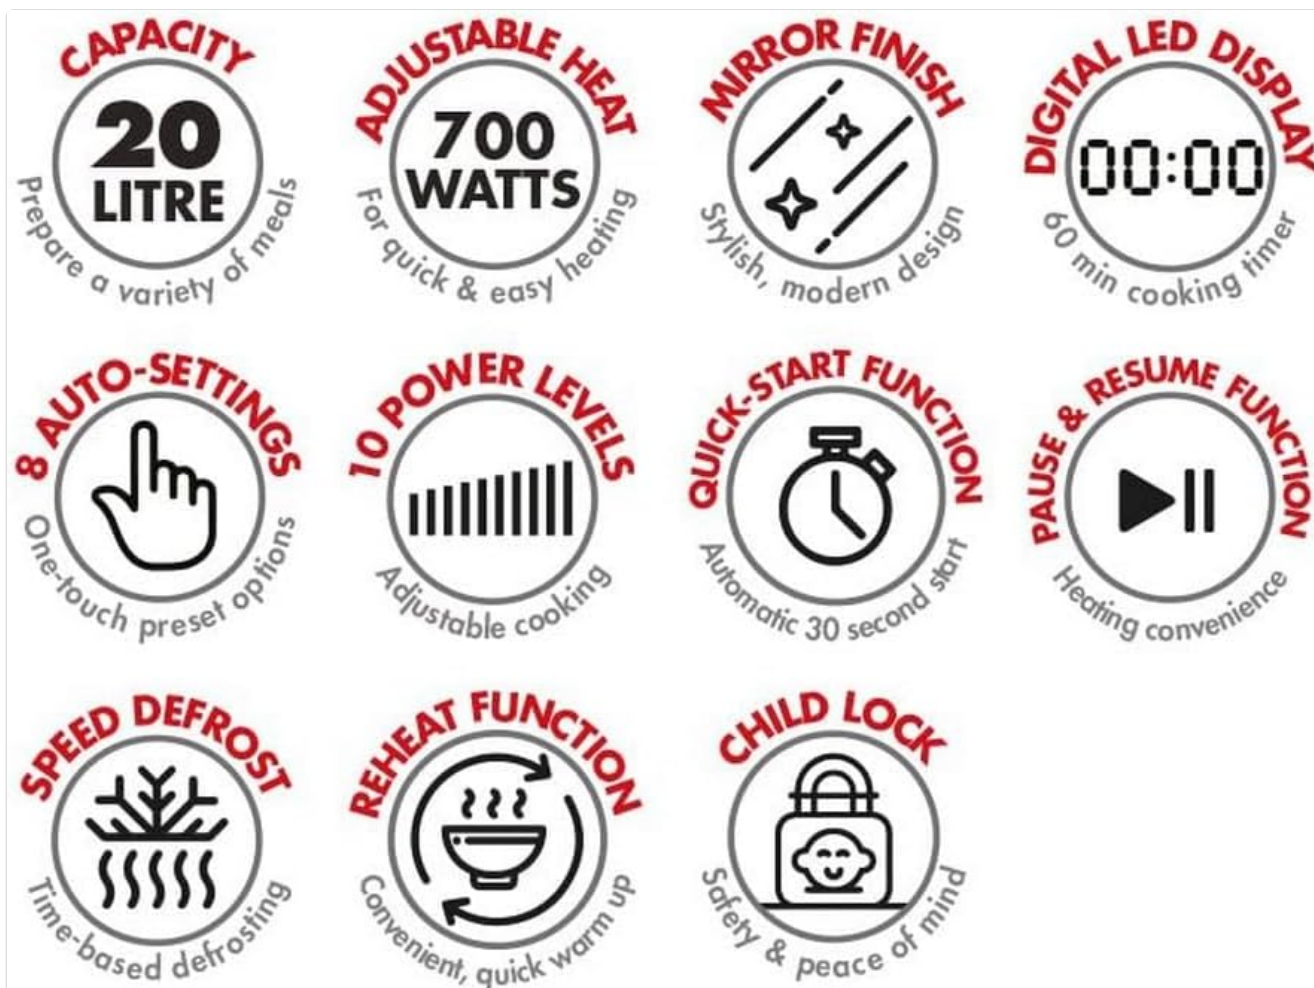


Image: Visual representation of key features including 20 Litre Capacity, 700 Watts Adjustable Heat, Mirror Finish, Digital LED Display, 8 Auto-Settings, 10 Power Levels, Quick-Start Function, Pause & Resume Function, Speed Defrost, Reheat Function, and Child Lock.

Detailed Features:

- **20 Litre Capacity:** Ideal for preparing a variety of meals for the entire family.
- **700 Watts Adjustable Heat:** Provides quick and easy heating for various dishes.
- **Mirror Finish:** A sleek, modern design element that enhances kitchen aesthetics.
- **Digital LED Display:** Clear display for time and settings, includes a 60-minute cooking timer.
- **8 Auto-Settings:** One-touch preset options for common foods like Pasta, Pizza, Popcorn, Beverage, Meat, Reheat, Defrost, and Fish.
- **10 Power Levels:** Offers adjustable cooking intensity for precise results.
- **Quick-Start Function:** Automatic 30-second start for rapid heating.
- **Pause & Resume Function:** Convenient for checking food or stirring during cooking.
- **Speed Defrost:** Time-based defrosting for efficient thawing.
- **Reheat Function:** Convenient and quick warm-up for pre-cooked meals.
- **Child Lock:** Enhances safety and provides peace of mind by preventing unintended operation.

SETUP

Unpacking

1. Carefully remove the microwave oven and all packing materials from the carton.

2. Check the oven for any damage, such as dents or a broken door. Do not operate the oven if it is damaged.
3. Remove any protective film from the surface of the cabinet and door.
4. Place the turntable ring and glass tray inside the oven cavity. Ensure they are correctly seated.

Placement

- Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in it.
- Allow at least 10 cm (4 inches) of space at the back and sides of the oven, and 20 cm (8 inches) above the oven for proper ventilation. Do not block any ventilation openings.
- Keep the microwave away from heat sources and water.

Electrical Connection

- Ensure the voltage and frequency of your power outlet match the specifications on the microwave's rating label.
- Plug the power cord into a properly grounded electrical outlet. Do not use extension cords or adapters.

OPERATING INSTRUCTIONS



Image: Front view of the microwave, highlighting the digital display and control panel with buttons for presets, power levels, and functions.

Control Panel Overview

The control panel features a digital display, numeric keypad (0-9), and dedicated buttons for various functions:

- **Digital Display:** Shows time, cooking settings, and indicators.
- **Preset Buttons:** Pasta, Pizza, Popcorn, Beverage, Meat, Reheat, Defrost, Fish.
- **Microwave Button:** For manual microwave cooking.
- **Defrost Button:** Activates defrost function.

- **Timer Button:** Sets the kitchen timer.
- **Numeric Keypad (0-9):** For entering time and other values.
- **STOP Button:** Stops cooking, clears settings, or cancels a program.
- **START Button:** Starts cooking or confirms settings.

Setting the Clock

1. Plug in the microwave. The display will show "0:00".
2. Press the "Timer" button once.
3. Use the numeric keypad to enter the current time (e.g., 12:30).
4. Press the "Timer" button again to confirm.

Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass tray.
2. Close the door.
3. Press the "Microwave" button repeatedly to select the desired power level (P100, P80, P60, P40, P20, P0). P100 is full power.
4. Use the numeric keypad to enter the desired cooking time (up to 60 minutes).
5. Press the "START" button to begin cooking.

Using Preset Functions (Auto-Settings)

The microwave has 8 convenient preset functions:

1. Place the food in the microwave.
2. Press the corresponding preset button (e.g., "Popcorn", "Pizza", "Beverage").
3. The display will show the default weight/quantity. Press the button again to cycle through options if available.
4. Press "START" to begin cooking.

Quick Start Function

For quick heating at full power:

- Press the "START" button. Each press will add 30 seconds of cooking time at full power.

Defrosting (Speed Defrost)

1. Place the frozen food in the microwave.
2. Press the "Defrost" button.
3. Use the numeric keypad to enter the defrosting time.
4. Press "START" to begin defrosting.

Child Lock Function

To activate the child lock:

- Press and hold the "STOP" button for 3 seconds. A lock indicator will appear on the display.

To deactivate the child lock:

- Press and hold the "STOP" button for 3 seconds again. The lock indicator will disappear.

MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven is essential for optimal performance and longevity.

- **Before Cleaning:** Always unplug the microwave oven from the power outlet before cleaning.
- **Oven Interior:** Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent. Avoid abrasive cleaners or scouring pads.
- **Glass Tray and Roller Ring:** The glass tray and roller ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Oven Exterior:** Clean the exterior surface with a soft, damp cloth. Do not allow water to enter the ventilation openings.
- **Door and Door Seal:** Wipe the door, door seal, and adjacent parts frequently with a damp cloth to remove any spills or splatters.
- **Odour Removal:** To remove odors from the oven, combine a cup of water with the juice and peel of one lemon in a microwave-safe bowl. Microwave on high for 5 minutes. Wipe the interior with a soft cloth.

TROUBLESHOOTING

If you encounter any issues with your microwave oven, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Microwave does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Child lock activated.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker; Deactivate child lock (hold STOP for 3 seconds).
Food is not heating.	Cooking time too short; Power level too low; Food not suitable for microwave.	Increase cooking time; Select a higher power level; Use microwave-safe dishes.
Light not working.	Bulb is faulty.	Contact qualified service personnel for replacement.
Turntable is noisy or not rotating.	Turntable or roller ring not positioned correctly; Debris under roller ring.	Re-position turntable and roller ring; Clean under the roller ring.
Steam coming from door or air vents.	Normal during cooking.	This is normal and indicates proper operation.

SPECIFICATIONS

Feature	Specification
Brand	Bennett Read
Model Number	KMW112

Feature	Specification
Colour	Silver
Product Dimensions	48.8 x 28.5 x 36 cm
Item Weight	11.7 kg
Material	Glass, Stainless Steel
Capacity	20 Liters
Power Output	700 Watts (approx.)
First Available	22 September 2023

WARRANTY AND SUPPORT

The Bennett Read Digital Microwave is designed for durability and performance. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Bennett Read website.

Should you require technical assistance, spare parts, or have any questions not covered in this manual, please contact Bennett Read customer support. Contact details can typically be found on the product packaging, warranty card, or the official brand website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why won't my Bennett Read 20L Digital Microwave start, and why do red lights appear on the display for a few moments when it is plugged in?

Based on the Bennett Read KMW112 instruction manual, if your microwave does not start when plugged in, please check the following common causes and solutions: Child Lock Activated: This is a common reason for the...

[Read full answer](#)