

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [findtime](#) /

› [findtime Military Tactical Sports Watch Model 7237WB User Manual](#)

findtime 7237WB

findtime Military Tactical Sports Watch Model 7237WB User Manual

Comprehensive instructions for setup, operation, and maintenance.

INTRODUCTION

This manual provides detailed instructions for the findtime Military Tactical Sports Watch, Model 7237WB. Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch. This watch features a robust design, dual digital and analog time display, LED backlight, alarm, stopwatch, and 50-meter water resistance.



Image: The findtime Military Tactical Sports Watch, Model 7237WB, featuring a white and blue color scheme, showcasing its robust design and digital display.

SETUP AND INITIAL CONFIGURATION

Before using your watch, it is recommended to familiarize yourself with its buttons and basic functions.

Button Functions Overview

FUNCTION OPERATION



Image: Diagram illustrating the various buttons and their primary functions on the findtime sports watch. Labels include "LIGHT" (glow light button), "MODE" (mode switching), "START" (timing start/pause), "RESET" (setting keys), and "TIME DISPLAY" / "DATE DISPLAY" / "WEEK DISPLAY" for the screen areas.

- **LIGHT Button:** Activates the LED backlight. Press once for a brief illumination, press and hold for extended light.
- **MODE Button:** Cycles through different modes: Normal Time, Alarm, Stopwatch, and Time Setting.
- **START Button:** Used to start/pause functions in Stopwatch mode and to increase values during time/date setting.
- **RESET Button:** Used to reset functions in Stopwatch mode and to confirm settings or exit setup mode.

Setting Time and Date

1. In Normal Time mode, press the **MODE** button repeatedly until the time setting digits begin to flash.
2. Press the **RESET** button to select the digit you wish to adjust (seconds, minutes, hours, date, month, day of week).
3. Use the **START** button to increase the selected digit's value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

OPERATING INSTRUCTIONS

LED Backlight

To illuminate the display in low-light conditions, press the **LIGHT** button on the left side of the watch. The LED backlight ensures clear visibility of the time and other information.



Image: The watch display illuminated by its LED backlight, demonstrating clear readability in dark environments.

Alarm Function

The watch includes an alarm function and an hourly chime.

1. Press the **MODE** button until you reach the Alarm mode (indicated by "ALM" on the display).
2. Press the **RESET** button to select the hour or minute digits.
3. Use the **START** button to adjust the alarm time.
4. Press **MODE** to confirm and exit.

5. To toggle the alarm on/off, press the **START** button in Alarm mode. An alarm icon will appear/disappear.
6. To toggle the hourly chime on/off, press the **RESET** button in Alarm mode. A chime icon will appear/disappear.



Image: The watch display showing the alarm and hourly chime indicators, highlighting these timekeeping features.

Stopwatch Function

1. Press the **MODE** button until you reach the Stopwatch mode (indicated by "TMR" or "CHR" on the display).
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.

MAINTENANCE AND CARE

Water Resistance

This watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for daily use, such as hand washing, rain, and brief cold showers. **Important:** It is not suitable for diving, snorkeling, or hot baths/saunas. Do not press any buttons while the watch is submerged in water or wet, as this can compromise the water seal.



Image: An illustration demonstrating the 50-meter water resistance of the watch, showing its suitability for activities like hand washing, rainy days, and light water games.

Cleaning

Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, as they may damage the watch's materials.

Battery Replacement

The watch uses one Lithium-polymer battery. When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time needs to be set or reset.	Refer to the "Setting Time and Date" section.
Buttons are unresponsive.	Watch may be in a locked mode or battery is very low.	Try pressing the MODE button to cycle modes. If unresponsive, replace battery.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, exposure to hot water).	Immediately take the watch to a professional for inspection and repair. Do not attempt to dry it yourself.

SPECIFICATIONS

Model Number: 7237WB

Brand: findtime

Movement: Imported Japanese Digital Quartz Movement

Display: Dual Digital and Analog

Case Material: High-quality Resin

Strap Material: Rubber with Stainless Steel Buckle

Mirror Material: Thick Acrylic

Water Resistance: 50 Meters (5 ATM)

Functions: Time (12/24H), Date, Day of Week, Alarm, Hourly Chime, Stopwatch, LED Backlight

Battery Type: 1 Lithium-polymer (included)

Package Dimensions: 9.1 x 9.1 x 9.1 cm

Weight: 165 grams

FUNCTIONAL SPORTS WATCH



Image: A visual summary of the watch's key functions, including LED light, alarm, date, shock resistance, 50M water resistance, week display, 24/12 hour format, and stopwatch.

Shockproof structure of the case,
fearless of falling from high places

SHOCKPROOF FOR SPORTS



Image: The watch demonstrating its shockproof structure, designed to withstand impacts and drops, making it suitable for sports and outdoor activities.

SUPPORT AND CONTACT INFORMATION

For any questions, concerns, or technical assistance regarding your findtime watch, please contact customer support through your purchase platform.

If purchased on Amazon, follow these steps:

1. Click on **"Orders"** in the upper right corner of the Amazon page.
2. Locate your order for the findtime watch.
3. Click on **"Sold by Fusong EU"** (or the relevant seller name) under the product name on the order page.
4. Click the yellow **"Ask a question"** button.
5. Select **"I need help with an order I placed"**.
6. Click the yellow **"Write a message"** button and describe your inquiry.

Customer support aims to respond within 24 hours.

