

AGPTEK G02PL

AGPTEK G02PL 64GB Clip MP3 Player User Manual

Model: G02PL

1. INTRODUCTION

Thank you for purchasing the AGPTEK G02PL 64GB Clip MP3 Player. This portable music player is designed for convenience and durability, especially for sports and outdoor activities. It features a clip-on design, FM radio, and a sweatproof silicone case. This manual provides detailed instructions on how to set up, operate, and maintain your device.

2. PRODUCT OVERVIEW

2.1 Package Contents

- AGPTEK G02PL 64GB Clip MP3 Player
- Sweatproof Silicone Case
- USB Charging Cable
- User Manual
- *Note: Earphones are not included in the package.*



Image: Contents of the AGPTEK G02PL package, including the MP3 player, silicone case, USB cable, and user manual.

2.2 Device Features

- **Clip-on Design:** Easily attachable for sports and outdoor activities.
- **Sweatproof Silicone Case:** Provides protection during workouts.
- **64GB Internal Memory:** Ample storage for your music library.
- **FM Radio:** Listen to your favorite radio stations (requires wired earphones).
- **Shuffle Mode:** Quick switch for randomized playback.
- **Compact and Lightweight:** Weighs only 0.49 oz (14g), dimensions: 1.97 x 1.43 x 0.61 inches.



1.97 x 1.43 x 0.61 inch



0.49oz

Image: Illustrates the compact size (1.97 x 1.43 x 0.61 inches) and light weight (0.49 oz) of the AGPTEK G02PL MP3 player.

Sweatproof Case & Portable Clip

Cheer up your exercise with music



Image: Shows the AGPTEK G02PL MP3 player inside its sweatproof silicone case, highlighting the portable clip feature.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the MP3 player. Use the included USB cable to connect the device to a computer's USB port or a compatible USB wall charger (not included).

- A full charge takes approximately 2.5 hours.
- The built-in 160mAh rechargeable battery provides up to 10 hours of audio playback at medium volume. Battery life may be shorter when using FM radio.

FM Radio

FM Bands: 87.0MHz–108.0MHz, Quick Search



News



Sports



Music



Weather



Image: Depicts the AGPTEK G02PL MP3 player connected to a USB cable for charging, illustrating the internal components.

3.2 Transferring Music Files

To transfer music to your AGPTEK G02PL MP3 player:

1. Connect the MP3 player to your computer using the provided USB cable.
2. The device will appear as a removable disk drive on your computer.
3. Drag and drop your desired music files (MP3, WMA, WAV formats supported) into the device's storage folder.
4. *Note: The player does not directly support iTunes music. Convert iTunes files to MP3 format before transferring.*
5. Safely eject the device from your computer before disconnecting the USB cable.



Image: Highlights the 64GB large memory capacity of the AGPTEK G02PL MP3 player.

4. OPERATING INSTRUCTIONS

4.1 Basic Music Playback

1. **Power On/Off:** Locate the power switch (usually a slider or long press of the play button) and slide it to turn on the device.
2. **Play/Pause:** Press the central Play/Pause button.

3. **Next/Previous Track:** Use the forward () and backward () buttons to skip tracks.
4. **Volume Adjustment:** Use the '+' and '-' buttons to increase or decrease the volume.

4.2 FM Radio Function

To use the FM radio feature:

1. **Connect Wired Earphones:** Wired earphones must be connected to the MP3 player as they act as the antenna for the FM radio.
2. **Switch to FM Mode:** Use the dedicated FM / Music switch slider to select FM mode.
3. **Tune Stations:** The device supports FM Frequency Range: 88MHz-108MHz. Use the track skip buttons to search for stations or initiate a quick search function if available.



Image: Shows the AGPTEK G02PL MP3 player connected to wired earphones, emphasizing the requirement for FM radio functionality. Icons for News, Sports, Music, and Weather are displayed.

4.3 Shuffle and Repeat Modes

The player features a dedicated slider for repeat and shuffle modes. Slide it to activate or deactivate shuffle playback for your music.

5. MAINTENANCE

- Keep the device dry. Avoid exposure to extreme temperatures.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the silicone case is properly fitted to maintain its sweatproof properties.
- Store the device in a safe place when not in use to prevent damage.

6. TROUBLESHOOTING

6.1 Device Not Turning On

- Ensure the battery is charged. Connect the device to a power source and charge for at least 30 minutes.
- Check the power switch position.

6.2 Cannot Transfer Files

- Verify the USB cable is securely connected to both the player and the computer.
- Try a different USB port on your computer.
- Ensure the music files are in a supported format (MP3, WMA, WAV).
- Restart your computer and the MP3 player.

6.3 No Sound

- Check if earphones are properly connected.
- Adjust the volume level using the '+' button.
- Ensure the music file is not corrupted. Try playing a different track.

6.4 FM Radio Not Working

- Confirm that wired earphones are plugged in, as they serve as the antenna.
- Ensure you are in an area with good FM signal reception.
- Switch to FM mode using the dedicated slider.

7. SPECIFICATIONS

Feature	Detail
Brand	AGPTEK
Model Name	AGPTEK 64GB Clip MP3 Player With FM Shuffle (G02PL)
Memory Storage Capacity	64 GB
Connectivity Technology	USB
Special Feature	FM Radio
Supported Music Formats	MP3, WMA, WAV
FM Frequency Range	88MHz-108MHz
Battery Life	Up to 10 hours (audio playback at medium volume)
Charging Time	Approx. 2.5 hours

Dimensions	1.97 x 1.43 x 0.61 inches
Weight	0.49 oz
Compatible Devices	Laptop, Personal Computer

8. WARRANTY AND SUPPORT

For product support, warranty information, or further assistance, please refer to the contact details provided on the AGPTEK official website or the documentation included with your purchase. Keep your purchase receipt for warranty claims.