

[Manuals.plus](#) /

> [Hatteker](#) /

> Hatteker Beard Trimmer Kit Professional Hair Clipper Zero Gapped T-Blade Electric Razor Shaver for Nose Ear Body Face Mustache Trimmer for Men Cordless Grooming Kit Waterproof 8 in 1 22 Pieces set User Manual

Hatteker HT-609

Hatteker Beard Trimmer Kit User Manual

Model: HT-609

1. INTRODUCTION

Thank you for choosing the Hatteker 8-in-1 Multi-Functional Grooming Kit. This professional hair clipper and beard trimmer kit is designed to provide a comprehensive and precise grooming experience for various needs, including beard, hair, nose, ear, and body trimming. Please read this manual thoroughly before first use to ensure safe and optimal performance.

2. SAFETY INFORMATION

For your safety and to prevent damage to the device, please adhere to the following guidelines:

- Use caution near face and eyes.
- Keep out of reach of children.
- Clean the device according to the instructions provided in this manual.
- Avoid ingestion or inhalation of small parts.
- Do not immerse the main unit in water unless specified for cleaning.
- Only use the provided USB charging cable.
- Do not disassemble or attempt to repair the device yourself. Contact customer support if needed.

3. PRODUCT OVERVIEW

The Hatteker Grooming Kit is an 8-in-1 multi-functional system designed for versatile grooming. It includes various attachments to cater to different hair lengths and body areas.



Figure 3.1: Complete Hatteker Grooming Kit with main unit, various trimmer heads, guide combs, and charging stand.

Included Components:

- T-Blade Trimmer (with 1mm, 3mm, 5mm, 7mm guide combs)
- Hair Clipper (with 3mm, 6mm, 9mm, 12mm, 15mm guide combs)
- Precision Trimmer
- Razor Shaver
- Beard Trimmer
- Nose Ear Trimmer
- Body Groomer
- Body Trimmer
- USB Charging Cable
- Cleaning Brush
- Charging Stand

8 IN 1 MULTI-FUNCTIONAL GROOMING KIT



Figure 3.2: Overview of the 8-in-1 multi-functional grooming kit attachments, including T-blade trimmer, hair clipper, foil shaver, body trimmer, nose trimmer, beard trimmer, and precision trimmer.

MULTIPLE GUIDE COMBS FOR HAIR CUTTING



Figure 3.3: Multiple guide combs for precise hair cutting, categorized for T-blade and hair clipper attachments.

4. SETUP AND CHARGING

Initial Charging:

Before first use, fully charge the trimmer. The device features a powerful lithium battery.

1. Connect the USB charging cable to the trimmer's charging port.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer USB port.
3. The LED display on the trimmer will indicate charging status. A full charge takes approximately 1.5 hours.
4. Once fully charged, the trimmer provides approximately 180 minutes of operating time.

Attaching/Detaching Heads and Guide Combs:

Ensure the trimmer is turned off before attaching or detaching any heads or guide combs.

- To attach a trimmer head: Align the head with the main unit and push it down until it clicks into place.
- To detach a trimmer head: Gently pull the head upwards while holding the main unit firmly.
- To attach a guide comb: Slide the desired guide comb onto the trimmer blade until it locks securely.
- To detach a guide comb: Gently push the comb upwards from the blade to release it.

DETACHABLE ATTACHMENTS



Figure 4.1: Examples of detachable attachments in use for various grooming needs.

5. OPERATING INSTRUCTIONS

General Operation:

1. Ensure the trimmer is charged and the desired attachment and guide comb are securely in place.
2. Turn on the trimmer using the power button. The LED display will show the battery level.
3. Gently glide the trimmer over the desired area, moving against the direction of hair growth for best results.
4. For precise trimming, the T-blade head can be used without a guide comb to achieve a 0.3 mm trim.

5. After use, turn off the trimmer and proceed to cleaning.

Specific Trimming Tips:

- **Beard Trimming:** Start with a longer guide comb and gradually reduce the length until the desired style is achieved.
- **Hair Clipping:** Use the hair clipper attachment with appropriate guide combs (3mm, 6mm, 9mm, 12mm, 15mm) for different hair lengths.
- **Nose/Ear Trimming:** Use the dedicated nose/ear trimmer attachment. Insert gently and trim visible hairs.
- **Body Grooming:** The body groomer and body trimmer attachments are designed for sensitive areas. Use with care.
- **Precision Trimming/Detailing:** The precision trimmer and T-blade are ideal for sharp lines, edges, and intricate designs.



Figure 5.1: Zero-gapped T-blade design for precise trimming and detailing.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your grooming kit.

Cleaning Instructions:

The trimmer features an IPX7 waterproof design, making it easy to clean.

1. After each use, turn off the trimmer and detach the guide comb and trimmer head.
2. Use the included cleaning brush to remove any loose hairs from the blade and inside the trimmer head.
3. Rinse the detached trimmer head and blades under running water for thorough cleaning. The main unit is also washable, but avoid prolonged immersion.
4. Shake off excess water and allow all attachments and the main unit to air dry naturally before reassembling or storing.
5. For optimal performance, periodically apply a small drop of clipper oil (not included) to the blades.



Figure 6.1: Cleaning the trimmer under running water.

Storage:

Store the trimmer and all its accessories in a dry place, away from direct sunlight and extreme temperatures. Use the provided charging stand to keep the main unit and frequently used attachments organized.

7. TROUBLESHOOTING

If you encounter any issues with your Hatteker Grooming Kit, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or depleted.	Charge the trimmer for at least 1.5 hours.
Blades are pulling or snagging hair.	Blades are dirty or not oiled. / Attachment not properly secured.	Clean the blades and apply clipper oil. Ensure the attachment is clicked into place.
Trimmer is making unusual noise.	Hair caught in the motor or blades. / Blades need lubrication.	Clean the trimmer thoroughly. Apply clipper oil to the blades. If problem persists, contact support.
Charging indicator not working.	Faulty charging cable or power source.	Try a different USB cable or power adapter. Ensure connections are secure.

If the problem persists after trying these solutions, please contact Hatteker customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Model Number	HT-609
Power Source	Battery Powered (Li-ion)
Charging Time	Approx. 1.5 hours
Operating Time	Approx. 180 minutes
Waterproof Rating	IPX7 (Fully washable)
Blade Material	Stainless Steel
Product Dimensions (L x W x H)	6.7 x 16.2 x 23.2 cm
Item Weight	600 Grams
Included Components	T-Blade Trimmer, Hair Clipper, Precision Trimmer, Razor, Beard Trimmer, Nose Ear Trimmer, Body Groomer, Body Trimmer, Guide Combs, USB Cable, Cleaning Brush, Charging Stand

9. WARRANTY AND SUPPORT

Hatteker products are manufactured with quality and durability in mind. For warranty information or technical support, please refer to the warranty card included with your product or contact Hatteker customer service through the retailer where you purchased the product.

Please retain your proof of purchase for any warranty claims.

© 2024 Hatteker. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CJM6MWVR>

More documents and user manuals: <https://manuals.plus/>