

[Manuals.plus](#) /

› [Bennett Read](#) /

› Bennett Read Manual Microwave User Manual

Bennett Read KMW110

Bennett Read Manual Microwave User Manual

Model: KMW110 | Brand: Bennett Read

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Bennett Read 20L Manual Microwave. Please read this manual thoroughly before using the appliance and retain it for future reference. This microwave is designed to simplify food preparation and heating tasks with its user-friendly controls and versatile functions.



Figure 1: Bennett Read 20L Manual Microwave

This image displays the front view of the Bennett Read 20L Manual Microwave. It features a sleek silver exterior, a dark mirror glass door, and two prominent control knobs on the right side for time and power settings. A chrome handle is visible on the left side of the control panel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not store this appliance outdoors. Do not use this product near water.
- Do not immerse cord or plug in water.
- Do not let cord hang over edge of table or counter.
- To reduce the risk of fire in the oven cavity:
 - Do not overcook food.
 - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.

PRODUCT OVERVIEW

Familiarize yourself with the components of your microwave oven.

1. Microwave Cavity
2. Glass Turntable
3. Turntable Ring
4. Control Panel (Time and Power Knobs)
5. Door Handle
6. Door Latch System

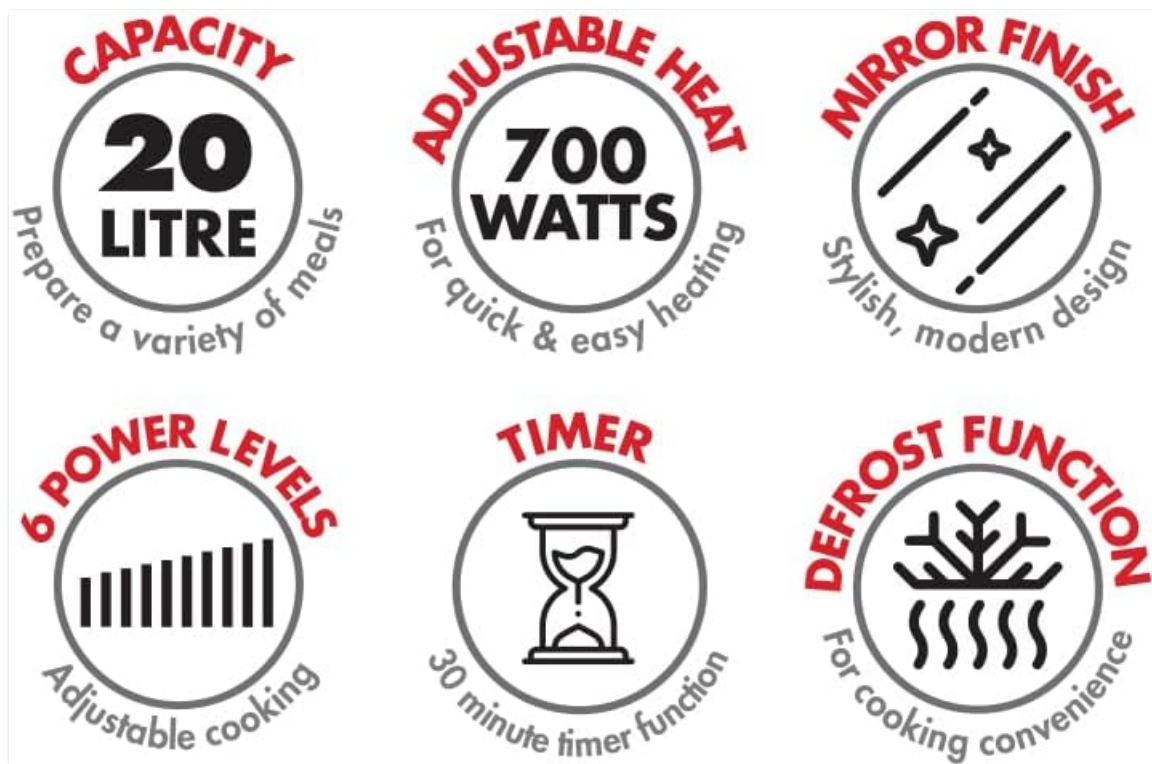


Figure 2: Key Features Overview

This image illustrates the main features of the microwave: a 20-liter capacity for various meals, 700 watts of adjustable heating power, a stylish mirror finish, 6 adjustable power levels, a 30-minute timer function, and a convenient defrost function.

SETUP

1. **Unpacking:** Carefully remove the microwave oven from its packaging. Remove all packing materials, including the turntable, turntable ring, and any protective film.
2. **Placement:** Place the microwave on a flat, stable surface that is strong enough to hold the oven and the food you place in it. Ensure there is adequate ventilation:
 - Leave a minimum of 10 cm (4 inches) of space at the back and sides.
 - Leave a minimum of 30 cm (12 inches) of space above the oven.

Do not block air vents. Do not place the oven near heat sources or in a damp environment.

3. **Electrical Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating label of the microwave. Do not use extension cords or adapters.
4. **Turntable Assembly:**
 - Place the turntable ring on the cavity floor.
 - Place the glass turntable on top of the turntable ring, ensuring it sits securely in the center hub.

OPERATING INSTRUCTIONS

Your Bennett Read Manual Microwave features simple controls for easy operation.



Figure 3: Adjusting Controls

This image shows a hand turning the lower control knob, which is used to select the power level for cooking. The upper knob, used for setting the cooking time, is also visible.

Power Levels

The microwave offers 6 power levels to suit various cooking needs. Rotate the lower "POWER" knob to select the desired power level:

- **Low:** For softening ice cream, melting butter.
- **Medium-Low (Defrost):** For defrosting foods.
- **Medium:** For simmering, baking.
- **Medium-High:** For reheating, general cooking.
- **High:** For fast cooking, boiling liquids.

Setting Cooking Time

The microwave features a 30-minute cooking timer. Rotate the upper "TIME" knob clockwise to set the desired cooking duration. The microwave will start cooking automatically once the timer is set.

- For cooking times less than 2 minutes, turn the timer knob past 2 minutes and then back to the desired time for accurate setting.

- The microwave will emit an audible signal when the cooking cycle is complete.

Defrost Function

To defrost food, select the "Defrost" power level (Medium-Low) using the POWER knob, then set the desired defrosting time using the TIME knob. Stir or turn food periodically for even defrosting.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Interior:** For spills and splatters, wipe the interior with a soft, damp cloth immediately. For stubborn stains, place a bowl of water with a few lemon slices inside and heat for 2-3 minutes on high power. The steam will loosen the stains, making them easier to wipe away.
- **Cleaning the Turntable and Ring:** The glass turntable and turntable ring can be washed in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the microwave.
- **Door Seal:** Regularly clean the door seal and adjacent parts with a soft, damp cloth to remove any food residue.
- **Odor Removal:** To remove odors, combine a cup of water with the juice of one lemon in a microwave-safe bowl. Heat on high for 5 minutes.

Caution: Always unplug the microwave oven before cleaning. Do not allow water to enter the ventilation openings.

TROUBLESHOOTING

If you encounter any issues with your microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Microwave does not start.	Power cord not securely plugged in. Door not closed properly. Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet. Close door securely. Check household fuse/circuit breaker.
Food is not heating.	Power level set too low. Cooking time too short.	Increase power level. Extend cooking time.
Turntable is noisy or not rotating.	Turntable or ring not positioned correctly. Debris under turntable.	Reposition turntable and ring. Clean under the turntable.
Light inside oven is not working.	Bulb needs replacement.	Contact qualified service personnel for bulb replacement. Do not attempt to replace yourself.

SPECIFICATIONS

Feature	Detail
Brand	Bennett Read
Model Number	KMW110
Colour	Silver
Product Dimensions	47.8 x 38.2 x 28.8 cm
Item Weight	1.46 kg

Feature	Detail
Material	Glass, Metal
Capacity	20 Liters
Power Levels	6
Timer	30 minutes
Defrost Function	Yes

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Bennett Read website. Keep your proof of purchase for any warranty claims.

For technical assistance or service inquiries, please contact Bennett Read customer service through their official channels.

© 2023 Bennett Read. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question