

[Manuals.plus](#) /

› [Bennett Read](#) /

› Bennett Read Kitchen Boss Multi-Blade Blender User Manual

Bennett Read KBD401

Bennett Read Kitchen Boss Multi-Blade Blender User Manual

Model: KBD401

INTRODUCTION

Thank you for choosing the Bennett Read Kitchen Boss Multi-Blade Blender. This appliance is designed to be a versatile all-in-one system for chopping, blending, whipping, and grinding. With its powerful 800W motor, multiple speed settings, and specialized attachments, it offers a wide range of culinary possibilities, from preparing smoothies and sauces to grinding coffee beans and crushing ice. Please read this manual thoroughly before first use to ensure safe and optimal operation.





Image: The Bennett Read Kitchen Boss Multi-Blade Blender, showcasing its sleek black base, clear jug, and control dial.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- To protect against risk of electrical shock, do not immerse the motor base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the blender with the lid in place.
- Blades are sharp. Handle with care.
- Do not process hot liquids in the blender jug. Allow hot ingredients to cool before blending.

PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Bennett Read Kitchen Boss Multi-Blade Blender.

Motor Base: Contains the powerful 800W motor and control dial.

Blender Jug: Large capacity glass jug with measurement markings.

Lid: Securely fits onto the blender jug, often with a removable measuring cup insert.

Multi-Blade Assembly: Six razor-sharp blades designed for efficient chopping and blending.

Whipping Attachment: Specialized tool for whipping cream, egg whites, and sauces.

Grinding Mill: Smaller attachment for grinding coffee beans and spices.



Image: The Bennett Read Kitchen Boss Blender shown with its main jug, the grinding mill attachment, and the whipping attachment.



Image: All components of the Bennett Read Kitchen Boss Blender laid out, including the motor base, jug, lid, multi-blade assembly, whipping attachment, and grinding mill.

SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food (jug, lid, blade assembly, attachments) in warm soapy water, rinse thoroughly, and dry.

Assembling the Blender Jug:

1. Place the multi-blade assembly into the bottom opening of the blender jug. Ensure it is securely seated.
2. Attach the sealing ring and then screw the base collar onto the jug, tightening firmly to prevent leaks.
3. Place the assembled jug onto the motor base, aligning the jug's base with the motor base's coupling. Turn clockwise until it locks into place.
4. Add your ingredients to the jug. Do not exceed the MAX fill line.
5. Securely place the lid onto the jug. Ensure the measuring cup insert is in place in the lid opening.

Assembling the Grinding Mill:

1. Place the grinding blade assembly into the grinding mill cup.
2. Add ingredients to the grinding mill cup.
3. Screw the grinding mill base onto the cup, ensuring it is tightly sealed.
4. Invert the assembled grinding mill and place it onto the motor base, aligning and turning clockwise to lock.

OPERATING INSTRUCTIONS

Ensure the appliance is properly assembled and plugged into a suitable power outlet.

Using the Blender:

1. With the jug securely on the motor base and lid in place, turn the control dial to your desired speed setting (1 or 2).
2. For short bursts of power, turn the dial to the 'P' (Pulse) setting and release. This is ideal for chopping or crushing ice.
3. Blend until desired consistency is achieved. Do not operate continuously for more than 60 seconds. Allow the motor to rest for at least 1 minute between cycles.
4. Once blending is complete, turn the dial to '0' (Off) and unplug the appliance.
5. Carefully remove the jug from the motor base and pour out contents.



Image: The blender jug containing finely crushed ice, demonstrating its ice-crushing capability.

Using the Whipping Attachment:

The whipping attachment is designed for light tasks such as whipping cream, egg whites, or mixing thin batters.

1. Replace the multi-blade assembly with the whipping attachment in the blender jug.
2. Add ingredients suitable for whipping (e.g., cold cream, egg whites).

3. Secure the lid and place the jug on the motor base.
4. Select a low speed setting (1) and gradually increase if necessary. Whip until desired consistency.

Using the Grinding Mill:

The grinding mill is perfect for grinding dry ingredients like coffee beans, nuts, or spices.

1. Assemble the grinding mill as described in the Setup section.
2. Place the assembled grinding mill onto the motor base.
3. Select speed setting 2 or use the 'P' (Pulse) function for short bursts.
4. Grind until desired fineness is achieved.
5. Turn the dial to '0' and unplug. Carefully remove the grinding mill, invert, and open to access ground ingredients.



Image: The grinding mill attachment containing freshly ground coffee beans, illustrating its function.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your blender. Always unplug the appliance before cleaning.

Cleaning the Blender Jug and Attachments:

- **Quick Clean:** After use, fill the jug halfway with warm water and a drop of dish soap. Secure the lid and run the blender on speed 1 for 10-20 seconds. Rinse thoroughly.
- **Deep Clean:** Disassemble the jug, blade assembly, lid, and any used attachments. Wash all parts in warm soapy water. Use a brush for hard-to-reach areas around the blades (handle with extreme care as blades are sharp). Rinse thoroughly and allow to air dry completely before reassembling or storing.
- The glass jug and attachments are generally dishwasher safe on the top rack, but hand washing is recommended for longevity.

Cleaning the Motor Base:

- Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surface.

Storage:

Store the blender in a dry place, away from direct sunlight and heat sources. Ensure all parts are completely dry before storing to prevent mold or mildew.

TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet faulty; jug not correctly assembled or locked onto base.	Ensure plug is firmly in outlet; test outlet with another appliance; ensure jug is locked securely onto the motor base.
Motor stops during operation.	Overload protection activated; ingredients too thick or too much.	Turn off and unplug. Remove some ingredients or add liquid. Let motor cool for 15-20 minutes before restarting.
Ingredients not blending smoothly.	Too little liquid; ingredients too large; air pocket around blades.	Add more liquid; cut ingredients into smaller pieces; use pulse function or stop and stir ingredients.
Leaking from the bottom of the jug.	Blade assembly or base collar not tightened properly; sealing ring missing or damaged.	Ensure blade assembly and base collar are firmly tightened; check if sealing ring is correctly placed and undamaged.

PRODUCT SPECIFICATIONS

Brand: Bennett Read

Model Number: KBD401

Colour: Black

Material: Glass (Jug)

Motor Power: 800W

Speed Settings: 2 speeds + Pulse function

Grinding Mill RPM: 19,000 RPM

Item Weight: 3.58 kg

Package Dimensions: 43.8 x 32.2 x 28.6 cm

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Bennett Read website. Keep your proof of purchase for any warranty claims.
For further assistance or technical support, please contact Bennett Read customer service.

© 2024 Bennett Read. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question