

[Manuals.plus](#) /

› [Bennett Read](#) /

› Bennett Read 34 Litre Digital Microwave User Manual

Bennett Read KMW121

Bennett Read 34 Litre Digital Microwave User Manual

Model: KMW121

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your new Bennett Read 34 Litre Digital Microwave, Model KMW121. Please read this manual thoroughly before using the appliance and retain it for future reference.



Front view of the Bennett Read 34 Litre Digital Microwave, showcasing its sleek design and digital display.

Key Features:

- Modern and elegant design with duo-tone handle and mirror glass door.

- Integrated clock and 99-minute cooking timer for precision.
- Convenient preset functions for easy cooking.
- 10 Programmable power levels for precise cooking.
- Multi-stage cooking for efficient defrosting and cooking.
- Super-sized 34 Litre capacity.
- Adjustable heat up to 1000 Watts for faster cooking.
- Digital LED display with clock and timer.
- 8 Auto-settings for one-touch preset options.
- Speed defrost for super-fast defrosting.
- Child lock for safety.

SETUP AND INSTALLATION

Proper setup ensures optimal performance and safety of your microwave oven.

1. Unpacking

- Carefully remove the microwave oven from its packaging.
- Remove all packing materials, including the turntable, turntable ring, and any protective film from the oven cavity and door.
- Inspect the oven for any damage, such as a misaligned door, dents, or a broken door latch. Do not operate the oven if it is damaged. Contact customer support.

2. Placement

Place the microwave on a flat, stable surface strong enough to support its weight (approximately 16.9 kg) and the heaviest food item likely to be cooked in it.

- Ensure adequate ventilation: Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side for proper airflow.
- Do not block any ventilation openings on the oven.
- Keep the oven away from heat sources, steam, or splashing liquids.
- Do not place the oven near a radio or TV, as microwave operation may cause interference.



Side view of the microwave, illustrating the importance of clear ventilation space.

3. Electrical Connection

- Ensure the voltage and frequency of your power outlet match the specifications on the oven's rating label.
- Plug the oven into a properly grounded electrical outlet. Do not use extension cords or adapters.

4. Setting the Clock

Upon first plugging in the microwave, the display will show "0:00" or similar. Follow these steps to set the clock:

1. Press the "Clock" button (often labeled with a clock icon or "0/Clock").
2. Use the number pad to enter the current time (e.g., 12:30).
3. Press the "Clock" button again to confirm.

OPERATING INSTRUCTIONS

This section details the various functions and cooking modes of your microwave oven.



The intuitive control panel allows for easy selection of cooking functions and settings.

1. Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. Press the "Microw" button.
4. Use the number pad to enter the desired cooking time.
5. Press "START/+30s" to begin cooking.

2. Adjusting Power Levels

Your microwave offers 10 programmable power levels for precise cooking control.

1. Press the "Microw" button.
2. Press the "Microw" button repeatedly to cycle through power levels (e.g., P100 for 100% power, P80 for 80%, etc.) or use the number pad after selecting "Microw" to input a power level if your model supports direct input. Consult the

control panel for specific power level indications.

3. Enter the desired cooking time.
4. Press "START/+30s".


3. Preset Functions (Auto-Settings)

The microwave features convenient one-touch preset options for common food items:

- **Potato:** For baking potatoes.
- **Popcorn:** For popping microwave popcorn.
- **Meat:** For cooking various types of meat.
- **Pasta:** For cooking pasta.
- **Veget:** For cooking vegetables.
- **Reheat:** For reheating pre-cooked meals.
- **Pizza:** For heating pizza slices or small pizzas.
- **Bever:** For heating beverages.
- **Fish:** For cooking fish.

To use a preset function:

1. Place the food in the oven.
2. Press the corresponding preset button (e.g., "Potato", "Pizza").
3. Press "START/+30s". The oven will automatically set the cooking time and power level.

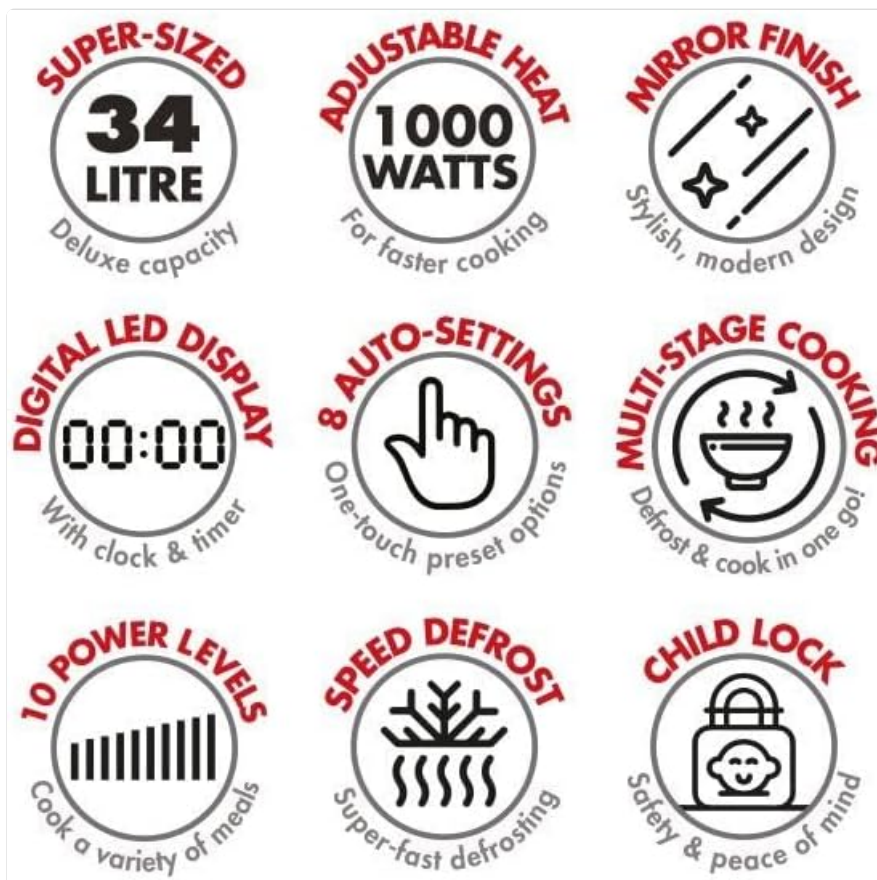

Visual representation of the microwave's advanced features, including auto-settings and safety functions.

4. Multi-Stage Cooking

This function allows you to program two or three cooking stages, such as defrosting followed by cooking, in a single cycle.

1. Press "Defrost" and select the defrost setting (e.g., by weight or time).
2. Then, program the cooking stage: Press "Microw", select power level, and enter cooking time.
3. Press "START/+30s". The oven will automatically switch from defrosting to cooking.

5. Timer Function

The 99-minute cooking timer can be used independently as a kitchen timer or to delay the start of cooking.

1. Press the "Timer" button.
2. Enter the desired time using the number pad.
3. Press "START/+30s". The timer will count down without operating the microwave function.

6. Child Lock

To prevent unsupervised operation by children, activate the child lock.

- **To activate:** Press and hold the "STOP" button for 3 seconds. A lock indicator will appear on the display.
- **To deactivate:** Press and hold the "STOP" button for 3 seconds again. The lock indicator will disappear.

MAINTENANCE AND CARE

Regular cleaning and proper care will extend the life of your microwave oven and ensure safe operation.

1. Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior cavity with a damp cloth after each use to prevent food splatters from drying and hardening.
- For stubborn stains, place a bowl of water with a few lemon slices inside and microwave on high for 2-3 minutes. The steam will loosen the stains, making them easier to wipe away.
- Clean the turntable and turntable ring with warm, soapy water. They are typically dishwasher safe.

2. Cleaning the Oven Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or scouring pads.
- Clean the door and door seal regularly to ensure a proper seal. Do not allow grease or food residue to build up.

3. General Care Tips

- Do not operate the oven when empty.
- Do not use metal containers or foil in the microwave, as this can cause arcing and damage the oven.
- Ensure the turntable is correctly seated before operating.

TROUBLESHOOTING

If you encounter issues with your microwave oven, consult the following table for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly. Power cord not plugged in. Fuse blown or circuit breaker tripped. Child lock activated.	Ensure door is firmly closed. Plug in the power cord securely. Check household fuse/circuit breaker. Deactivate child lock (hold "STOP" for 3 seconds).
Food not cooking evenly	Improper stirring/turning. Food quantity too large. Incorrect power level/time.	Stir or turn food halfway through cooking. Reduce food quantity or increase cooking time. Adjust power level and cooking time as needed.
Light not working	Bulb burnt out.	Contact qualified service personnel for bulb replacement. Do not attempt to replace it yourself.
Sparkling or arcing inside oven	Metal or foil in oven. Food residue on cavity walls.	Remove all metal items. Use only microwave-safe cookware. Clean the oven interior thoroughly.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Detailed technical specifications for the Bennett Read 34 Litre Digital Microwave.

Feature	Specification
Brand	Bennett Read
Model Number	KMW121
Colour	Grey
Capacity	34 Litre
Product Dimensions (L x W x H)	58.2 x 44.2 x 33.5 cm
Item Weight	16.9 kg
Material	Glass, Stainless Steel
Power Output	1000 Watts (Adjustable)
Included Components	1 x Bennett Read Microwave, 34 Litre Capacity, Grey
Manufacturer	Tevo (Pty) LTD

Feature	Specification
Date First Available	22 September 2023

WARRANTY AND SUPPORT

Warranty Information

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official Bennett Read website for detailed warranty terms and conditions. Keep your proof of purchase for any warranty claims.

Note: Spare part availability information is not provided in this manual. Please contact the manufacturer or authorized service center for spare part inquiries.

Customer Support

For technical assistance, service, or further inquiries, please contact Bennett Read customer support. Contact details can typically be found on the manufacturer's official website or on the product packaging.

You may also visit the [product page on Amazon.co.za](#) for additional information or to contact the seller.

© 2023 Bennett Read. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

