

[Manuals.plus](#) /

› [Bennett Read](#) /

› Bennett Read Tri-Jet 15 Place Dishwasher (Model JDS110) User Manual

Bennett Read JDS110

Bennett Read Tri-Jet 15 Place Dishwasher User Manual

Model: JDS110

1. INTRODUCTION

Thank you for choosing the Bennett Read Tri-Jet 15 Place Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before using the dishwasher and retain them for future reference.

The Bennett Read Tri-Jet dishwasher is designed for household use, offering advanced cleaning performance with its innovative Tri-Jet spray arms and turbo drying unit. It features 15 place settings and a selection of 8 wash programs to suit various cleaning needs.



Image 1.1: Front view of the Bennett Read Tri-Jet 15 Place Dishwasher. This image displays the sleek grey exterior and the integrated control panel at the top.

2. SAFETY INSTRUCTIONS

For your safety and to ensure proper operation, always adhere to the following precautions:

- Read all instructions before using the appliance.
- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Avoid opening the door during operation, as hot water may spray out.
- Sharp items should be loaded with points down to prevent injury.
- Disconnect the power supply before performing any maintenance or cleaning.

3. PRODUCT OVERVIEW

The Bennett Read Tri-Jet dishwasher is equipped with features designed for optimal cleaning and user convenience.

Key Features:

- **15 Place Settings:** Accommodates a large volume of dishes.
- **Tri-Jet Spray Arms:** Three innovative spray arms for comprehensive water coverage.
- **Digital LED Display:** Easy-to-read interface for program selection and status.
- **8 Wash Programs:** Versatile options including Intensive, Eco, and Smart 60°-70° wash.
- **Adjustable Racks:** Flexible loading for various dish sizes and cookware.
- **Adjustable Feet:** For enhanced stability and leveling on uneven surfaces.



Image 3.1: Visual representation of key features including energy efficiency, Tri-Jet spray system, digital LED display, 8 wash programs, and adjustable feet.

Control Panel:

The control panel is located on the top edge of the dishwasher door. It includes buttons for program selection, start/pause, and a digital display for cycle time and status indicators.



Image 3.2: Close-up view of the dishwasher's control panel, showing the digital LED display and various function buttons for program selection and operation.

4. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your dishwasher. It is recommended that installation be performed by a qualified technician.

4.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the dishwasher for any shipping damage. Report any damage immediately to your retailer.
- Ensure all accessories are present.

4.2 Placement

- Place the dishwasher on a firm, level floor capable of supporting its weight.
- Avoid placing the dishwasher near heat sources or in direct sunlight.
- Ensure adequate space for door opening and access for maintenance.

4.3 Water Connection

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa.
- Ensure all connections are tight to prevent leaks.

- Connect the drain hose to a suitable drain pipe, ensuring it is not kinked or obstructed.

4.4 Electrical Connection

- Connect the dishwasher to a dedicated, grounded electrical outlet.
- The electrical supply must match the specifications on the rating plate.
- Do not use extension cords or adapters.

4.5 Leveling

- Adjust the dishwasher's feet to ensure it is perfectly level. This prevents water leakage and ensures proper door closure.

5. OPERATING INSTRUCTIONS

Follow these steps for effective and efficient dishwashing.

5.1 Loading Dishes

Proper loading improves cleaning performance and prevents damage.

- Scrape off large food particles before loading.
- Place larger, heavily soiled items in the lower rack.
- Place glasses, cups, and smaller items in the upper rack.
- Ensure dishes do not block the spray arms.
- Load cutlery into the cutlery basket with handles down for forks and spoons, and points down for knives.



Image 5.1: Interior view of the dishwasher, illustrating the upper and lower racks, the cutlery tray, and the Tri-Jet spray arms, along with the detergent dispenser.

5.2 Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the recommended amount of dishwasher detergent.
- Check the rinse aid indicator and refill the rinse aid dispenser if necessary. Rinse aid helps with drying and prevents spots.

5.3 Selecting a Wash Program

The dishwasher offers 8 wash programs. Refer to the control panel and your specific model's program guide for details. Common programs include:

- **Intensive:** For heavily soiled dishes and pots.
- **Eco:** Energy-efficient program for normally soiled dishes.
- **Smart 60°-70°:** A higher temperature wash and rinse for hygienic cleaning.
- **Quick Wash:** For lightly soiled items that need a fast cycle.

Use the program selection button on the control panel to choose your desired cycle.

5.4 Starting a Cycle

- Close the dishwasher door firmly.
- Press the Start/Pause button. The digital display will show the remaining cycle time.

5.5 Interrupting or Modifying a Cycle

- To interrupt, press the Start/Pause button or carefully open the door slightly.
- To modify, press and hold the program button for a few seconds to reset, then select a new program.

5.6 End of Cycle

- The dishwasher will signal when the cycle is complete.
- Open the door slightly to allow steam to escape before unloading.
- Unload the lower rack first to prevent water from dripping onto dry dishes.

6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the life of your dishwasher.

6.1 Cleaning Filters

- The filter system should be cleaned regularly (e.g., weekly).
- Twist and remove the coarse filter, then separate the fine filter.
- Rinse all filter components under running water to remove food particles.
- Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked.

6.2 Cleaning Spray Arms

- Periodically check the spray arm nozzles for blockages.
- If blocked, remove the spray arms and clear the holes with a thin object.
- Rinse thoroughly and reattach.

6.3 Exterior and Interior Cleaning

- Wipe the exterior with a damp cloth and mild detergent.
- Clean the door seal regularly to remove food residue.
- Run a dishwasher cleaning cycle with a specialized cleaner periodically to remove grease and limescale.

6.4 Winterization (for non-use in cold climates)

- If the dishwasher will be unused for an extended period in freezing temperatures, drain all water from the appliance.
- Disconnect water and power supplies.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Fuse blown	Check power connection; Ensure door is latched; Check household fuse/breaker
Water not draining	Drain hose kinked or blocked; Filter clogged	Check and clear drain hose; Clean the filter system
Dishes not clean	Improper loading; Insufficient detergent; Spray arms blocked; Incorrect program selected	Reload dishes correctly; Add more detergent; Clean spray arm nozzles; Select appropriate wash program
White spots on dishes	Lack of rinse aid; Hard water	Refill rinse aid dispenser; Consider using a water softener or increasing rinse aid dosage
Excessive noise	Dishes rattling; Foreign object in pump; Dishwasher not level	Rearrange dishes; Inspect pump area; Adjust leveling feet

8. SPECIFICATIONS

Technical details for the Bennett Read Tri-Jet 15 Place Dishwasher, Model JDS110.

Specification	Detail
Brand	Bennett Read
Model Number	JDS110
Colour	Grey
Item Weight	15 kg
Package Dimensions	88.1 x 66.1 x 64.4 cm
Place Settings	15
Wash Programs	8
Special Features	Tri-Jet Spray Arms, Digital LED Display, Adjustable Racks, Adjustable Feet, BPA-free components in food zones

9. WARRANTY AND SUPPORT

Your Bennett Read Tri-Jet 15 Place Dishwasher is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical assistance, spare parts, or warranty claims, please contact Bennett Read customer support. Contact information can typically be found on the manufacturer's website or on your purchase documentation. Always provide your model number (JDS110) and serial number when contacting support to ensure efficient service.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question