

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bennett Read](#) /

› [Bennett Read HFN110 Steel Pedestal Fan User Manual](#)

### Bennett Read HFN110

# Bennett Read HFN110 Steel Pedestal Fan User Manual

Model: HFN110

## INTRODUCTION

Thank you for purchasing the Bennett Read HFN110 Steel Pedestal Fan. This manual provides important information regarding the safe operation, assembly, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and retain it for future reference.





Image 1: The Bennett Read HFN110 Steel Pedestal Fan, showcasing its full assembly.

## IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Ensure the power supply matches the voltage specified on the fan's rating label.
- Do not operate the fan with a damaged cord or plug.
- Keep fingers and other objects away from the fan blades and grille during operation.
- Do not use the fan near water or in damp environments.
- Unplug the fan from the power outlet before cleaning or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## SETUP AND ASSEMBLY

Follow these steps to assemble your Bennett Read HFN110 Pedestal Fan.

- Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in the "Included Components" section are present.
- Assemble the Base:** Attach the pedestal pole to the weighted base. Secure it firmly using the provided screws or locking mechanism.
- Attach the Motor Unit:** Mount the fan motor unit onto the top of the pedestal pole. Ensure it is securely fastened.
- Install Rear Grille:** Place the rear grille onto the motor unit, aligning the notches. Secure it with the retaining nut.
- Attach Fan Blades:** Slide the fan blades onto the motor shaft. Ensure they are correctly oriented and secured with the spinner cap.
- Install Front Grille:** Place the front grille over the fan blades and secure it to the rear grille using the clips or screws provided. Ensure the grilles are tightly closed.
- Adjust Height:** Loosen the height adjustment knob on the pedestal pole, extend the pole to the desired height (up to 1.24m), and tighten the knob securely.



Image 2: Close-up of the fan base and control panel, highlighting the rotary control and weighted base for stability.

## OPERATING INSTRUCTIONS

Your Bennett Read HFN110 Pedestal Fan features simple controls for optimal comfort.

- Power Connection:** Plug the fan into a standard electrical outlet.
- Speed Control:** Use the rotary control knob located on the motor unit to select your desired fan speed:
  - 0: Off
  - 1: Low Speed
  - 2: Mid Speed
  - 3: High Speed
- Oscillation Function:** To activate oscillation (side-to-side movement), push down the oscillation pin located on top of the motor housing. To stop oscillation, pull the pin up.
- Tilt Adjustment:** To adjust the vertical angle of the fan head, loosen the tilt adjustment knob on the side of the motor unit, tilt the fan head to the desired angle, and tighten the knob securely.



Image 3: Detailed view of the fan head, illustrating the 3-speed rotary control and oscillation feature.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your fan.

- **Always unplug the fan from the power outlet before cleaning.**
- **Cleaning the Grilles:** Use a soft, damp cloth to wipe down the exterior surfaces of the grilles. For stubborn dust, a vacuum cleaner with a brush attachment can be used.
- **Cleaning the Blades:** To clean the fan blades, you may need to carefully remove the front grille. Wipe the blades with a soft, damp cloth. Ensure blades are completely dry before reassembling the grille.
- **Do not use abrasive cleaners, solvents, or harsh chemicals** as these may damage the fan's finish.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging.

## TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Fan not plugged in. Speed control set to '0'.	Check power outlet. Ensure plug is fully inserted. Turn rotary control to '1', '2', or '3'.
Weak airflow.	Fan speed set too low. Grilles or blades are dirty.	Increase fan speed using the rotary control. Clean grilles and blades as per maintenance instructions.
Fan makes unusual noise.	Loose parts. Obstruction in blades.	Check all assembly points for tightness. Unplug and inspect blades for obstructions.
Oscillation not working.	Oscillation pin not engaged.	Push down the oscillation pin firmly.

If the problem persists after attempting these solutions, please contact customer support. Do not attempt to repair the fan yourself.

## SPECIFICATIONS

- **Model Number:** HFN110

- **Brand:** Bennett Read
- **Material:** Alloy Steel
- **Colour:** Black
- **Power Source:** Corded Electric
- **Motor:** 50W
- **Fan Speeds:** 3 (Low, Mid, High)
- **Blade Diameter:** 40 cm
- **Adjustable Height:** Up to 1.24 m
- **Special Features:** Adjustable Tilt, Oscillation
- **Item Weight:** 6.53 kg
- **Product Dimensions:** 46.5D x 16W x 58H cm (approximate, varies with height adjustment)

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Bennett Read website. Keep your proof of purchase for any warranty claims.

For technical assistance or spare parts, please contact Bennett Read customer service.

© 2023 Bennett Read. All rights reserved.