

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bennett Read](#) /
- › [Bennett Read Slimline Tower Fan HFN120 User Manual](#)

Bennett Read HFN120

Bennett Read Slimline Tower Fan HFN120 User Manual

Model: HFN120

INTRODUCTION

Thank you for purchasing the Bennett Read Slimline Tower Fan HFN120. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your new tower fan. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power supply voltage matches the rating label on the fan.
- Do not operate the fan with a damaged cord or plug.
- Keep the fan away from water or other liquids.
- Do not insert fingers or objects into the fan grille.
- Unplug the fan before cleaning or moving it.
- This appliance is for indoor use only.
- Supervise children to ensure they do not play with the appliance.

PRODUCT OVERVIEW

The Bennett Read Slimline Tower Fan HFN120 is designed to provide efficient air circulation with a compact footprint. Familiarize yourself with its components.







Figure 1: Front view of the Bennett Read Slimline Tower Fan. This image shows the sleek black design and the air outlet grille.

Components:

- **Control Panel:** Located on top of the fan for manual operation.
- **Air Outlet Grille:** Front section where air is expelled.
- **Base:** Provides stability for the fan.
- **Power Cord:** For connecting to an electrical outlet.
- **Remote Control:** For convenient operation from a distance.

SETUP

Follow these steps to set up your tower fan for first use.

1. **Unpack:** Carefully remove the fan from its packaging. Retain packaging for storage or future transport.
2. **Base Assembly (if required):** Some models may require minor base assembly. Refer to the quick start guide included in the box if applicable. Ensure the base is securely attached and the fan is stable.
3. **Placement:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for proper air circulation and oscillation. Do not block the air inlet or outlet.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

Your tower fan can be operated using the control panel on top of the unit or the included remote control.

Control Panel



Figure 2: Detailed view of the fan's LED touch-control panel, showing buttons for power, speed, mode, timer, and oscillation.

- **Power Button** (): Press to turn the fan ON or OFF.
- **Speed Button** (): Press repeatedly to cycle through fan speeds: Low (L), Medium (M), High (H).
- **Mode Button** (): Press to select different airflow modes:
 - **Normal (NT)**: Constant airflow at the selected speed.
 - **Natural (SL)**: Simulates natural breeze by varying fan speed.
 - **Sleep (SL)**: Gradually decreases fan speed over time for quiet operation.
- **Timer Button** (): Press to set the fan to turn off automatically after a set period (0.5H, 1H, 2H, 4H). The indicator lights will show the selected duration.
- **Oscillation Button** (): Press to activate or deactivate the oscillation function, which rotates the fan from side to side for wider air distribution.



Figure 3: The remote control for the Bennett Read Slimline Tower Fan, featuring buttons for power, speed, mode, timer, and oscillation.

The remote control duplicates the functions of the control panel. Ensure the remote control is pointed towards the fan's receiver for optimal operation.

- **ON/OFF:** Turns the fan on or off.
- **SPEED:** Adjusts the fan speed (Low, Medium, High).
- **MODE:** Cycles through Normal, Natural, and Sleep modes.
- **TIMER:** Sets the automatic shut-off timer.
- **OSC (Oscillation):** Activates or deactivates the oscillation function.

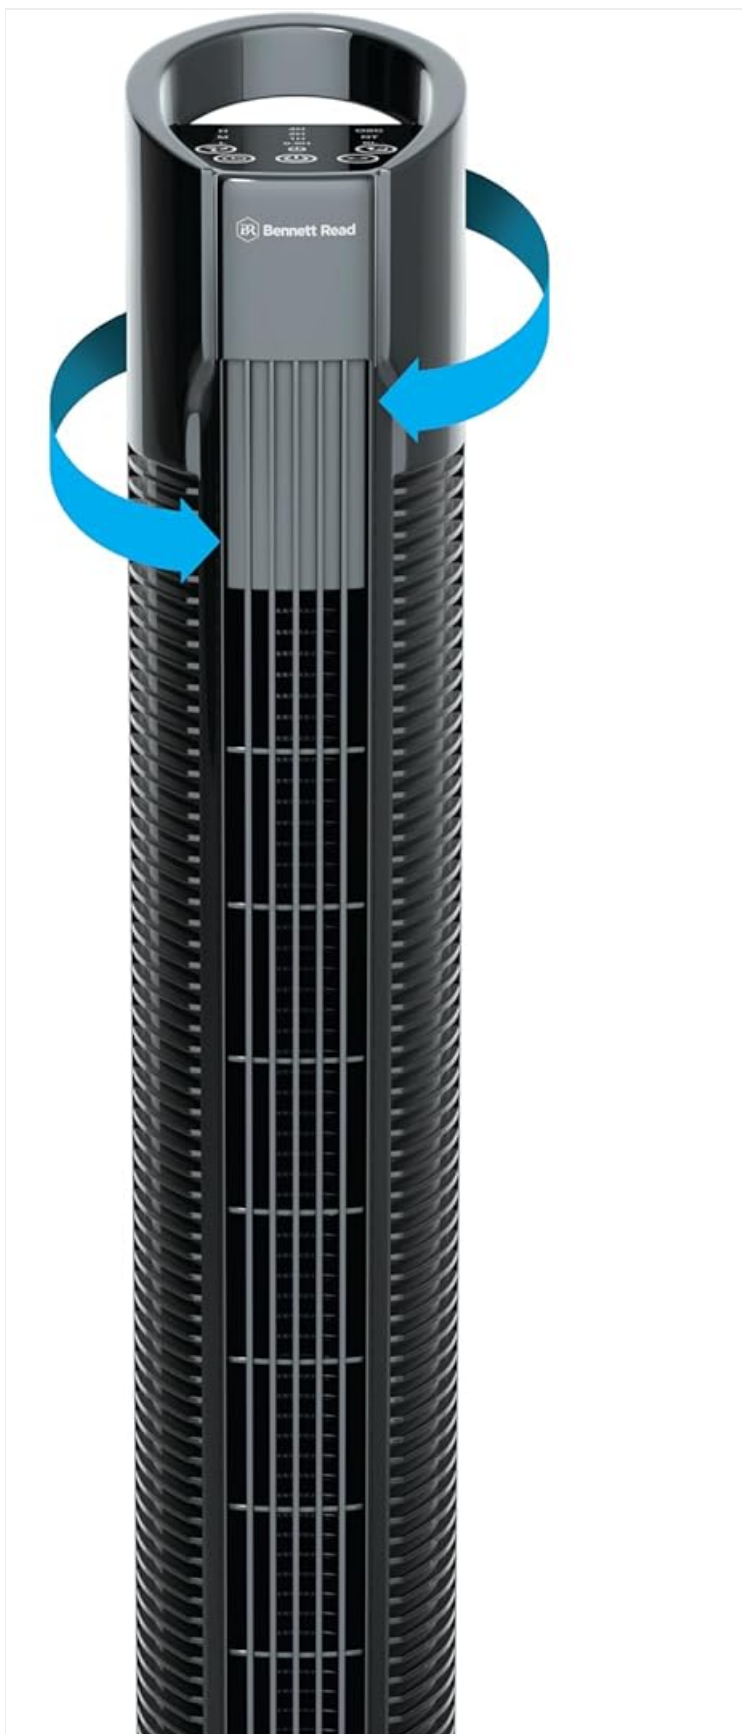




Figure 4: Illustration of the fan's oscillation function, showing arrows indicating side-to-side movement for wider air distribution.

MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your fan.

1. **Before Cleaning:** Always unplug the fan from the power outlet before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.
3. **Air Inlet/Outlet Grilles:** Use a vacuum cleaner with a brush attachment or a soft brush to remove dust and debris from the air inlet and outlet grilles.
4. **Storage:** If storing the fan for an extended period, clean it thoroughly, then place it back in its original packaging or cover it to protect it from dust. Store in a cool, dry place.

Do not immerse the fan in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power button not pressed.	Check if the power cord is securely plugged into a working outlet. Press the Power button on the control panel or remote.
Weak airflow.	Fan speed set too low. Air inlets/outlets blocked.	Increase the fan speed. Clear any obstructions from the grilles.
Fan is noisy.	Fan not on a level surface. Debris inside the fan.	Ensure the fan is placed on a stable, flat surface. Unplug and carefully inspect for foreign objects.

Problem	Possible Cause	Solution
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and fan.	Replace batteries with new ones, ensuring correct polarity. Ensure a clear line of sight to the fan's receiver.

SPECIFICATIONS

- **Model Number:** HFN120
- **Brand:** Bennett Read
- **Colour:** Black
- **Power:** 50W
- **Material:** Plastic
- **Dimensions (D x W x H):** 13.5 cm x 13.5 cm x 80 cm
- **Item Weight:** 2.3 kg
- **Special Features:** Portable, Oscillation, Timer, Multiple Airflow Modes (Normal, Natural, Sleep)
- **Power Source:** Corded Electric

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Bennett Read customer service. Keep your proof of purchase for warranty claims.

Contact information for Bennett Read customer service can typically be found on their official website or on the product packaging.

