



Manuals.plus /

- › IZI /
- › IZI ONE+ Action Camera User Manual

IZI IZI ONE+

IZI ONE+ Action Camera User Manual

Model: IZI ONE+
Brand: IZI

INTRODUCTION

Welcome to the IZI ONE+ Action Camera user manual. This guide provides comprehensive instructions for setting up, operating, and maintaining your new action camera. The IZI ONE+ is designed to capture your adventures in stunning 5K resolution with advanced stabilization and versatile features.



Figure 1: IZI ONE+ Action Camera

WHAT'S IN THE BOX

Ensure all the following items are included in your package:

- IZI ONE+ Action Camera
- 2 x 1350mAh Rechargeable Batteries
- User Manual (this document)
- Carry Case
- 20+ Accessories (various mounts, straps, etc.)
- Type-C Wired External Microphone
- Fast Charging Type-C Cable

POWER PACKED COMBO

With **20+** Accessories



Figure 2: IZI ONE+ Package Contents

KEY FEATURES

- **High-Resolution Capture:** Record stunning 5K video at 30 frames per second (FPS) and 4K video at 60 FPS. Capture high-detail photos with a 48MP sensor.



Figure 3: High-Resolution Capabilities

- **Advanced Stabilization:** Equipped with 6-Axis Gyro Stabilization and Electronic Image Stabilization (EIS) for smooth, shake-free footage, even in dynamic environments.



Figure 4: 6-Axis Gyro EIS Stabilization

- **Dual Screens:** Features a 2.0-inch FHD touch screen at the rear and a 1.3-inch HD front screen for easy

framing and control, especially for vlogging and selfies.



Figure 5: Dual Screen Functionality

- **Waterproof Design:** The camera is waterproof up to 110 feet (30 meters) with the included waterproof housing, allowing for underwater capture.

**FOR THE MOST INTENSE ADVENTURES
WATERPROOF & DUSTPROOF**

**UP
TO 110ft**
With Waterproof Shell



Figure 6: Waterproof Capability

- **External Microphone Support:** Includes a high-quality Type-C wired external microphone for professional-grade audio recording.

The image features a GoPro iZi ONE+ camera in a dark, angled perspective. A large, black, spherical external microphone is mounted on top. The camera's lens is prominent on the front. The screen displays a first-person view from a motorcycle. The text 'IZI ONE+' is printed on the front, and '5X WIFI' is visible on the bottom left of the camera body. A black cable with a Type-C USB connector is plugged into the side of the camera. In the background, another GoPro camera is partially visible, showing a different scene on its screen.

**PRO AUDIO
FOR YOUR ADVENTURES**
*External Microphone
With Advanced Noise Reduction*

**TYPE-C USB
INTERFACE**

*Louder Clearer Audio
Faster Data Transfer*

Figure 7: External Microphone Connection

- **Versatile Shooting Modes:** Explore various creative modes including Time-lapse, Slow-motion, Burst photos, Self-timer, Loop recording, Screen saver, and White balance adjustment.

COMPACT YET HIGHLY VERSATILE



Figure 8: Versatile Shooting Modes

- **Wide Field of View (FOV):** Features a 170° wide-angle lens to capture expansive scenes.

EXPAND YOUR VIEW

170° Wide Angle
For Epic Motovlogging



Figure 9: 170° Wide Angle FOV

- **Connectivity:** Built-in Wi-Fi for easy data transfer and remote control via a smartphone app.

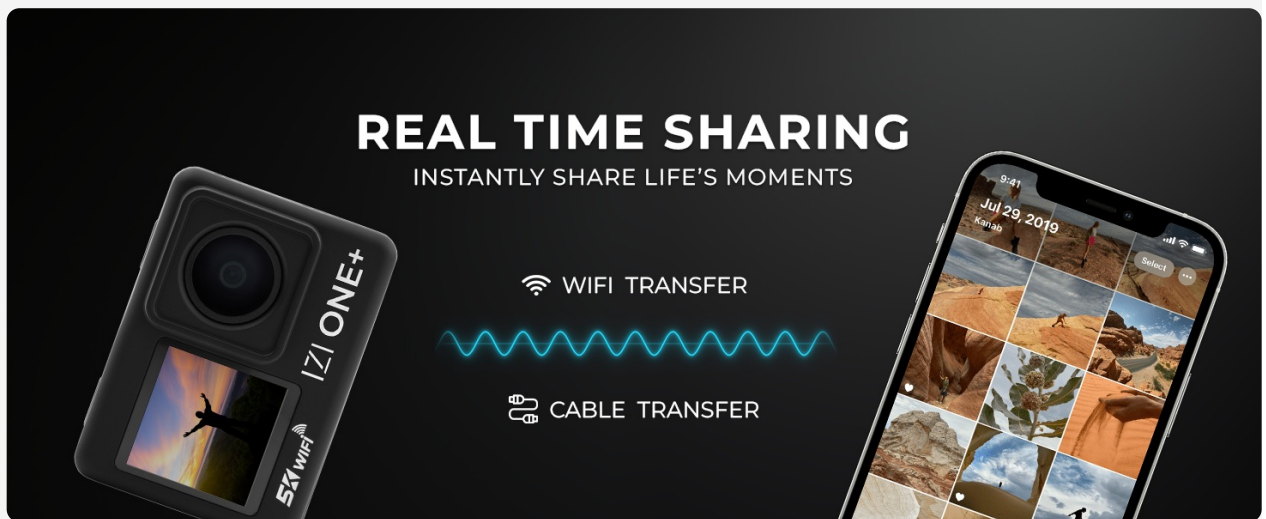


Figure 10: Real-Time Sharing via Wi-Fi

1. Charging the Battery

The IZI ONE+ comes with two 1350mAh Lithium Ion batteries. For optimal performance, fully charge both batteries before first use.

1. Connect the provided Type-C charging cable to the camera's Type-C port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. It will turn off or change color once charging is complete.

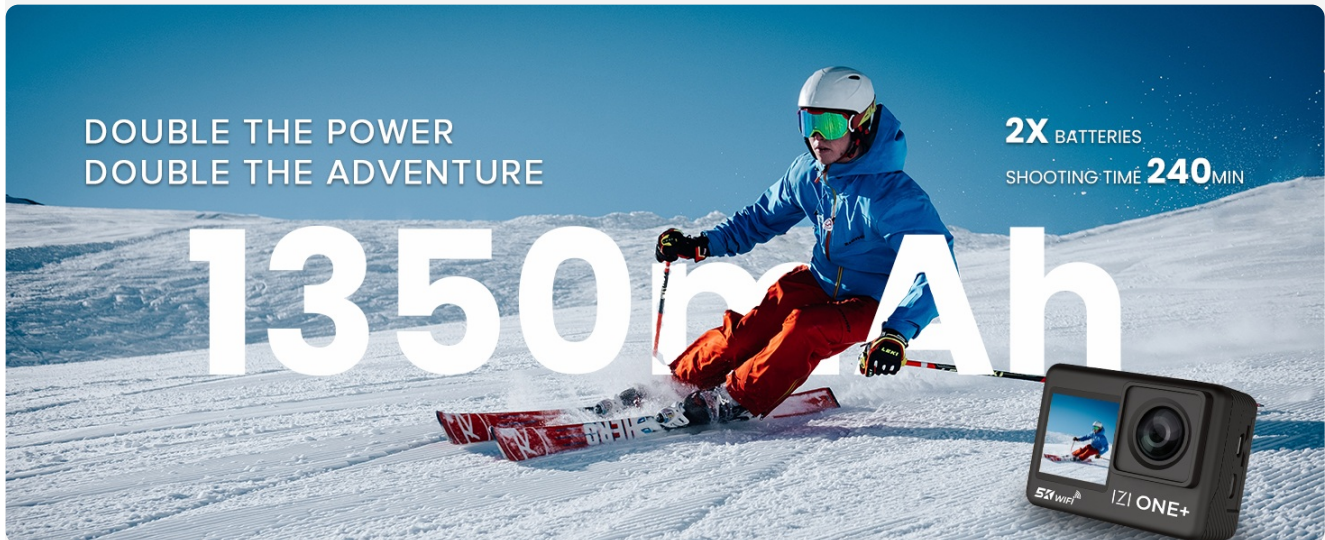


Figure 11: Battery Information

2. Inserting the Battery and SD Card

1. Locate the battery compartment cover on the bottom of the camera.
2. Open the cover and insert a charged 1350mAh battery, ensuring correct polarity.
3. Insert a compatible SDHC flash memory card (not included) into the SD card slot until it clicks into place. Ensure the camera is off before inserting or removing the SD card.
4. Close the battery compartment cover securely.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, press and hold the Power/Mode button until the screen illuminates.
- To power off, press and hold the Power/Mode button until the screen turns off.

2. Switching Modes

Briefly press the Power/Mode button to cycle through different shooting modes (Video, Photo, Playback, Settings).

3. Recording Video / Taking Photos

- In Video mode, press the Shutter/OK button to start recording. Press again to stop.
- In Photo mode, press the Shutter/OK button to take a photo.

4. Using Dual Screens

The 2.0-inch rear touch screen is for primary operation and playback. The 1.3-inch front screen is ideal for framing yourself when vlogging or taking selfies. You can switch between screens or use both simultaneously depending on

the camera's settings.

Your browser does not support the video tag.

Video 1: IZI ONE+ Action Camera Features Overview. This video demonstrates the camera's key functionalities including 5K resolution, 48MP photos, dash cam mode, EIS stabilization, multi-shooting modes, battery life, wide-angle panorama, waterproofing, dual screens, and built-in front screen for vlogging.

5. Connecting External Microphone

Plug the Type-C external microphone into the camera's Type-C port for enhanced audio quality. The camera will automatically detect the external microphone.

MAINTENANCE

1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body and lenses.
- For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or solvents.
- Ensure the camera is dry before storing or using, especially before closing ports or battery compartments.

2. Waterproof Housing Care

- After each use in water, rinse the waterproof housing with fresh water.
- Allow it to air dry completely before storing.
- Regularly check the O-ring seal for any debris or damage. Clean and lubricate the O-ring as needed to maintain its waterproof integrity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is drained or not inserted correctly.	Charge the battery. Ensure the battery is inserted with correct polarity.
Cannot record video/take photos.	SD card is full, corrupted, or not inserted.	Insert a new/formatted SD card. Reformat the SD card (this will erase all data).
Footage is shaky.	EIS/Stabilization is off or insufficient for activity.	Ensure 6-Axis Gyro Stabilization and EIS are enabled in settings. Use appropriate mounts for activity.
Poor audio quality.	Internal mic used in noisy environment or external mic not connected properly.	Use the external microphone for clearer audio. Ensure external mic is fully plugged in.
Camera freezes.	Software glitch or low battery.	Remove and reinsert the battery to reset. Ensure battery is charged. Update firmware if available.

SPECIFICATIONS

Feature	Detail
Brand	IZI
Model Number	IZI ONE+
Video Resolution	5K@30FPS, 4K@60FPS
Photo Resolution	48 Megapixels
Stabilization	6-Axis Gyro EIS Stabilization
Screens	2.0" FHD Touch Screen (Rear), 1.3" HD Front Screen
Waterproof Depth	Up to 110 feet (30 meters) with housing
Field of View (FOV)	170° Wide Angle
Connectivity	Wi-Fi, Type-C USB
Battery	2 x 1350mAh Lithium Ion (included)
Storage	SDHC Flash Memory (external, not included)
Item Weight	1.32 pounds
Product Dimensions	2.4 x 0.8 x 1.5 inches
Color	Black

WARRANTY AND SUPPORT

The IZI ONE+ Action Camera comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product functions as intended under normal use.

For technical support, warranty claims, or any inquiries, please refer to the contact information provided on the IZI official website or your purchase receipt. Please have your model number (IZI ONE+) and proof of purchase ready when contacting support.