

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bennett Read](#) /
- › [Bennett Read One Deep Clean Vacuum Cleaner User Manual](#)

Bennett Read HVC307

Bennett Read One Deep Clean Vacuum Cleaner User Manual

Model: HVC307

INTRODUCTION

The Bennett Read One Deep Clean Vacuum Cleaner is a versatile and powerful cleaning solution designed for comprehensive home cleaning. It combines wet and dry vacuuming capabilities with deep cleaning functions for carpets, upholstery, and various surfaces. Its multi-layer filtration system ensures clean air is returned to your environment.

Key features include:

- Compact, lightweight design for easy storage.
- Powerful 1300W motor for everyday vacuuming.
- Deep cleans carpets, upholstery, and more.
- Full wet and dry function.
- Multi-level filtration and multi-surface cleaning.



Image: The Bennett Read One Deep Clean Vacuum Cleaner, showcasing its compact design with an orange and grey body, hose, and cleaning wand.

SAFETY INSTRUCTIONS

Always read and understand all safety warnings and instructions before using this appliance. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.

SETUP AND ASSEMBLY

Before first use, ensure all components are present and undamaged. Refer to the packaging contents for a complete list of parts.

1. **Unpacking:** Carefully remove the vacuum cleaner and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Hose Connection:** Connect the flexible hose to the main unit's intake port. Ensure it clicks securely into place.
3. **Wand/Handle Assembly:** Assemble the extension wand (if applicable) and attach the desired cleaning head (e.g., floor nozzle, upholstery tool). For deep cleaning, ensure the spray nozzle is correctly aligned with the cleaning head.
4. **Water/Solution Tank (for Deep Cleaning):** Locate the clean water tank. Fill it with clean water and, if desired, a suitable non-foaming cleaning solution specifically designed for deep cleaners. Do not overfill. Securely close the tank cap.
5. **Waste Tank:** Ensure the waste tank is empty and properly seated within the main unit before operation.

OPERATING INSTRUCTIONS

Dry Vacuuming

1. Ensure the waste tank is empty and the dry filter (if separate) is clean and correctly installed.
2. Attach the appropriate dry vacuuming accessory (e.g., floor nozzle for hard floors/carpets, crevice tool, dusting brush).
3. Plug the power cord into a suitable electrical outlet (240 Volts).
4. Turn on the vacuum cleaner using the power switch.
5. Move the cleaning head slowly over the surface to be cleaned.
6. When finished, turn off the vacuum and unplug it. Empty the waste tank and clean the filter as per maintenance instructions.

Wet Vacuuming (Liquid Spills)



Image: The vacuum cleaner being used to clean a liquid spill on a tiled floor, demonstrating its wet vacuuming capability.

1. Ensure the waste tank is empty and the wet filter (if separate) is clean and correctly installed. Remove any dry filters if instructed by the manual.
2. Attach the hard floor wet spill tool.
3. Plug the power cord into a suitable electrical outlet.
4. Turn on the vacuum cleaner.
5. Slowly move the wet spill tool over the liquid spill to suction it into the waste tank.
6. When finished, turn off the vacuum and unplug it. Empty the waste tank immediately and clean it thoroughly.

Deep Cleaning (Carpets & Upholstery)



Image: The vacuum cleaner's upholstery deep cleaning attachment being used on a sofa, highlighting its ability to clean fabric surfaces.

1. Fill the clean water tank with water and a suitable deep cleaning solution as described in the Setup section.
2. Attach the specialized upholstery deep cleaning attachment or the carpet deep cleaning tool.
3. Plug the power cord into a suitable electrical outlet.
4. Turn on the vacuum cleaner. Activate the pump function (if separate switch) to dispense cleaning solution.
5. Slowly move the cleaning tool over the surface, pressing the trigger to spray solution and then releasing to suction it back up. Overlap passes slightly.
6. For heavily soiled areas, you may need to make multiple passes or allow the solution to dwell for a short period before suctioning.
7. When finished, turn off the vacuum and unplug it. Empty and clean both the clean water tank and the waste tank thoroughly.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the life of your Bennett Read One Deep Clean Vacuum

Cleaner.

- **Emptying and Cleaning Tanks:** After each wet or deep cleaning use, immediately empty the dirty water tank. Rinse both the dirty and clean water tanks with clean water to prevent residue buildup and odors. Allow them to air dry completely before reassembling.
- **Filter Maintenance:** The multi-layer filtration system includes microparticle filters.
 - For dry vacuuming, regularly check and clean or replace the dry filter/vacuum bag as needed. A "Vacuum Bag" is included, indicating it uses bags for dry collection.
 - For wet vacuuming, ensure the wet filter (if applicable) is clean.
 - Refer to the filter type (HEPA Filter) in specifications. Clean or replace HEPA filters according to manufacturer recommendations, typically by tapping out dust or rinsing if washable (check specific filter instructions).
- **Accessory Cleaning:** Rinse all cleaning attachments (floor nozzle, upholstery tool, crevice tool, dusting brush, wet spill tool) with clean water after use, especially after wet or deep cleaning. Ensure they are free of debris and dry before storage.
- **Hose and Wand:** Check the hose and wand for blockages periodically. Clear any obstructions carefully.
- **Exterior Cleaning:** Wipe the exterior of the vacuum cleaner with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the vacuum cleaner in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the tanks are empty and dry before storage.

TROUBLESHOOTING

This section addresses common issues you might encounter. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in; power outlet fault; power switch off; thermal cut-out activated.	Ensure plug is fully inserted. Test outlet with another appliance. Turn power switch to ON. Allow unit to cool down for 30 minutes if thermal cut-out activated.
Reduced suction.	Full dust bag/waste tank; clogged filter; hose/attachment blockage; improper assembly.	Empty/replace dust bag or waste tank. Clean or replace filters. Check hose and attachments for obstructions and clear them. Ensure all connections are secure.
No spray/solution not dispensing (Deep Clean).	Empty clean water tank; pump switch off; clogged spray nozzle; air in pump.	Refill clean water tank. Ensure pump switch is ON. Clean spray nozzle. Prime the pump by holding the spray trigger for a few seconds.
Water leaking.	Tank not properly sealed; damaged tank/seal; overfilled tank.	Ensure tanks are securely closed and seated. Check for cracks or damage to tanks/seals. Do not overfill tanks.
Unusual noise.	Blockage in hose/nozzle; motor issue; foreign object.	Check for and remove any blockages. If noise persists and is severe, discontinue use and contact support.

SPECIFICATIONS

Feature	Detail
Model Number	HVC307
Manufacturer	Tevo Pty Ltd

Feature	Detail
Power Source	Corded Electric
Voltage	240 Volts
Wattage	1300W
Weight	11.75 Kilograms
Capacity	2 Liters
Filter Type	HEPA Filter
Included Components	Vacuum Bag, Upholstery Deep Cleaning Attachment, Crevice Tool, Dusting Brush, Hard Floor Wet Spill Tool
Color	Multicolor
Special Feature	Compact
Surface Recommendation	Upholstery

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Bennett Read website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Note: Spare part information is not available or provided within this product's specifications.



© 2023 Bennett Read. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.