

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Volkano](#) /
- › [Volkano Meteor Series Wireless Keyboard and Mouse Combo User Manual](#)

Volkano VK-20245-BK

Volkano Meteor Series Wireless Keyboard and Mouse Combo User Manual

Model: VK-20245-BK

INTRODUCTION

The Volkano Meteor Series Wireless Keyboard and Mouse Combo provides a seamless and efficient computing experience. Designed for comfort and precision, this combo utilizes 2.4GHz wireless technology for stable connectivity, making it ideal for both professional and casual use. Its ergonomic design and quiet operation enhance productivity and user comfort.



Image: The Volkano Meteor Series Wireless Keyboard and Mouse Combo, showcasing both the full-size keyboard and the ergonomic mouse.

PACKAGE CONTENTS

Please ensure all items are present in the package:

- Volkano Meteor Series Wireless Keyboard
- Volkano Meteor Series Wireless Mouse
- USB Nano Receiver (stored inside the mouse battery compartment)

- Instruction Manual

SETUP INSTRUCTIONS

1. **Install Batteries:** Open the battery compartment on the underside of both the keyboard and the mouse. Insert the required batteries (e.g., AA for keyboard, AAA for mouse) ensuring correct polarity. The mouse battery compartment also houses the USB Nano Receiver.



Image: The underside of the wireless mouse, showing the open battery compartment and the slot for the USB Nano Receiver.

2. **Retrieve USB Nano Receiver:** Carefully remove the small USB Nano Receiver from its storage slot within the mouse battery compartment.
3. **Connect Receiver to Computer:** Insert the USB Nano Receiver into an available USB port on your computer. The system will automatically detect and install the necessary drivers. This is a plug-and-play device, requiring no manual driver installation.



Image: The USB Nano Receiver plugged into a laptop's USB port, ready for use.

4. **Power On:** Ensure the power switch on the mouse (usually on the underside) is set to the "ON" position. The keyboard typically powers on automatically once batteries are inserted and the receiver is connected.
5. **Ready for Use:** Your Volcano Meteor Series Wireless Keyboard and Mouse Combo is now ready for use. No additional pairing steps are required.

OPERATING INSTRUCTIONS

The Volcano Meteor Series combo is designed for intuitive and comfortable operation.

- **Keyboard Usage:** The full-size keyboard features low-profile keys for a comfortable and quiet typing experience. All standard keyboard functions are available.

- **Mouse Usage:** The ergonomic mouse provides precise and smooth tracking thanks to its high-precision optical sensor. Its noiseless clicks ensure a quiet working environment.
- **Wireless Range:** Maintain the keyboard and mouse within a reasonable range of the USB receiver for optimal performance. Obstructions may affect signal strength.



Image: A user's hands positioned over the Volcano wireless keyboard and mouse, demonstrating typical usage with a laptop.

MAINTENANCE

To ensure the longevity and optimal performance of your Volcano Meteor Series combo, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the internal components. Avoid harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries in both the keyboard and mouse when performance degrades (e.g., lag, intermittent connection). Always use fresh, good quality batteries of the correct type. Dispose of old batteries responsibly.
- **Storage:** When not in use for extended periods, it is recommended to turn off the mouse to conserve battery life. Store the combo in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Volcano Meteor Series Wireless Keyboard and Mouse Combo, please refer to the following common solutions:

Problem	Solution
Keyboard or mouse not responding.	<ul style="list-style-type: none"> ◦ Check if batteries are correctly installed and have sufficient charge. Replace if necessary. ◦ Ensure the mouse power switch is in the "ON" position. ◦ Verify the USB Nano Receiver is securely plugged into a working USB port on your computer. ◦ Try plugging the receiver into a different USB port. ◦ Restart your computer.

Problem	Solution
Lag or intermittent connection.	<ul style="list-style-type: none"> ◦ Ensure the keyboard and mouse are within close proximity to the USB receiver. ◦ Remove any large metal objects or other wireless devices that might be causing interference. ◦ Replace batteries.
Mouse cursor erratic or not moving smoothly.	<ul style="list-style-type: none"> ◦ Clean the optical sensor on the underside of the mouse. ◦ Ensure you are using the mouse on a suitable surface (e.g., a mouse pad, not highly reflective or transparent surfaces). ◦ Replace batteries.

SPECIFICATIONS

Feature	Detail
Item Weight	940 g
Package Dimensions	48.8 x 17.8 x 4 cm
Model Number	VK-20245-BK
Connectivity	Wireless (2.4GHz)
Color	Black
Warranty Description	1 Year Limited Warranty
First Available Date	19 September 2023

WARRANTY AND SUPPORT

Your Volcano Meteor Series Wireless Keyboard and Mouse Combo is covered by a **1-Year Limited Warranty** from the date of purchase. Volcano is committed to providing quality products and customer satisfaction.

- **Warranty Extension:** You can extend your coverage by an additional 12 months, for a total of 24 months, by registering your product. Please refer to the official Volcano website or included documentation for registration details.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact Volcano customer support. Your satisfaction is important to us.
- **Contact Information:** Please message us via the official Volcano Page for support with products or services.