

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Volkano](#) /

› [Volkano VK-20192-BK Promote Series Wireless Presenter User Manual](#)

Volkano VK-20192-BK

Volkano VK-20192-BK Promote Series Wireless Presenter User Manual

Model: VK-20192-BK | **Brand:** Volkano

1. INTRODUCTION

The Volkano VK-20192-BK Promote Series Wireless Presenter is designed to enhance your presentation experience. This device allows for seamless navigation through slides and features a built-in laser pointer for highlighting key information. Its wireless capability provides freedom of movement, enabling dynamic interaction with your audience without the constraints of cables. The intuitive design ensures ease of use, making your presentations smooth and professional.

2. PACKAGE CONTENTS

Please verify that all items listed below are present in your package:

- Volkano Promote Series Wireless Presenter
- USB Receiver
- User Manual
- AAA Alkaline Battery (*Note: Battery may be pre-installed or included separately*)

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your wireless presenter.







Image: Front view of the Volcano VK-20192-BK Promote Series Wireless Presenter. The device is black with a textured grip. At the top, a green LCD screen displays time, battery level, and signal strength. Below the screen are several control buttons: a large circular button with left and right arrows for navigation, a 'T' button (likely for timer), a sun icon button (for laser pointer), a play/pause button, and a screen blank/exit button. A power switch is visible on the side. The bottom part of the presenter appears to house the USB receiver.

Key Components:

- **LCD Display:** Shows battery status, signal strength, and presentation timer.
- **Page Up/Down Buttons:** Navigate forward and backward through your presentation slides.
- **Laser Pointer Button:** Activates the red laser pointer.
- **Screen Blank/Exit Button:** Blanks the screen during a presentation or exits full-screen mode.
- **Play/Pause Button:** Controls media playback or starts/stops the presentation.
- **Timer Button ('T'):** Manages presentation timing.
- **Power Switch:** Turns the presenter ON or OFF.
- **USB Receiver Compartment:** Stores the USB receiver when not in use.

4. SETUP

1. **Install Battery:** Open the battery compartment (usually located at the back or bottom of the presenter). Insert one AAA alkaline battery, ensuring correct polarity (+/-). Close the compartment securely.
2. **Retrieve USB Receiver:** The USB receiver is typically stored within the presenter itself. Gently slide open the compartment at the bottom of the presenter and remove the USB receiver.
3. **Connect USB Receiver:** Plug the USB receiver into an available USB port on your computer. Your computer should automatically detect and install the necessary drivers (Plug & Play).
4. **Power On Presenter:** Slide the power switch on the side of the presenter to the "ON" position. The LCD screen should illuminate, indicating it is ready for use.

The presenter is now ready to be used with presentation software such as Microsoft PowerPoint, Google Slides, or Keynote.

5. OPERATING INSTRUCTIONS

Follow these steps to effectively use your wireless presenter during a presentation:

1. **Start Presentation:** Open your presentation file on your computer. You may use the Play/Pause button on the presenter to start the slideshow from the beginning, or manually start it from your computer.
2. **Navigate Slides:**
 - Press the **Right Arrow** button to advance to the next slide.
 - Press the **Left Arrow** button to go back to the previous slide.
3. **Use Laser Pointer:** Press and hold the **Laser Pointer Button** (sun icon) to activate the red laser beam. Release the button to turn off the laser. *Ensure you point the laser away from people's eyes.*
4. **Blank Screen:** Press the **Screen Blank/Exit Button** (monitor icon) once to blank the screen. Press it again to unblank the screen and resume your presentation.
5. **Manage Timer:** Use the **Timer Button ('T')** to start, pause, or reset the presentation timer displayed on

the LCD screen. Refer to the on-screen prompts for specific timer functions.

6. **End Presentation:** Press the **Screen Blank/Exit Button** (monitor icon) to exit full-screen presentation mode.
7. **Power Off:** After your presentation, slide the power switch to the "OFF" position to conserve battery life. Store the USB receiver back in its compartment.

6. MAINTENANCE

- **Battery Replacement:** When the battery indicator on the LCD screen shows low power, replace the AAA alkaline battery promptly. Always use fresh, high-quality alkaline batteries.
- **Cleaning:** Wipe the presenter with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the surface.
- **Storage:** Store the presenter in a cool, dry place when not in use. Always remove the USB receiver and store it in its designated compartment to prevent loss. If storing for extended periods, remove the battery to prevent leakage.

7. TROUBLESHOOTING

If you encounter issues with your Volcano Wireless Presenter, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Presenter not responding	<ul style="list-style-type: none">◦ Low or dead battery◦ Presenter is OFF◦ USB receiver not properly connected◦ USB receiver not recognized by computer	<ul style="list-style-type: none">◦ Replace the AAA battery.◦ Slide the power switch to ON.◦ Ensure the USB receiver is fully inserted into a working USB port.◦ Try a different USB port or restart your computer.
Laser pointer not working	<ul style="list-style-type: none">◦ Low battery◦ Laser button not pressed correctly	<ul style="list-style-type: none">◦ Replace the AAA battery.◦ Press and hold the laser button firmly.
Slide navigation unresponsive	<ul style="list-style-type: none">◦ Presenter not connected◦ Presentation software not in focus◦ Interference	<ul style="list-style-type: none">◦ Verify the USB receiver is connected and the presenter is ON.◦ Ensure your presentation software (e.g., PowerPoint) is the active window.◦ Move closer to the computer or away from potential sources of wireless interference.

8. SPECIFICATIONS

Feature	Detail
Brand	Volcano

Feature	Detail
Model Number	VK-20192-BK
Color	Black
Battery Type	Alkaline (AAA)
Rechargeable Battery	No
Connectivity	Wireless (USB Receiver)
Laser Type	Red Laser
Compatibility	Windows, macOS (<i>Standard USB HID device compatibility</i>)

9. SAFETY INFORMATION

Please read and adhere to the following safety guidelines to ensure safe operation and prevent injury or damage:

- **Laser Safety:**
 - **DO NOT** point the laser beam at people or animals.
 - **DO NOT** look directly into the laser beam.
 - **DO NOT** point the laser beam at highly reflective surfaces.
 - Keep the device out of reach of children.
- **Battery Safety:**
 - Insert batteries with correct polarity (+/-).
 - Do not mix old and new batteries, or different types of batteries.
 - Remove batteries if the device will not be used for an extended period to prevent leakage.
 - Dispose of used batteries according to local regulations.
- **General Use:**
 - Avoid dropping or subjecting the device to strong impacts.
 - Do not expose the device to extreme temperatures, direct sunlight, or moisture.
 - Do not attempt to disassemble or modify the device. This will void the warranty.

10. WARRANTY AND SUPPORT

Manufacturer's Warranty: This Volcano product is covered by a **1-Year Limited Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

Extend Your Coverage: You may be eligible to register for an additional 12-month extension, totaling 24 months of coverage. Visit the official Volcano website for registration details.

Customer Support: For any questions, assistance, or support regarding your Volcano product, please message us via the [official Volcano Page](#). Your satisfaction is important to us.

