

BLACK+DECKER 32495

BLACK+DECKER Heated Blanket Model 32495 Instruction Manual

Full Micro Plush Electric Heated Blanket with 10 Heating Levels, 10-Hour Timer, and Auto Shutoff

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your BLACK+DECKER Heated Blanket. Retain this manual for future reference.

- **Overheat Protection:** The blanket is equipped with advanced overheat protection, designed to automatically shut off if it reaches excessive temperatures.
- **Auto-Off Mechanism:** For safety and energy efficiency, the blanket features an auto-off mechanism that activates after 10 hours of continuous use.
- **Overcurrent Shut-Off:** An overcurrent shut-off has been implemented to further enhance safety.
- **Drying Safety:** Never plug in the blanket until it is completely dry after washing to minimize potential risks.
 - Do not use with infants, children, incapacitated persons, or persons insensitive to heat.
 - Do not use with pets.
 - Do not dry clean. Dry cleaning solvents may damage the insulation of the heating element.
 - Do not use pins or other metallic objects with this blanket. They may damage the wiring.

2. PRODUCT OVERVIEW

The BLACK+DECKER Heated Blanket provides customizable warmth and comfort with its soft micro plush material and intelligent control features.

- **Material:** Plush Micro Plush fabric for exceptional comfort.
- **Size:** Full (84 x 90 inches).
- **Heat Settings:** 10 adjustable heat levels for personalized comfort.
- **Timer:** Up to 10-hour programmable timer.
- **Control:** Detachable digital controller for easy adjustments.
- **Safety Features:** Overheat protection, 10-hour auto-off, overcurrent shut-off.
- **Care:** Machine washable and dryer safe (after detaching controller).



Image: The BLACK+DECKER Heated Blanket in cream color, folded, with its digital controller visible. Icons for UL Certified, Overheat Protection, Over-Current Protection, 10h Auto-Off, Fast Heating, and Smart Control are displayed.

Warm, Soft, & Cozy

Perfect for Chilly Weather



Image: A woman comfortably covered by the cream-colored BLACK+DECKER Heated Blanket in bed, holding a mug.
Icons indicate 10 Heat Settings, 10h Auto-Off, and 1-10h Timer.

3. SETUP INSTRUCTIONS

- 1. Unpack:** Carefully remove the heated blanket and controller from its packaging.
- 2. Connect Controller:** Locate the connector on the blanket. Align the arrows on the blanket connector and the controller cord, then firmly plug the controller into the blanket until it securely locks. Ensure the connection is snug.
- 3. Position Blanket:** Spread the heated blanket evenly over your bed, ensuring it lies flat without any folds or bunches.
- 4. Plug into Power:** Plug the power cord from the controller into a standard 120V AC electrical outlet.

Your browser does not support the video tag.

Video: This video demonstrates the proper connection of the detachable controller to the BLACK+DECKER Heated Blanket and shows the blanket laid out on a bed. It highlights the ease of setup and the blanket's soft texture.

4. OPERATING INSTRUCTIONS

- 1. Power On/Off:** Press the power button on the digital controller to turn the blanket on or off.

2. **Adjust Heat Level:** Use the '+' and '-' buttons to select your desired heat level from 1 to 10. The display will show the current heat setting.
3. **Set Timer:** Press the 'TIME' button to cycle through the available timer settings (up to 10 hours). The blanket will automatically shut off after the set time.
4. **Fast Heating:** The blanket is engineered for swift and effective heating, quickly reaching your desired temperature.



Image: A close-up view of the BLACK+DECKER digital controller, showing the display with '10' (indicating heat level) and buttons for temperature and timer adjustment. The 15ft (4.6m) cord length is also highlighted.

Fast + Energy Efficient Heating

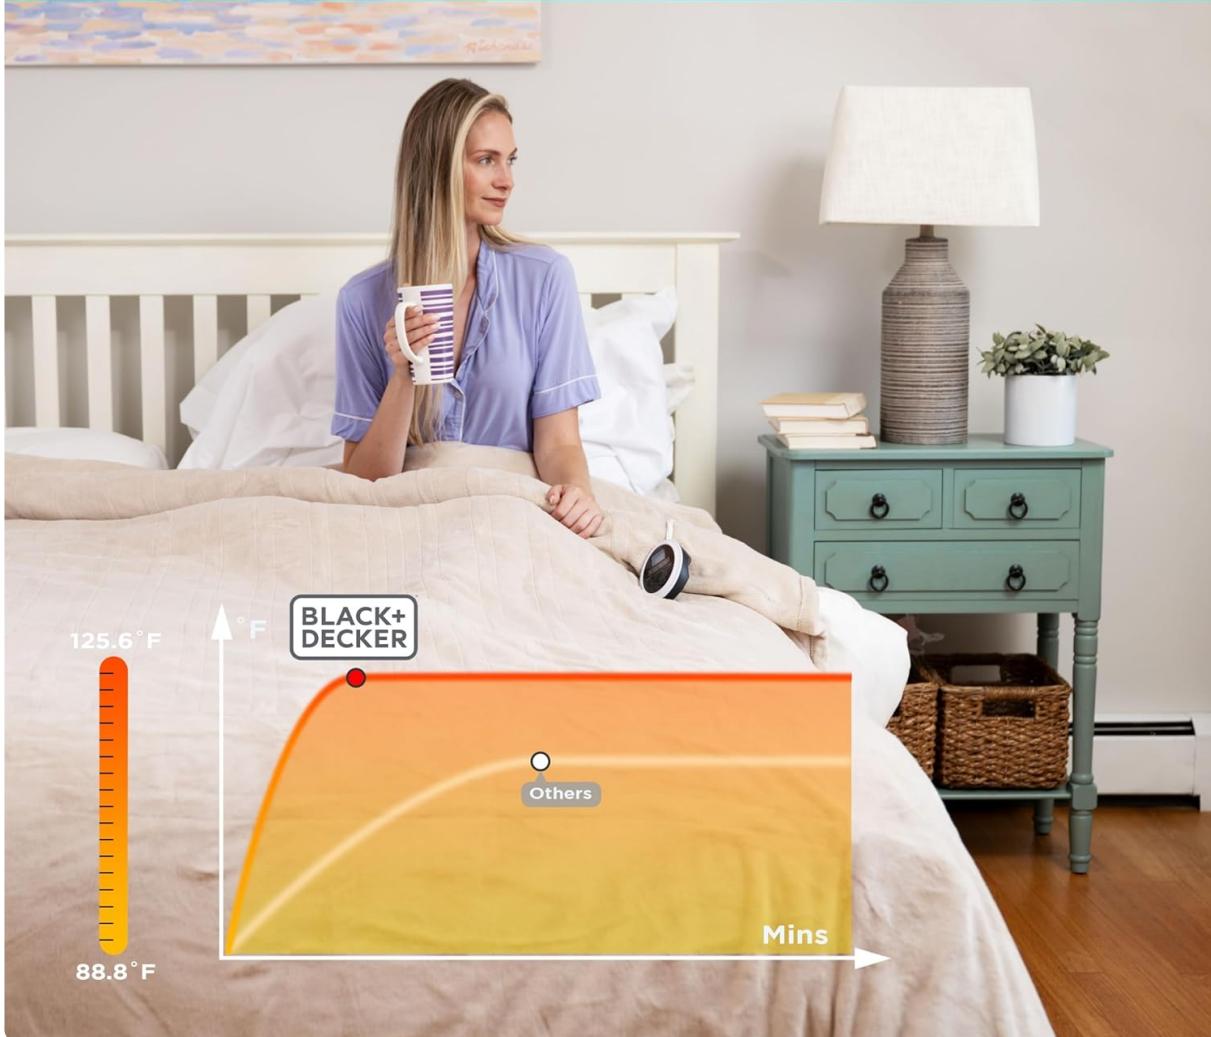


Image: A graph illustrating the rapid heat-up feature of the BLACK+DECKER Heated Blanket compared to other blankets, showing a quick rise to 125.6°F. A woman is seen relaxing in bed with the blanket.

Your browser does not support the video tag.

Video: This video demonstrates the ease of use of the digital controller for the BLACK+DECKER Heated Blanket, showing how to adjust temperature and set the timer for personalized comfort.

5. CARE AND MAINTENANCE

Proper care ensures the longevity and optimal performance of your heated blanket.

- 1. Disconnect Controller:** Before washing, always disconnect the controller cord from the blanket.
- 2. Machine Wash:** Place the blanket into a washing machine. Use a gentle cycle with cold water.
- 3. Drying:** Air-dry the blanket or use a low-temperature setting on your dryer. Ensure the blanket is completely dry before reconnecting the controller and plugging it in.
- 4. Storage:** Store the blanket in a cool, dry place when not in use. Avoid folding it tightly or placing heavy objects on it, which could damage the internal wiring.

Washer + Dryer Safe



Image: A woman is shown unplugging the controller from the BLACK+DECKER Heated Blanket before placing it into a top-loading washing machine, illustrating the machine washable and dryer safe feature.

6. TROUBLESHOOTING

If you encounter any issues with your heated blanket, please refer to the following common solutions:

- **Blanket Not Heating:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Verify that the controller is firmly connected to the blanket.
- Check if the power button on the controller is pressed and the display is active.

- **Blanket Too Hot or Not Warm Enough:**

- Adjust the heat setting using the '+' and '-' buttons on the controller to your preferred comfort level.

- **Blanket Shuts Off Unexpectedly:**

- The blanket has an automatic 10-hour shut-off feature. This is normal operation. Simply turn the blanket back on if you wish to continue use.
- If the blanket shuts off before the set time, check for any folds or bunches that might trigger the

overheat protection. Unplug, flatten the blanket, and plug back in.

7. SPECIFICATIONS

Brand	BLACK+DECKER
Model Name	32495
Size	Full (84" L x 72" W)
Color	Cream
Material	Micro Plush, Polyester
Heat Levels	10
Auto Shutoff	10 Hours
Product Care	Machine Washable
Item Weight	5.2 Pounds
Included Components	72x84 Full Blanket, Detachable Heat Controller, Product Manual



Image: A size guide for Heated Electric Blankets, showing dimensions for Throw (50x60 in), Twin (62x84 in), Full (72x84 in), Queen (84x90 in), and King (90x100 in).

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided in the product packaging or visit the official BLACK+DECKER website. Keep your purchase receipt as proof of purchase.