

LEVN LE-HS018

LEVN Wireless Headphones for TV Watching

Model: LE-HS018

INTRODUCTION

This instruction manual provides detailed information on the setup, operation, maintenance, and troubleshooting of your LEVN Wireless Headphones (Model LE-HS018). These headphones are designed to offer a private and comfortable audio experience for TV watching, featuring low latency and multiple connectivity options. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

WHAT'S IN THE BOX

Carefully unpack all components and ensure you have received the following items:

- Wireless Headphones for TV
- TV Transmitter Charging Base
- Type C Charging Cable
- Optical Audio Cable
- AUX 3.5mm Audio Cable
- RCA Adapter Audio Cables
- USB Adapter
- User Manual (this document)



Image: The LEVN Wireless Headphones resting on their charging base, showcasing the sleek black design. This is the primary product unit.

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your LEVN Wireless Headphones and Transmitter

Charging Base.



Image: A detailed diagram illustrating the LEVN Wireless Headphones and their transmitter charging base, with labels pointing to key features such as the MFB button, volume controls, USB-C charging port, optical input, AUX input, charging contacts, headphone LED indicator light, transmitter LED indicator light, and power button.

Headphone Controls:

- **MFB Button:** Multi-Function Button for various controls.
- **Volume "-":** Decrease volume.
- **Volume "+":** Increase volume.
- **Mute Button:** Mute/unmute audio.
- **USB-C Charging Port:** For direct charging of headphones.
- **Headphone LED Indicator Light:** Shows status (power, pairing, charging).

Transmitter Charging Base:

- **Optical Input:** For connecting to TV via optical cable.
- **AUX Input:** For connecting to TV via 3.5mm AUX cable.
- **RCA Adapter Audio Cables:** For connecting to TV via RCA.
- **Charging Contacts:** For charging headphones when placed on the base.
- **Transmitter LED Indicator Light:** Shows status of the transmitter.
- **Power Button:** To power the transmitter on/off.

SETUP GUIDE

Follow these steps to set up your LEVN Wireless Headphones for the first time.

1. Powering the Transmitter and Headphones:

1. Connect the Type C Charging Cable to the transmitter base and plug the USB adapter into a power source.
2. Place the headphones onto the charging contacts of the transmitter base. The headphones will begin charging.
3. Press the Power Button on the transmitter base to turn it on.



Image: The LEVN Wireless Headphones are shown on their charging base, which is connected to a power outlet, indicating the charging process.

2. Connecting to Your TV (Plug and Play):

The LEVN headphones offer multiple ways to connect to your TV. Choose the method that best suits your TV's available ports.

- **Optical Connection:** Use the Optical Audio Cable to connect the transmitter's optical input to your TV's optical audio output.
- **AUX 3.5mm Connection:** Use the AUX 3.5mm Audio Cable to connect the transmitter's AUX input to your TV's 3.5mm audio output (headphone jack).
- **RCA Connection:** Use the RCA Adapter Audio Cables to connect the transmitter to your TV's RCA audio output ports (red and white).

Once the audio cables are connected and the transmitter is powered on, the headphones will automatically connect to the transmitter. No complicated Bluetooth pairing steps are required for this direct connection.



Plug and Play Freedom

Compatible with 3 ways to connect to TV providing unlimited choices

Image: The LEVN Wireless Headphones and transmitter base are positioned near a television, with illustrations of Optical, AUX 3.5mm, and RCA adapter audio cables, demonstrating the versatile 'Plug and Play Freedom' connection options.

3. Bluetooth Connection (Alternative):

If your TV does not have the above audio output ports, or if you wish to connect to other Bluetooth-enabled devices (e.g., smartphone, laptop), you can connect the headphones directly via Bluetooth 5.2.

1. Ensure the headphones are charged and powered on.
2. Activate Bluetooth pairing mode on the headphones (refer to the headphone's specific instructions for pairing mode, usually by holding the MFB button).
3. On your device (TV, smartphone, etc.), search for Bluetooth devices and select "LEVN LE-HS018" to pair.

OPERATING INSTRUCTIONS

Volume Control:

Use the Volume "+" and Volume "-" buttons on the headphones to adjust the listening volume to your preference.

Mute Function:

Press the Mute Button on the headphones to temporarily silence the audio. Press it again to unmute.

Wireless Range:

The headphones offer a connection range of up to 30 meters (100 feet) from the transmitter, allowing for freedom of movement within your home without losing audio connection.



Image: A woman wearing the LEVN Wireless Headphones is shown walking through a spacious home, with a graphic indicating a 'Connection Range 30M/100FT' from the transmitter, emphasizing the extended wireless freedom.

Battery Life:

Enjoy up to 65 hours of continuous use on a single charge. When not in use, simply place the headphones on the transmitter charging base to replenish energy.

Week, Not Day

Get 1 week of use on a single charge for uninterrupted watching fun



Image: The LEVN Wireless Headphones are depicted within a stylized clock face, with '65 Hrs' prominently displayed, signifying the impressive 65-hour battery life on a single charge.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your headphones.

- **Cleaning:** Use a soft, dry cloth to clean the headphones and transmitter base. Avoid using abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones on the charging base to keep them charged and ready for use. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging:** Always ensure the headphones are properly seated on the charging contacts of the transmitter base for efficient charging. Alternatively, use the USB-C port for direct charging.
- **Avoid Moisture:** The headphones are not water resistant. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

If you encounter any issues with your LEVN Wireless Headphones, refer to the following common problems and

solutions:

Problem	Possible Cause / Solution
No sound from headphones.	<ul style="list-style-type: none">Ensure headphones are powered on and charged.Verify the transmitter base is powered on and connected to the TV.Check if the correct audio cable (Optical, AUX, RCA) is securely connected to both the transmitter and the TV.Confirm the TV's audio output settings are correctly configured for the connected port (e.g., set to "Optical" or "Headphone Out"). Some TVs may require setting the Digital Output Audio Format to PCM.Increase the volume on both the headphones and the TV.
Audio delay (lip-sync issues).	<ul style="list-style-type: none">The headphones feature ultra-low latency (<40ms). Ensure your TV's audio settings do not introduce additional processing or delay.Check TV settings for "Audio Delay" or "Lip Sync" adjustments.
Headphones not charging.	<ul style="list-style-type: none">Ensure the charging cable is securely connected to the transmitter base and the power adapter.Verify the headphones are correctly seated on the charging contacts of the base.Try charging directly via the USB-C port on the headphones.
Poor connection or limited range.	<ul style="list-style-type: none">Ensure there are no major obstructions (thick walls, large metal objects) between the transmitter and the headphones.Move the transmitter closer to your listening area if possible.Avoid interference from other wireless devices operating on similar frequencies.

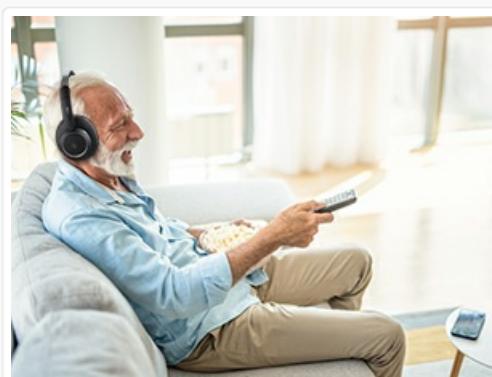


Image: A screenshot of a television's 'Expert Settings' audio menu, showing options like Digital Output Audio Format (PCM), Audio Delay, and Audio Volume, which are crucial for optimizing sound output to the headphones.

SPECIFICATIONS

Feature	Detail
Model Name	LE-HS018

Feature	Detail
Connectivity Technology	RCA, Optical, AUX 3.5mm, Bluetooth V5.2
Wireless Communication Technology	Bluetooth
Charging Time	2.5 Hours
Recommended Uses	Listen to music, Watch TV
Compatible Devices	PC, Cellphones, Television, Laptops, Smart phone
Material	Stainless Steel, Leather
Control Type	Media Control (Button)
Water Resistance Level	Not Water Resistant
Frequency Range	20 Hz - 20,000 Hz
Bluetooth Range	30 Meters (100 feet)
Bluetooth Version	5.2
Audio Latency	40 Milliseconds
Audio Driver Size	40 Millimeters
Battery Life (Playback)	Up to 65 hours
Item Weight	1.74 pounds
Dimensions (Package)	8.9 x 7.95 x 3.94 inches

SUPPORT AND WARRANTY

LEVN is committed to providing excellent customer service. If you have any questions, require assistance, or experience issues not covered in this manual, please contact our professional support team. We offer one-on-one service to ensure your satisfaction.

For support, please refer to the contact information provided on the product packaging or the official LEVN website. *Please retain your proof of purchase for warranty purposes. Specific warranty terms and conditions may apply.*