

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Franke](#) /

› [User Manual for Franke FMA 97 P XS Electric Oven](#)

Franke FMA 97 P XS

User Manual for Franke FMA 97 P XS Electric Oven

Model: FMA 97 P XS | Brand: Franke

INTRODUCTION

Thank you for choosing the Franke FMA 97 P XS Electric Oven. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read this manual thoroughly before using the oven and keep it for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, burns, or injury.

- Ensure the oven is properly installed and grounded by a qualified technician before use.
- Do not touch hot surfaces. Always use oven mitts or pot holders.
- Supervise children closely when the oven is in use.
- Never use water to extinguish grease fires; instead, turn off the appliance and cover the pan with a lid or baking soda.
- Unplug the oven from the power outlet before cleaning or performing maintenance.
- Do not store flammable materials in or near the oven.
- Ensure proper ventilation around the oven during operation.

PRODUCT OVERVIEW

The Franke FMA 97 P XS is a 71-liter electric built-in oven designed for modern kitchens. It features 11 cooking functions and a powerful 3300 Watt heating element, all encased in a sleek stainless steel and black finish.



Figure 1: Front view of the Franke FMA 97 P XS electric oven. This image displays the oven's sleek black and stainless steel exterior, the digital display, and the control knobs. The interior cavity with the heating element and rack is also visible through the glass door.

Key Components:

- **Control Panel:** Features touch controls and rotary knobs for function selection, temperature, and timer settings.
- **Oven Cavity:** 71-liter capacity, designed for efficient heat distribution.
- **Oven Door:** Equipped with a soft-close mechanism for quiet and safe operation.
- **Accessories:** Includes a grill rack and a baking tray for various cooking needs.

INSTALLATION

The Franke FMA 97 P XS is a built-in oven. Proper installation is crucial for safety and optimal performance. It must be installed by a qualified professional in accordance with local electrical codes and regulations.



Figure 2: The Franke FMA 97 P XS oven seamlessly integrated into a kitchen cabinet. This image demonstrates the aesthetic appeal and typical placement of the built-in appliance within a kitchen environment.

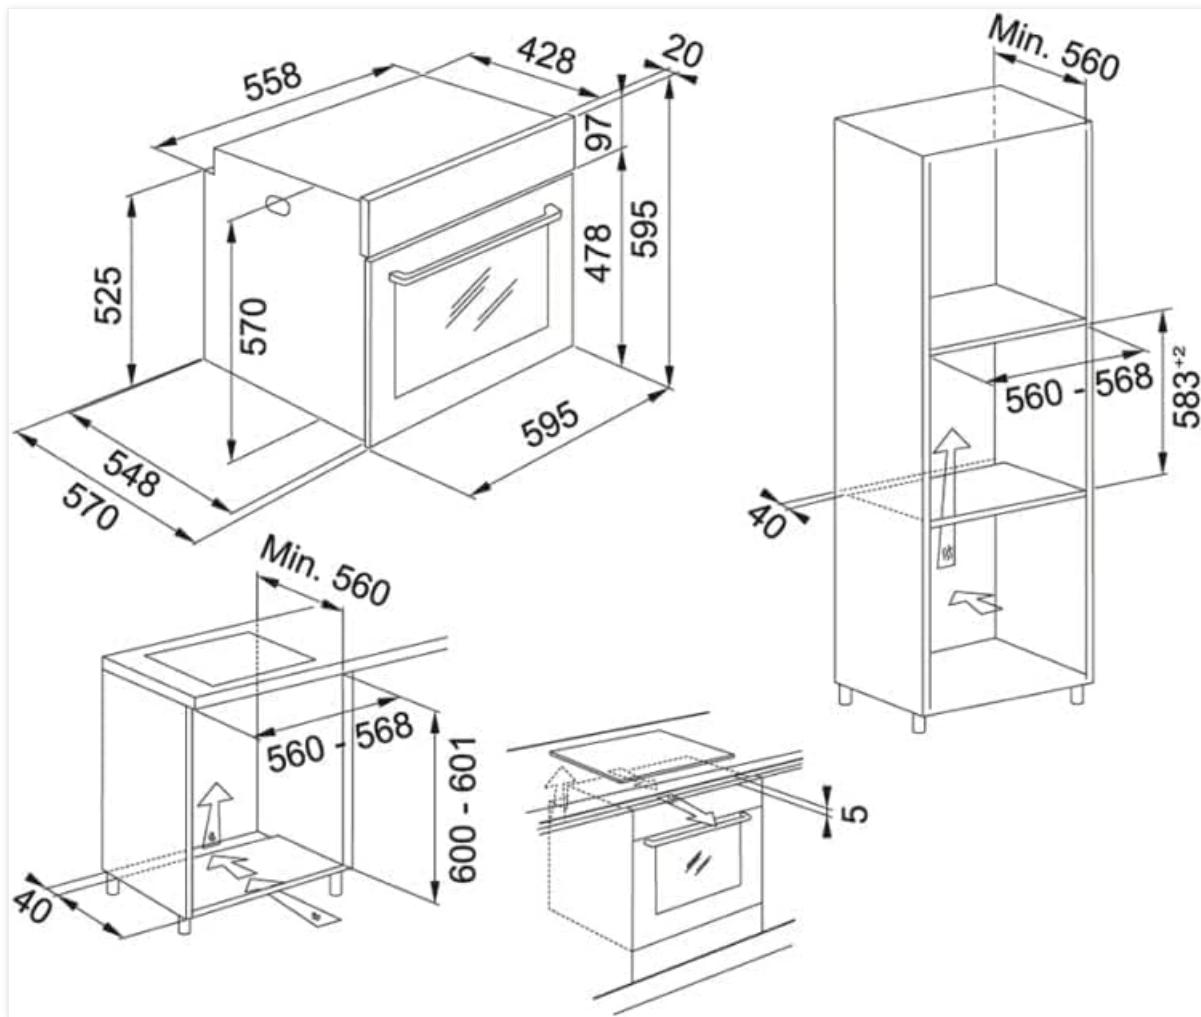


Figure 3: Installation diagram for the Franke FMA 97 P XS oven. This diagram provides detailed measurements for the oven unit (57D x 60W x 60H cm) and the required cabinet cut-out dimensions for proper built-in installation, including minimum clearances and ventilation requirements.

Installation Guidelines:

- Ensure the cabinet opening meets the specified dimensions (refer to Figure 3).
- Provide adequate ventilation space around the oven to prevent overheating.
- Connect the oven to a dedicated electrical circuit with the correct voltage (240V) and power rating (3300W).
- Secure the oven firmly within the cabinet to prevent tipping.

SETUP

Before First Use:

1. Remove all packaging materials, protective films, and accessories from the oven cavity.
2. Clean the interior of the oven and all accessories with a damp cloth and mild detergent. Dry thoroughly.
3. To eliminate any manufacturing odors, heat the empty oven at maximum temperature (e.g., 250°C) for approximately 30-60 minutes. Ensure the kitchen is well-ventilated during this process.

Setting the Clock:

Upon first connection to power, the oven display may flash. Refer to the control panel section for specific instructions on setting the current time using the touch controls.

OPERATING INSTRUCTIONS

Control Panel:

The oven features intuitive controls for easy operation:

- **Function Selector Knob:** Used to select one of the 11 cooking functions (e.g., Convection, Grill, Defrost).
- **Temperature Selector Knob:** Used to set the desired cooking temperature.
- **Digital Display:** Shows time, temperature, and selected function indicators.
- **Touch Controls:** For setting the timer, adjusting time, and other specific functions.

Cooking Functions:

Your oven offers 11 versatile cooking functions, including:

- **Convection (Fan-assisted):** Ideal for even cooking and baking on multiple levels.
- **Grill:** For browning and toasting.
- **Defrost:** Gently thaws frozen food.
- *(Other functions may include: Bottom Heat, Top Heat, Conventional, Pizza, etc. Refer to the full function list in the appliance's quick start guide for detailed descriptions.)*

General Cooking Steps:

1. Place food in the appropriate oven-safe dish on the desired rack level.
2. Turn the Function Selector Knob to choose the desired cooking mode.
3. Turn the Temperature Selector Knob to set the desired temperature.
4. If required, set the cooking duration using the timer function on the touch controls.
5. The oven will begin heating. A preheating indicator may illuminate.
6. When cooking is complete, turn both knobs to the 'Off' position.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

Exterior Cleaning:

- Wipe the exterior surfaces, including the control panel and door, with a soft cloth and mild, non-abrasive cleaner.
- For stainless steel surfaces, use a specialized stainless steel cleaner and polish in the direction of the grain.
- Avoid using abrasive pads, harsh chemicals, or spray cleaners directly on the control panel.

Interior Cleaning:

- Allow the oven to cool completely before cleaning the interior.
- Remove all racks and accessories. Wash them in warm, soapy water or in a dishwasher if suitable.
- Wipe down the interior walls and base with a damp cloth and a mild oven cleaner (follow cleaner instructions carefully).
- For stubborn stains, a paste of baking soda and water can be applied, left for a few hours, then wiped clean.

Oven Light Replacement:

Ensure the oven is unplugged and cool. Unscrew the protective cover, replace the bulb with a high-temperature resistant oven bulb of the correct wattage, and reattach the cover.

TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not heat.	No power supply; oven not turned on; timer not set.	Check power connection and circuit breaker. Ensure function and temperature knobs are set. Set the timer if required.
Oven light not working.	Bulb is faulty or loose.	Replace the oven bulb (refer to Maintenance section).
Uneven cooking.	Incorrect rack position; overloaded oven; dirty fan.	Use recommended rack positions. Avoid overcrowding. Clean the oven interior, especially around the fan.
Smoke or odor during first use.	Residual manufacturing oils.	This is normal. Run the oven empty at high temperature for 30-60 minutes in a well-ventilated area (refer to Setup).

If the problem persists after trying these solutions, please contact Franke customer support or a qualified service technician.

SPECIFICATIONS

Detailed technical specifications for the Franke FMA 97 P XS Electric Oven:

Brand	Franke
Model Number	FMA 97 P XS (Part No. 116.0606.100)
Capacity	71 Liters
Installation Type	Built-in
Power	3300 Watt
Voltage	240 Volts
Fuel Type	Electric
Energy Efficiency Class	A+
Special Features	Touch Control, Soft-close Door
Cooking Functions	11 (including Convection, Grill, Defrost)
Color	Black - Silver
Material Type	Stainless Steel
Included Components	Grill Rack, Baking Tray
Product Dimensions (DxWxH)	57 cm x 60 cm x 60 cm
Timer Function	Available

WARRANTY AND SUPPORT

Your Franke FMA 97 P XS Electric Oven comes with a comprehensive **5-year manufacturer's warranty**, covering defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or to purchase genuine spare parts, please contact Franke customer support. Keep your proof of purchase for warranty validation.

Franke Customer Support: Please refer to the Franke official website or your regional Franke distributor for contact information specific to your location.

© 2023 Franke. All rights reserved. Information in this manual is subject to change without notice.