

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CYSSJF](#) /

› [CYSSJF Wireless Caregiver Pager System CPM+HG1+SW 1+1+1 User Manual](#)

## CYSSJF CPM+HG1+SW 1+1+1

# CYSSJF Wireless Caregiver Pager System CPM+HG1+SW 1+1+1 User Manual

Comprehensive instructions for setup, operation, and maintenance of your CYSSJF Wireless Caregiver Pager System.

## 1. INTRODUCTION

---

This manual provides detailed instructions for the CYSSJF Wireless Caregiver Pager System, model CPM+HG1+SW 1+1+1. This system is designed to facilitate communication between caregivers and individuals requiring assistance, such as the elderly, patients, or those with limited mobility. It includes a plug-in receiver, an emergency call button, and a wrist call button, offering a reliable and easy-to-use solution for immediate alerts.

## 2. PRODUCT COMPONENTS

---

The CYSSJF Wireless Caregiver Pager System includes the following components:

- **Plug-in Receiver:** The main unit that receives signals from the call buttons and emits an alert. It plugs into a standard electrical outlet.
- **Emergency Call Button (Pendant):** A portable button with a "CALL" label, designed to be worn as a pendant or mounted.
- **Wrist Call Button:** A wearable button designed like a watch, for convenient access to call for assistance.



Image: Overview of the CYSSJF Wireless Caregiver Pager System, showing the plug-in receiver, emergency call button, and wrist call button.

### 3. SETUP INSTRUCTIONS

- 1. Receiver Placement:** Plug the receiver into a standard electrical outlet in a central location where the alert can be easily heard. The system has a working range of over 500 feet in open areas and can transmit signals across 2-3 floors.
- 2. Call Button Preparation:** The emergency call button and wrist call button come with pre-installed Lithium Metal batteries. These batteries are built-in, non-user-replaceable, and designed for long life.
- 3. Mounting the Emergency Call Button:**
  - **Lanyard:** The button can be worn around the neck using the provided lanyard.
  - **Wall Mounting (Adhesive):** Use the double-sided adhesive provided to attach the button to a clean, dry surface, such as a headboard, bedside, or bathroom wall.
  - **Wall Mounting (Screws):** For a more secure installation, use screws to fix the button's bracket to the wall.

4. **Wearing the Wrist Call Button:** Secure the wrist call button comfortably on the wrist.

## Easy to Use and Flexible



Press the watch button for help.



Easy to Set Up & Plug and Play



1. Hang with Lanyard



2. Double-sided Adhesive Mounting



3. Screw Mounting

Image: Illustration of flexible setup options, including wearing the wrist button, plugging in the receiver, and various mounting methods for the emergency call button.

## 500ft distance coverage

Pager has 5 Level Adjustable Volume From 0db to 110db, loud enough to be heard throughout the house



Image: Diagram illustrating the 500-foot wireless range of the caregiver pager system within a multi-story house, showing signal coverage.

## 4. OPERATING INSTRUCTIONS

- 1. Initiating a Call:** To call for assistance, press the red button on either the emergency call pendant or the wrist call button. The silicon alert button provides a positive tactile response when pressed.
- 2. Receiver Alert:** Upon receiving a signal, the plug-in receiver will activate its alert. By default, the system is set to a "long ring mode," meaning the receiver will continue to ring until the stop button on the receiver is pressed. This ensures that no call is missed.
- 3. Adjusting Ring Tones and Volume:**
  - The receiver offers 40 different ring tones to choose from.
  - There are 4 adjustable volume levels, from 0dB to 110dB, ensuring the alert is loud enough to be heard throughout the house.
  - You can assign different ring tones to different buttons or locations to quickly identify where assistance is needed.
- 4. Power Off Memory:** The receiver retains its selected ring tone and volume settings even after being powered off, eliminating the need to reconfigure settings each time.

♥ **Strong signal**  
The signal of call buttons carries across **2-3 floors** easily.

**LED Indicator**

🔊 **4th gear**  
volume adjustment

🔔 **40 ringing tones**  
to choose

♥ **Never miss a call.**  
When the button is pressed.  
The bell will **ring all the time**  
unless you press the host button.

Image: Features of the system, including strong signal transmission, LED indicator, volume adjustment, multiple ring tones, and continuous alert until stopped.

## 5. MAINTENANCE

- **Cleaning:** Wipe the receiver and call buttons with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The emergency call button (pendant) is waterproof and suitable for use in bathrooms or during light rain. However, the wrist call button and the emergency call button unit cannot be immersed in water and should be removed before bathing or showering to prevent damage.
- **Battery Life:** The call buttons contain built-in Lithium Metal batteries designed for long-term use. These are non-user-replaceable. The receiver is powered by a corded electric source.
- **Storage:** Store the system in a cool, dry place when not in use for extended periods.

## 6. TROUBLESHOOTING

- **Receiver Not Alerting:**
  - Ensure the receiver is properly plugged into a working electrical outlet.

- Check if the call button was pressed firmly.
  - Verify that the call button and receiver are within the effective operating range (up to 500 feet in open areas). Obstacles like thick walls can reduce range.
  - Confirm that the receiver's volume is not set to the lowest level (0dB).
- **Call Button Not Responding:**
    - The call buttons have long-life, non-user-replaceable batteries. If a button stops responding, it may indicate the end of its battery life. Contact customer support for assistance.
  - **Interference:** If experiencing inconsistent performance, try relocating the receiver or call buttons away from other electronic devices that might cause interference.

## 7. SPECIFICATIONS

<b>Model Number</b>	CPM+HG1+SW 1+1+1
<b>Item Weight</b>	220 g
<b>Product Dimensions</b>	11.5 x 10.5 x 9 cm
<b>Power Source (Receiver)</b>	Corded Electric
<b>Batteries (Call Buttons)</b>	1 Lithium Metal battery required (included), built-in, non-user-replaceable
<b>Control Method</b>	Touch
<b>Mounting Type</b>	Wall Mount (Adhesive/Screws), Lanyard
<b>Wireless Range</b>	500+ ft in open areas
<b>Ring Tones</b>	40 options
<b>Volume Levels</b>	4 adjustable levels (0dB to 110dB)
<b>Water Resistance (Pendant)</b>	Waterproof (not for immersion)

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. Details regarding specific warranty periods and support procedures are typically provided by the seller or manufacturer at the time of purchase.

Manufacturer: Quanzhou Shuojiang Electronic Commerce Co., Ltd.