



Manuals.plus /

- › **Nokia** /
- › Nokia X100 5G Smartphone User Manual

Nokia X100

Nokia X100 5G Smartphone User Manual

Model: X100

1. INTRODUCTION

Welcome to the user manual for your Nokia X100 5G Smartphone. This guide provides comprehensive instructions on setting up, operating, and maintaining your device. The Nokia X100 is a versatile 5G-ready smartphone designed for communication, entertainment, and productivity.



Figure 1: Nokia X100 5G Smartphone, showcasing its sleek design and Midnight Blue finish.

Please read this manual carefully to ensure proper use and to maximize the features of your Nokia X100.

2. PACKAGE CONTENTS

Before you begin, please verify that all items are present in your product package:

- Nokia X100 5G Smartphone
- USB Cable
- Quick Start Guide (separate document, not included in this manual)
- SIM Ejector Tool (may be included depending on region)

If any items are missing or damaged, please contact your retailer or Nokia support immediately.

3. PRODUCT FEATURES

The Nokia X100 is equipped with advanced features to enhance your mobile experience:

- **Display:** 6.7-inch IPS LCD with 2400 x 1080 pixels (FHD+) resolution, 20:9 aspect ratio, and 395 PPI. Features ambient light and proximity sensors.
- **Processor:** Qualcomm Snapdragon 480 SM4350 (8 nm) Octa-core processor.
- **Camera System:** 48MP Quad autofocus rear camera and a 5MP front ultrawide selfie camera.
- **Battery:** 4470 mAh non-removable battery with Qualcomm Quick Charge 3.0 support, designed for extended usage.
- **Storage:** 128GB internal storage, expandable up to 1000GB via microSD card.
- **Operating System:** Android 11.0.
- **Connectivity:** 5G cellular technology, Bluetooth, Wi-Fi, GPS.
- **Security:** Integrated Fingerprint Sensor for secure unlocking.
- **Audio:** 3.5mm Headphone jack.





Figure 2: Detail of the Nokia X100's rear camera system.

4. SETUP

4.1. Inserting SIM Card and MicroSD Card

1. Locate the SIM card tray on the side of your Nokia X100.
2. Insert the SIM ejector tool (or a small paperclip) into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card into the designated slots on the tray, ensuring they are correctly oriented.
4. Carefully push the tray back into the phone until it clicks into place.

4.2. Initial Power On and Setup Wizard

1. Press and hold the Power button (located on the side) until the Nokia logo appears.

2. Follow the on-screen instructions to complete the initial setup, which includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring security features like the fingerprint sensor.

4.3. Charging the Battery

Before first use, it is recommended to fully charge your Nokia X100. Connect the USB cable to the phone's charging port and the other end to a compatible USB power adapter or computer. The battery icon on the screen will indicate charging status.

5. OPERATING INSTRUCTIONS

5.1. Basic Navigation

- **Touch:** Tap an icon to open an app or select an item.
- **Swipe:** Drag your finger across the screen to scroll, switch screens, or close notifications.
- **Pinch:** Use two fingers to zoom in or out on photos and web pages.
- **Long Press:** Press and hold an item for more options or to move it.

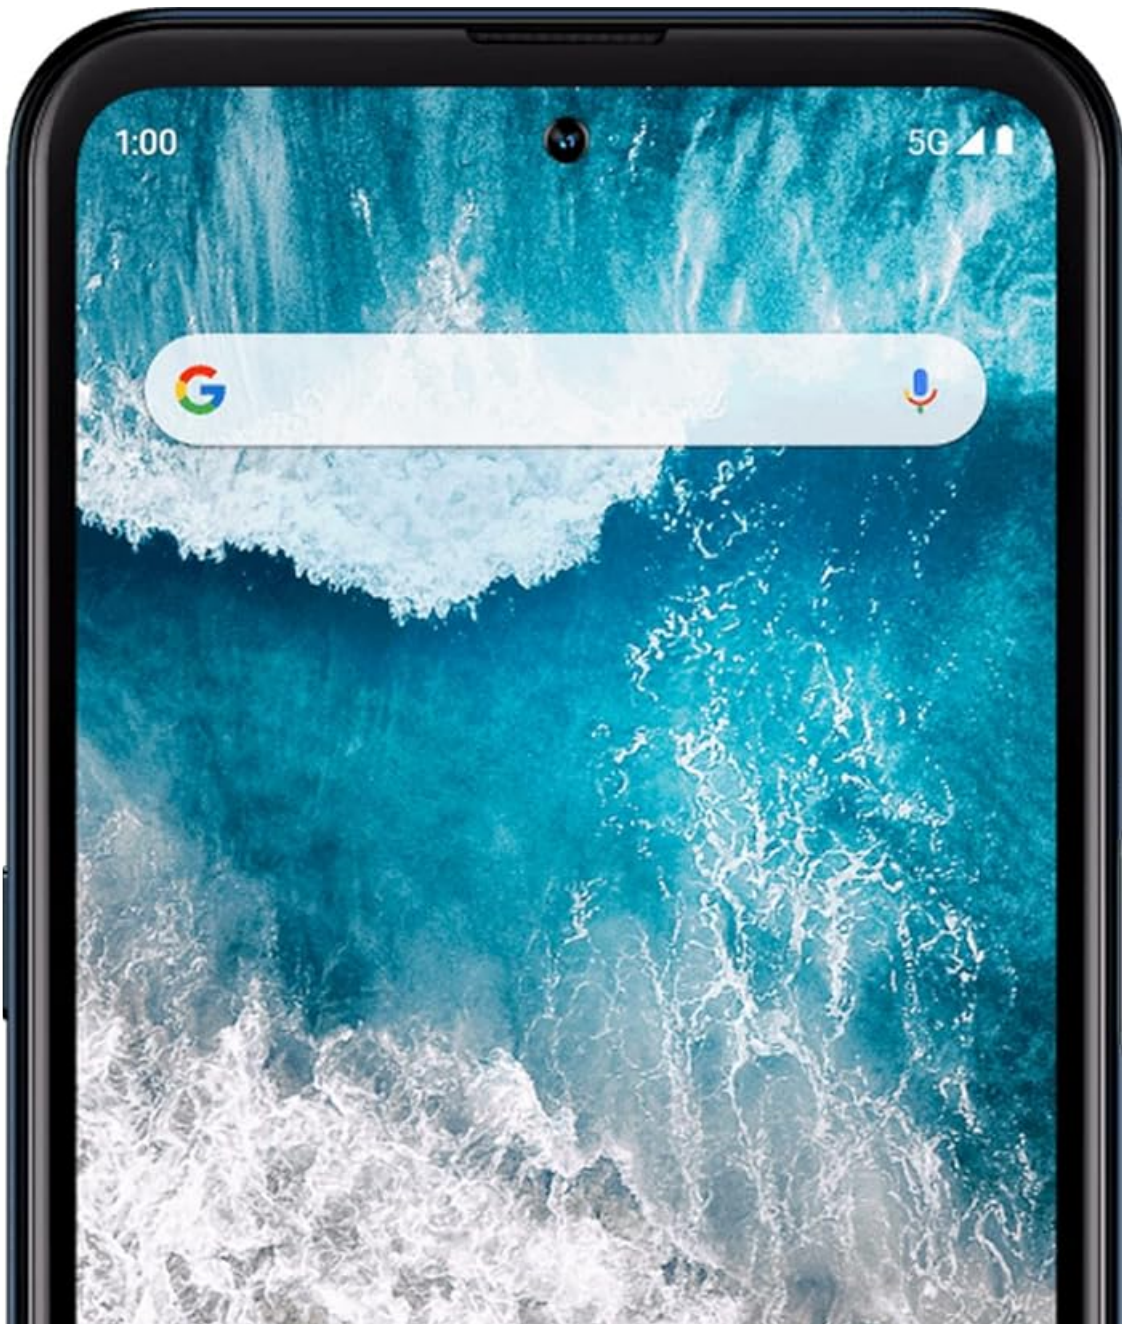




Figure 3: Nokia X100 home screen with various application icons.

5.2. Making Calls

1. Open the **Phone** app.
2. Enter the phone number using the dial pad or select a contact from your address book.
3. Tap the **Call** button to initiate the call.

5.3. Using the Camera

1. Open the **Camera** app.
2. Frame your shot using the screen as a viewfinder.
3. Tap the **Shutter** button to take a photo or start/stop video recording.
4. Switch between front and rear cameras using the camera switch icon.

6. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Nokia X100, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Water Resistance:** The Nokia X100 is not rated for water resistance. Avoid exposure to liquids.
- **Temperature:** Operate the device within recommended temperature ranges (typically 0°C to 35°C or

32°F to 95°F). Extreme temperatures can affect battery life and performance.

- **Software Updates:** Regularly check for and install software updates to ensure your device has the latest security patches and features. Go to *Settings > System > System update*
- **Battery Care:** Avoid fully discharging the battery frequently. For optimal battery health, keep the charge between 20% and 80%.
- **Storage Management:** Periodically clear unnecessary files and apps to free up storage space and maintain device speed.

7. TROUBLESHOOTING

If you encounter issues with your Nokia X100, refer to the following common solutions:

Problem	Possible Solution
Device not turning on	Ensure the battery is charged. Connect to a charger for at least 15 minutes, then try powering on again.
Apps crashing or freezing	Close and reopen the app. Clear the app's cache (<i>Settings > Apps > [App Name] > Storage > Clear cache</i>). Restart the phone.
Poor battery life	Reduce screen brightness, disable unnecessary background apps, turn off Wi-Fi/Bluetooth when not in use. Check battery usage in <i>Settings > Battery</i> .
Cannot connect to Wi-Fi	Restart your Wi-Fi router and the phone. Forget the network and reconnect (<i>Settings > Network & internet > Wi-Fi</i>).
Fingerprint sensor not working	Ensure your finger is clean and dry. Re-register your fingerprints in <i>Settings > Security > Fingerprint</i> .

If the issue persists, consider performing a factory reset (*Settings > System > Reset options > Erase all data (factory reset)*). **Warning: This will erase all data on your phone. Back up important data before proceeding.**

8. SPECIFICATIONS

Feature	Detail
Model Name	Nokia X100
Operating System	Android 11.0
Display Size	6.7 Inches IPS LCD
Resolution	2400 x 1080 pixels (FHD+)
Processor	Qualcomm Snapdragon 480 SM4350 (8 nm)
RAM	6 GB
Internal Storage	128 GB (expandable up to 1000GB via microSD)
Rear Camera	48MP Quad autofocus
Front Camera	5MP ultrawide selfie
Battery Capacity	4470 mAh
Charging	Qualcomm Quick Charge 3.0
Connectivity	5G, Bluetooth, Wi-Fi, GPS
Audio Jack	3.5 mm
Color	Midnight Blue
Dimensions	7.68 x 4.06 x 2.32 inches (Package)
Weight	11.7 ounces

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Nokia support website. As this is a renewed product, specific warranty terms may apply from the reseller (Amazon Renewed). Please check your purchase documentation for details.

For technical support, troubleshooting assistance, or service inquiries, please visit the official Nokia support website or contact their customer service. You may also refer to the Amazon Renewed support page for specific inquiries related to your renewed device.

Online Support: [Nokia Support Website](#)