

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Havells](#) /
- › [Havells Super Grooming Kit GS8714 Instruction Manual](#)

Havells GS8714

Havells Super Grooming Kit GS8714 Instruction Manual

Model: GS8714

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Havells Super Grooming Kit GS8714. Please read all instructions carefully before using the appliance and retain this manual for future reference. The Havells Super Grooming Kit GS8714 is a versatile 15-in-1 grooming solution designed for men, offering full body hair trimming and grooming with an IPX7 fully washable body, 120 minutes of run time, and fast charging capabilities.



Image 1.1: Havells Super Grooming Kit GS8714 with its packaging.

2. WHAT'S IN THE BOX

Your Havells Super Grooming Kit GS8714 package includes the following items:

- 1 Trimmer unit
- 9 Combs (2 U blade combs: 3,4,5,6,10,11,12,13 mm; 4 Extra wide T blade combs: 3,6,9,12 mm; 3 body groomer combs: 3,5,7 mm)
- 1 Pouch
- 5 Attachments (Beard Trimmer, Hair Trimmer, Body Groomer, Nose Trimmer, Precision Trimmer)
- Charging cable



Image 2.1: The trimmer unit and all included accessories and combs.

3. PRODUCT FEATURES

- **15-in-1 Super Grooming Kit:** Includes attachments for beard trimming, hair trimming, body grooming, nose trimming, and precision trimming.
- **IPX7 Fully Washable Body:** Designed for easy cleaning under running water, ensuring hygiene and convenience.
- **Long Runtime & Fast Charge:** Offers 120 minutes of cordless operation after a 90-minute fast charge.
- **Corded and Cordless Use:** Provides flexibility for use while charging or on the go.
- **Skin-Friendly Blades:** Features detachable and washable hypoallergenic stainless steel blades for comfortable and hygienic usage.
- **Trimmer Precision:** Allows for precise styling and detailing.
- **Travel Lock:** Built-in travel lock can be enabled/disabled by holding the power button for approximately 5 seconds.

CLASSY & SAFE GROOMING



Fast Charge in 1.5 hours



25+ Trimming Sessions with 2 Hours Runtime



5 Attachments 9 Combs & 1 Travel Pouch



No Nicks & Cuts Stainless Steel Blades



100% Waterproof IPX7



Image 3.1: Overview of key features including fast charging, runtime, attachments, and waterproof design.

4. SAFETY INSTRUCTIONS

- Do not immerse the charging adapter in water or other liquids.
- Keep the appliance away from children.
- Ensure the appliance is switched off before cleaning or attaching/detaching accessories.
- Do not use the appliance if the blades are damaged or broken, as this may cause injury.
- Only use the provided charging cable and adapter.
- Avoid using the trimmer on irritated or damaged skin.
- Store the appliance in a dry place when not in use.

5. CHARGING THE APPLIANCE

Before first use, fully charge the grooming kit.

1. Ensure the trimmer is switched off.

2. Connect the charging cable to the trimmer and plug the adapter into a power outlet.
3. The battery indicator will show charging status. A full charge takes approximately 90 minutes.
4. Once fully charged, the trimmer provides up to 120 minutes of cordless use.
5. Unplug the charger once charging is complete.



Image 5.1: Illustration of the trimmer connected to its charger, indicating fast charging capability.

6. ATTACHING AND DETACHING ACCESSORIES

To change attachments or combs:

1. Ensure the trimmer is switched off.
2. To remove an attachment, gently push it upwards from the front of the trimmer head until it detaches.
3. To attach a new head, align the attachment with the trimmer body and press down firmly until it clicks into place.
4. To attach a comb, slide it onto the desired trimmer head until it locks securely. Ensure the comb is fully seated to prevent uneven trimming.

- To remove a comb, gently lift it off the trimmer head.

7. OPERATING INSTRUCTIONS

Always ensure your skin is clean and dry before grooming.

7.1. Beard Trimming (U-Shape Blade & Precision Trimmer)

- Attach the U-shape blade for general beard trimming or the precision trimmer for detailing.
- Select the desired comb length (e.g., 3mm, 4mm, 5mm, 6mm, 10mm, 11mm, 12mm, 13mm for U-blade).
- Turn on the trimmer and move it against the direction of hair growth for an even trim.
- Use the precision trimmer without a comb for sharp lines and edges around the beard.

7.2. Hair Trimming (Extra-Wide T-Blade)

- Attach the extra-wide T-blade.
- Select one of the 4 extra-wide T blade combs (3mm, 6mm, 9mm, 12mm) for desired hair length.
- Move the trimmer slowly and steadily against the direction of hair growth.

7.3. Body Grooming (Body Groomer)

- Attach the body groomer head.
- Use with one of the 3 body groomer combs (3mm, 5mm, 7mm) for sensitive areas or without a comb for a closer trim.
- Move the trimmer gently over the skin, stretching the skin taut in sensitive areas.

7.4. Nose & Ear Trimming (Nose Trimmer)

- Attach the nose and ear trimmer head.
- Gently insert the trimmer tip into the nostril or ear canal.
- Move the trimmer in a circular motion to trim unwanted hair. Do not insert too deeply.



U SHAPE BLADE TRIMMER



EXTRA-WIDE T SHAPE BLADE TRIMMER



PRECISION TRIMMER



BODY GROOMER | UPPER BODY



BODY GROOMER | LOWER BODY



NOSE & EAR TRIMMER

8. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene.

1. Ensure the trimmer is switched off and unplugged from the charger.
2. Remove the attachment head and rinse it under running water.
3. The entire trimmer body is IPX7 fully washable; it can be rinsed under running water.
4. Use the cleaning brush (if included) to remove any trapped hairs from the blades and combs.
5. Allow all parts to air dry completely before reassembling or storing.
6. Periodically apply a small drop of lubricating oil (if included) to the blades for smooth operation.



Image 8.1: The trimmer being cleaned under running water, demonstrating its fully washable design.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for 90 minutes.
Trimmer pulls hair or cuts poorly.	Blades are dull or clogged with hair.	Clean the blades thoroughly. If blades are dull, consider replacement (contact customer support).
Attachment does not fit securely.	Attachment not aligned correctly.	Ensure the attachment is properly aligned and pressed firmly until it clicks into place.
Battery indicator not working.	Possible internal fault.	Contact customer support for assistance.

10. SPECIFICATIONS

- **Model Number:** GS8714
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Special Feature:** IPX7 Waterproof
- **Blade Material:** Metal (Stainless Steel)
- **Item Weight:** 281 grams
- **Product Dimensions (LxWxH):** 16.4 x 4 x 4.9 Centimeters
- **Run Time:** Up to 120 minutes
- **Charge Time:** Approximately 90 minutes
- **Country of Origin:** China
- **Manufacturer:** Imported By Havells India Limited

11. WARRANTY AND SUPPORT

The Havells Super Grooming Kit GS8714 comes with a **2-year guarantee** from the date of purchase. For warranty claims, technical support, or further inquiries, please refer to the contact information provided with your product packaging or visit the official Havells website. You can also find more information on the product detail page on Amazon: [Amazon Product Page](#).