

KAFTKO K17

KAFTKO Replacement Floor Brush for MOOSOO K17 Cordless Stick Vacuum Cleaner

Instruction Manual

1. PRODUCT OVERVIEW

This document provides instructions for the KAFTKO replacement floor brush, designed for use with the MOOSOO K17 cordless stick vacuum cleaner. This floor brush is an essential component for effective cleaning across various floor types.



Image 1: Internal view of the electric turbo floor brush. This image illustrates the built-in motor and brush roll mechanism, highlighting how the brush provides effective and powerful vacuuming.

2. COMPATIBILITY

This replacement floor brush is specifically designed and compatible with the **MOOSOO K17** cordless stick vacuum cleaner. Please verify your vacuum cleaner model before installation to ensure proper fit and function.

3. SAFETY INFORMATION

- Always ensure the vacuum cleaner is turned off and unplugged (if applicable) before attaching, detaching, or performing maintenance on the floor brush.
- Keep fingers, hair, and loose clothing away from the rotating brush roll during operation.
- Do not use the brush on wet surfaces or to pick up liquids.

- Inspect the brush regularly for damage or wear. Replace if necessary to prevent damage to your vacuum or floors.

4. PACKAGE CONTENTS

- 1 x KAFTKO Replacement Floor Brush for MOOSOO K17

5. SETUP AND INSTALLATION

Follow these steps to attach the replacement floor brush to your MOOSOO K17 vacuum cleaner:

1. Ensure your MOOSOO K17 vacuum cleaner is powered off and disconnected from any charging source.
2. If replacing an existing brush, gently press the release button or lever on the current floor brush connection point and pull it away from the main vacuum body or extension wand.
3. Align the new KAFTKO replacement floor brush with the connection point on the vacuum's extension wand or main body.
4. Push the floor brush firmly onto the connection point until you hear a click, indicating it is securely locked in place.
5. Gently tug on the brush to confirm it is securely attached before operating the vacuum.

Electric Turbo Floor Brush

The built-in motor provides effective, accurate and powerful vacuuming.



Image 2: Top view of the motorized brush head. This image shows the overall design of the brush head, including the red release button which is typically used for attachment or detachment from the vacuum's main body or extension wand.

6. OPERATING INSTRUCTIONS

Once the floor brush is securely attached, operate your MOOSOO K17 vacuum cleaner as usual. The brush is designed to work effectively on various floor types, including parquet, laminate flooring, and tiles, providing quiet and efficient cleaning. The motorized brush assists in agitating dirt and debris for thorough removal.

7. MAINTENANCE

Regular maintenance of your floor brush ensures optimal performance and extends its lifespan.

Cleaning the Brush Roll:

1. Turn off and unplug the vacuum cleaner.
2. Locate the brush roll access cover on the bottom of the floor brush. Depending on the design, you may need to unlatch clips or unscrew fasteners to open it.
3. Carefully remove the brush roll.

4. Use scissors or a brush cleaning tool to cut and remove any tangled hair, threads, or debris from the brush roll.
5. Wipe the brush roll and the inside of the brush head housing with a dry or slightly damp cloth. Ensure all parts are completely dry before reassembly.
6. Reinsert the brush roll, ensuring it is properly seated, and close the access cover securely.

Checking for Obstructions:

Periodically check the air pathways within the brush head for any blockages that might reduce suction or prevent the brush from spinning. Clear any obstructions found.

8. TROUBLESHOOTING

- **Brush not spinning:** Check for tangled hair or debris obstructing the brush roll. Ensure the brush is securely attached to the vacuum.
- **Reduced suction:** Verify that the brush head is free from blockages. Also, check other parts of your vacuum (dustbin, filters) as per your MOOSOO K17 manual.
- **Unusual noise:** Turn off the vacuum immediately and inspect the brush roll for any foreign objects or damage.

If issues persist after troubleshooting, please refer to the support section.

9. SPECIFICATIONS

- **Product Name:** Vacuum Cleaner Floor Brush
- **Compatibility:** MOOSOO K17 Cordless Stick Vacuum Cleaner
- **Material:** Environmentally friendly filter media (for internal components)
- **Included Components:** Brush
- **Item Weight:** Approximately 0.035 ounces

10. WARRANTY AND SUPPORT

For any questions regarding this KAFTKO replacement floor brush or for support, please contact the seller or KAFTKO customer service. Please refer to your purchase documentation for specific warranty details.