

INOKIM OX

INOKIM OX Super Electric Scooter User Manual

Model: OX

Brand: INOKIM

INTRODUCTION

Welcome to the INOKIM OX Super Electric Scooter user manual. This guide provides essential information for the safe operation, maintenance, and optimal performance of your new electric scooter. Please read this manual thoroughly before your first ride to ensure a safe and enjoyable experience.

Important Safety Information

- Always wear a helmet and appropriate safety gear.
- Familiarize yourself with local regulations regarding electric scooter use.
- Perform a pre-ride check before each use.
- Do not ride under the influence of alcohol or drugs.
- Avoid riding in adverse weather conditions.

PRODUCT OVERVIEW

The INOKIM OX Super Electric Scooter is designed for both urban commuting and off-road adventures, featuring a powerful motor, long-range battery, and advanced suspension system.

Key Features

- **Patented Adjustable Suspension (OSAP):** Fine-tune performance for city or off-road riding.
- **Powerful 1000W Brushless Hub Motor:** Reaches speeds up to 27.9 mph with three speed modes.
- **Long-Lasting Battery:** 57.6V 20.8Ah battery offers up to 60 miles range.
- **Advanced Safety Features:** Front drum brake and rear hydraulic disc brake for precise stopping.
- **Effortless Portability:** Quick folding design for easy transport and storage.

- **10-inch Pneumatic Tires:** For a comfortable and stable ride.
- **Digital Display:** Smart control display for essential ride information.
- **6 Light System:** Includes headlights, side mood lights, tail light, and brake light for enhanced visibility.

Scooter Components



This image displays the overall design of the INOKIM OX Super Electric Scooter, highlighting its sleek profile and robust build. Key components visible include the handlebars, stem, deck, front and rear wheels, and the distinctive single-sided swingarms.

DIGITAL DISPLAY

Smart Control Display



Adjustable
Board Height



Rear Disc Brake



Front Disc Brake



DUAL BRAKING

System

The smart control digital display provides real-time information such as speed, trip distance, and odometer readings. The image also illustrates the adjustable board height feature and the dual braking system, which includes a front drum brake and a rear hydraulic disc brake for effective stopping power.

INOKIM

6 Light System



2 Headlights



2 Side Mood Lights



1 Tail light



1 Brake light



For enhanced visibility and safety, the INOKIM OX is equipped with a comprehensive 6-light system. This includes bright headlights for illuminating your path, side mood lights for increased side visibility, and a tail light with an integrated brake light to alert others of your presence and braking.

SETUP

Unboxing and Initial Assembly

Your INOKIM OX Super Electric Scooter comes partially assembled. Follow these steps to complete the setup:

1. Carefully remove the scooter and all accessories from the packaging.
2. Unfold the scooter and secure the folding mechanism.
3. Attach the handlebar to the stem. Ensure all connections are tight and secure. Refer to the included tool kit for necessary wrenches.
4. Inspect all components for any signs of damage from shipping.

Initial Charging

Before your first ride, fully charge the scooter's battery. The initial charge may take longer than subsequent charges.

- Locate the charging port, typically on the side of the deck.
- Connect the charger to the scooter, then plug it into a standard electrical outlet.
- The charging indicator light on the charger will change (e.g., from red to green) when charging is complete.
- A full charge takes approximately 11 hours.
- Do not overcharge the battery. Disconnect the charger once charging is complete.

OPERATING INSTRUCTIONS

Powering On/Off

- To power on, press and hold the power button on the digital display until the screen illuminates.
- To power off, press and hold the power button again until the screen turns off.

Riding the Scooter

For your first ride, choose a flat, open area away from traffic. It is recommended to start slowly and gradually increase your speed as you become comfortable.

1. Place one foot firmly on the deck and use the other foot to push off the ground to gain initial momentum.
2. Once moving, gently press the throttle to accelerate.
3. Place your second foot on the deck. Maintain a balanced stance.
4. To slow down or stop, gently apply the brake levers.

Speed Modes

The INOKIM OX offers three speed modes to suit different riding conditions and preferences. Consult your digital display for current speed mode and instructions on how to switch between them.

Adjustable Suspension (OSAP)

The patented OX Suspension Adapter Patent (OSAP) allows you to adjust the scooter's suspension for various terrains:

- **Low Setting:** Provides a lower center of gravity, ideal for city cruising, enhanced safety, and speed on smooth surfaces.
- **High Setting:** Recommended for off-road excursions and navigating rougher terrain, offering increased ground clearance and shock absorption.



This image highlights the 'Safety FIRST' aspect of the INOKIM OX, demonstrating the patented OSAP system. The low deck setting provides greater stability and balance for urban riding, while the high setting is ideal for comfortable rides over potholes and gravel on off-road paths.

This video provides a visual demonstration of the INOKIM OX Electric Scooter in action, showcasing its dual suspension system on various terrains, its powerful motor, and its overall design. It illustrates the scooter's capability for both smooth urban rides and more challenging off-road conditions, emphasizing comfort and control.

MAINTENANCE

Battery Care

Proper battery care is crucial for extending the lifespan and maintaining the performance of your INOKIM OX battery.

- Charge the battery fully before first use and after each ride, especially if the battery level is low.
- Avoid completely draining the battery.
- If storing the scooter for an extended period, charge the battery to about 50-70% and recharge every 1-2 months.
- Use only the original INOKIM charger provided with your scooter.

- Red Dot Design Award electric scooter
- Powerful 1000W motor, 57.6V
- 20.8Ah battery
- Water resistant IPX4
- Dual single-sided adjustable suspension
- Designed for urban and off-road riding



This image emphasizes the impressive battery life of the INOKIM OX, powered by a Super High-Capacity 57.6V 20.8Ah battery, capable of providing a maximum range of up to 60 miles on a single charge. This ensures extended rides for daily commutes or leisure.

Tire Maintenance

The 10-inch pneumatic tires require regular inspection and proper inflation.

- Check tire pressure regularly. Refer to the tire sidewall for recommended PSI.
- Inspect tires for wear, punctures, or damage before each ride.
- Promptly address any flat tires or issues to prevent further damage.

General Cleaning and Storage

- Clean the scooter with a damp cloth. Avoid using high-pressure water or harsh chemicals.
- Store the scooter in a cool, dry place, away from direct sunlight and extreme temperatures.
- Utilize the quick folding mechanism for compact storage.

TROUBLESHOOTING

This section addresses common issues you might encounter with your INOKIM OX Super Electric Scooter.

Problem	Possible Cause	Solution
Scooter does not power on	Low battery; Loose connections; Faulty power button	Charge the battery; Check all cable connections; Contact customer support if issue persists.
Reduced speed or range	Low battery; Incorrect speed mode; Overloaded scooter; Tire pressure too low	Fully charge battery; Switch to a higher speed mode; Ensure weight limit (265 lbs) is not exceeded; Inflate tires to recommended PSI.
Unresponsive or stuck throttle	Throttle mechanism issue; Wiring problem	Ensure throttle is clean and free of debris; Contact customer support for inspection and repair.
Grinding noise from wheels/brakes	Brake pad wear; Misaligned brakes; Debris in brake system	Inspect brake pads for wear and replace if necessary; Adjust brake calipers; Clean brake area; Contact customer support if noise persists.
Frequent flat tires	Under-inflated tires; Punctures; Worn tires	Maintain correct tire pressure; Inspect tires for embedded objects and remove; Replace inner tube or tire if damaged.

For issues not listed here or if solutions do not resolve the problem, please contact INOKIM customer support.

SPECIFICATIONS

Detailed technical specifications for the INOKIM OX Super Electric Scooter:

Feature	Specification
Brand	INOKIM

Feature	Specification
Model Name	OX
Motor Power	1000W Brushless Hub Motor (1300W Peak)
Top Speed	27.9 MPH
Max Distance Range	Up to 60 Miles
Battery	57.6V 20.8Ah
Charging Time	Approx. 11 hours
Weight Limit	265 Pounds
Item Weight	62 Pounds
Wheel Size	10 Inches
Wheel Type	Pneumatic
Suspension Type	Dual Suspension (OSAP)
Brake Style	Front drum & Rear hydraulic disc brake
Material	Aviation Aluminum-Alloy
Special Features	Digital Display, Foldable, Rechargeable, Water-Resistant
Item Dimensions (LxWxH)	48 x 23.2 x 51.2 inches

WARRANTY AND SUPPORT

Warranty Information

The INOKIM OX Super Electric Scooter comes with a **2-year manufacturer's limited warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the official INOKIM website or contact customer support.

Customer Support

If you have any questions, require technical assistance, or need to make a warranty claim, please contact INOKIM customer support through their official channels. You can often find contact information on the INOKIM website or through your retailer.

For more information, visit the official [INOKIM Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question