



[Manuals.plus](#) /

> [soges](#) /

> [soges 3-Tier Kitchen Baker's Rack with Power Outlet & USB Ports Instruction Manual](#)

## soges 10CZSSW5S-WH-US

# soges 3-Tier Kitchen Baker's Rack with Power Outlet & USB Ports Instruction Manual

Model: 10CZSSW5S-WH-US

[Introduction](#)

[Safety Information](#)

[Parts  
List](#)

[Setup & Assembly](#)

[Operating  
Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &  
Support](#)

## 1. INTRODUCTION

---

Thank you for choosing the soges 3-Tier Kitchen Baker's Rack. This versatile storage solution is designed to enhance your kitchen organization with its multi-functional shelving, integrated power outlets, and USB ports. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new baker's rack.



Image 1.1: Fully assembled soges 3-Tier Kitchen Baker's Rack, showcasing its design and capacity for various kitchen appliances and storage items.

## 2. SAFETY INFORMATION

---

Please read all safety warnings and instructions carefully before assembling and using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly to avoid damaging the material.
- Keep children and pets away during assembly.
- Do not exceed the maximum weight capacity of 50 lbs per shelf.
- Ensure the power cord is not pinched or damaged. Do not use if the cord is damaged.

- Only plug in appliances that are within the specified electrical ratings of the power outlets and USB ports.
- Avoid placing hot items directly on the wooden surfaces without protection.
- Regularly check all connections and fasteners to ensure they remain secure.
- This product is intended for indoor use only.

### 3. PARTS LIST

---

Before beginning assembly, verify that all components listed below are present in your package. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
A	Top Shelf (Wood)	1
B	Middle Shelves (Wood)	2
C	Bottom Shelf (Wood)	1
D	Metal Frame (Left)	1
E	Metal Frame (Right)	1
F	X-Brace	2
G	Power Outlet Unit (2 AC, 2 USB)	1
H	Wire Basket (Pull-out)	1
I	S-Hooks	5
J	Adjustable Feet Pads	4
K	LED Light Strip	1
L	Hardware Pack (Screws, Allen Wrench)	1



*Image 3.1: Illustration of various components included in the package, such as shelves, frame parts, and hardware.*


## 4. SETUP & ASSEMBLY INSTRUCTIONS

---

Follow these steps carefully to assemble your soges 3-Tier Kitchen Baker's Rack. It is recommended to have two people for assembly.

### Step 1: Assemble the Metal Frame

1. Attach the adjustable feet pads (J) to the bottom of the metal frame pieces (D and E).
2. Connect the two metal frame pieces (D and E) using the horizontal support bars and screws from the hardware pack (L). Do not fully tighten screws yet.
3. Attach the X-braces (F) to the back of the frame using the provided screws. This adds stability.

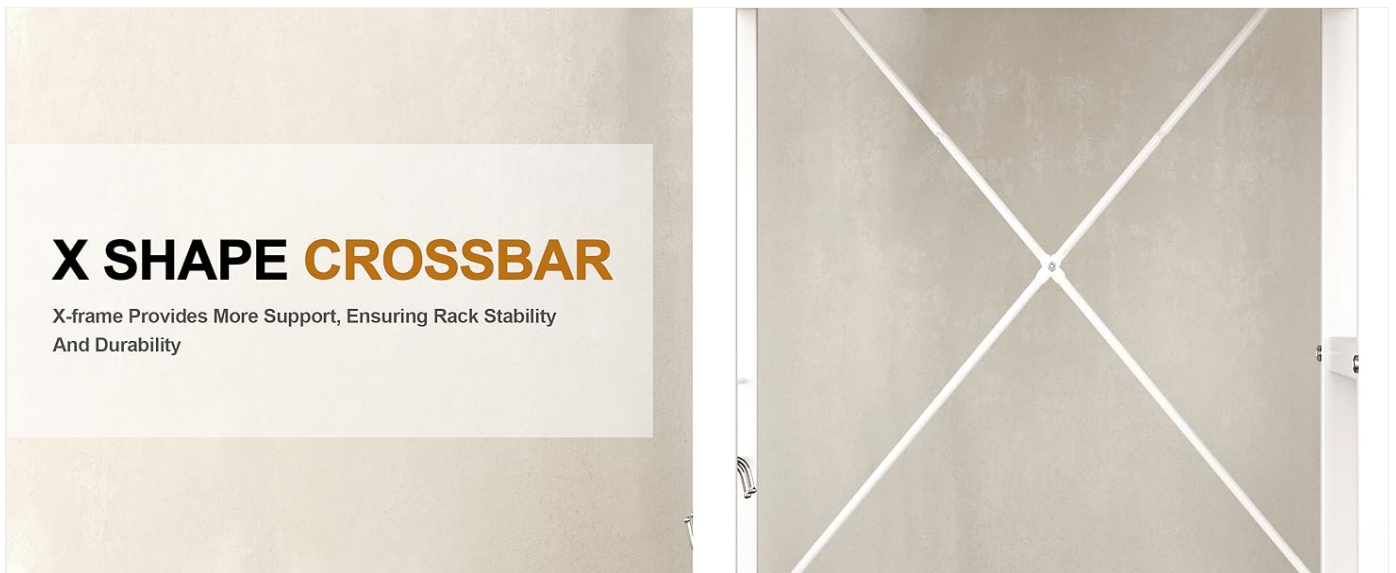 

*Image 4.1: Detail of the X-brace providing structural support to the metal frame.*

## **Step 2: Install Shelves**


1. Place the bottom shelf (C) onto the lowest supports of the metal frame and secure it with screws.
2. Install the middle shelves (B) into their designated positions, securing them with screws.
3. Position the top shelf (A) and secure it to the top of the metal frame.



*Image 4.2: The baker's rack frame with all shelves installed, ready for accessories.*

### **Step 3: Attach Power Outlet Unit and Accessories**

 
1. Mount the power outlet unit (G) to the designated slot on the side of the rack, ensuring it is flush and secure.
2. Slide the wire basket (H) into its runners under one of the shelves.
3. Attach the S-hooks (I) to the side bars or designated areas for hanging utensils.
4. Affix the LED light strip (K) to your desired location on the rack using its adhesive backing.



2 AC Outlets



 2 USB Ports

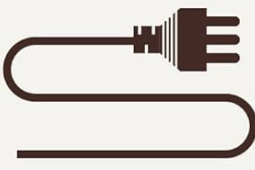


4.9 Foot Power Cord


Image 4.3: Detail showing the integrated power outlet unit with two AC outlets and two USB ports.

# PRODUCT DETAILS

 
Make every detail of the product carefully

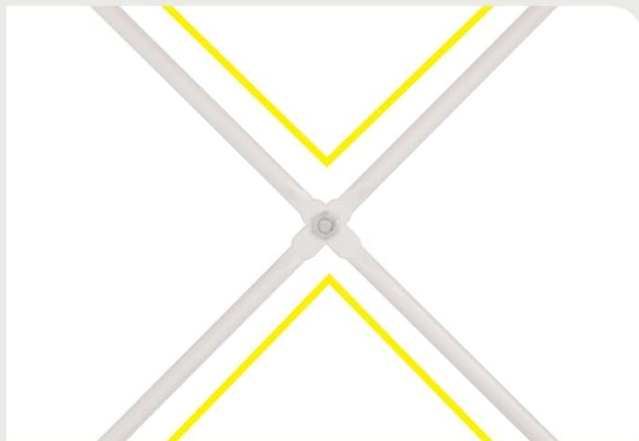

**X Bar Frame**

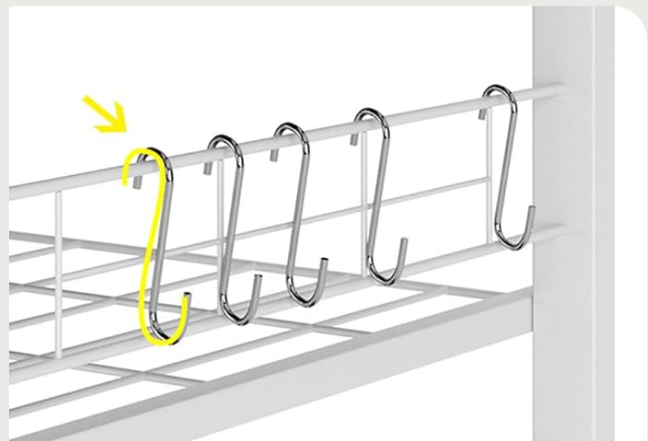 

**Hanging Hooks**

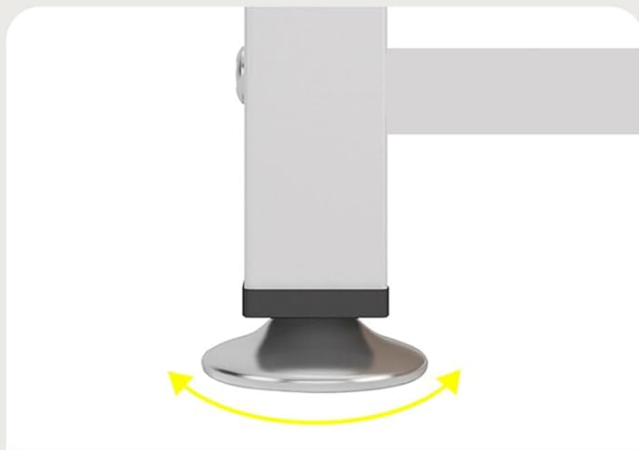 

**Adjustable Feet Pads**



**Smooth Shelf Surface**

*Image 4.4: The pull-out wire basket, ideal for storing fruits or frequently accessed items.*

## Step 4: Final Tightening and Adjustment

Once all parts are in place, go back and fully tighten all screws. Adjust the feet pads (J) to ensure the rack is stable and level on uneven floors.

## 5. OPERATING INSTRUCTIONS

---

### Using the Power Outlets and USB Ports

The baker's rack is equipped with 2 standard AC power outlets and 2 USB ports for convenient charging of small kitchen appliances and electronic devices.

- Plug the rack's main power cord into a grounded wall outlet.
- Insert appliance plugs into the AC outlets. Ensure appliances do not exceed the total wattage rating of the power strip.

- Connect USB devices to the USB ports for charging.
- Always unplug the rack from the wall outlet when not in use or before cleaning.



## LARGE STORAGE CAPACITY

Different Heights For Different Storage Requirements



Image 5.1: The integrated power strip with appliances plugged in, demonstrating convenient access to power.

## Using the LED Light Strip

The included LED light strip provides ambient lighting. Use the remote control to turn the light on/off and adjust brightness or modes as desired.

- Ensure the LED strip is properly connected to its power source (usually a USB port or a dedicated adapter).
- Point the remote control towards the LED strip's receiver to operate.



**Waterproof Warm White Light**



Can Be Controlled Remotely

Light Strip Paste Freely

Image 5.2: The baker's rack illuminated by the LED light strip, highlighting stored items.

## General Storage and Organization

Utilize the multiple shelves for various kitchen items, from small appliances like microwaves and coffee makers to cookbooks and pantry staples. The wire basket is suitable for fruits or vegetables, and the S-hooks are perfect for hanging mugs, towels, or cooking utensils.



Image 5.3: The baker's rack organized with a microwave, coffee machine, pots, and other kitchen essentials.

## 6. MAINTENANCE

---

Proper care and maintenance will extend the life of your baker's rack.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. For stubborn stains, use a mild soap solution and dry immediately. Avoid abrasive cleaners or harsh chemicals that can damage the finish.
- **Spills:** Clean up spills immediately to prevent water damage or staining, especially on the wooden shelves.
- **Hardware Check:** Periodically check all screws and connections to ensure they are tight. Retighten if necessary.
- **Electrical Components:** Keep the power outlets and USB ports dry and free from dust. Do not attempt to disassemble or repair the electrical unit yourself.

## 7. TROUBLESHOOTING

---

Refer to this section for solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Rack is wobbly/unstable.	Uneven floor; loose screws.	Adjust the feet pads until the rack is stable. Tighten all assembly screws.
Power outlets/USB ports not working.	Rack not plugged in; tripped circuit breaker; faulty appliance.	Ensure the rack's main power cord is securely plugged into a working wall outlet. Check your home's circuit breaker. Test with a different appliance. If still not working, contact customer support.
LED light strip not turning on.	Not connected to power; remote battery dead; faulty strip.	Ensure the LED strip is properly connected to its power source. Replace remote battery. If issues persist, contact customer support.
Wire basket does not slide smoothly.	Debris in runners; bent runners.	Clean the runners of any debris. Gently check if the runners are bent and carefully adjust if possible.

## 8. SPECIFICATIONS

---

Detailed technical specifications for the soges 3-Tier Kitchen Baker's Rack.

Feature	Detail
Model Number	10CZSSW5S-WH-US
Brand	soges
Material	Metal, Wood (MDF Board)
Color	White
Product Dimensions (D x W x H)	15.7"D x 35.4"W x 32.6"H
Number of Shelves	3
Shelf Weight Capacity	50 Pounds (per shelf)
Power Outlets	2 AC Outlets
USB Ports	2 USB Ports
Power Cord Length	4.9 Feet (approx.)
Special Features	Waterproof surfaces, X-bracing, Adjustable feet pads, LED light strip, Pull-out wire basket, 5 S-hooks
Assembly Required	Yes
Item Weight	30 Pounds

# PRODUCT DIMENSIONS

Multi-functional Oversized Shelving

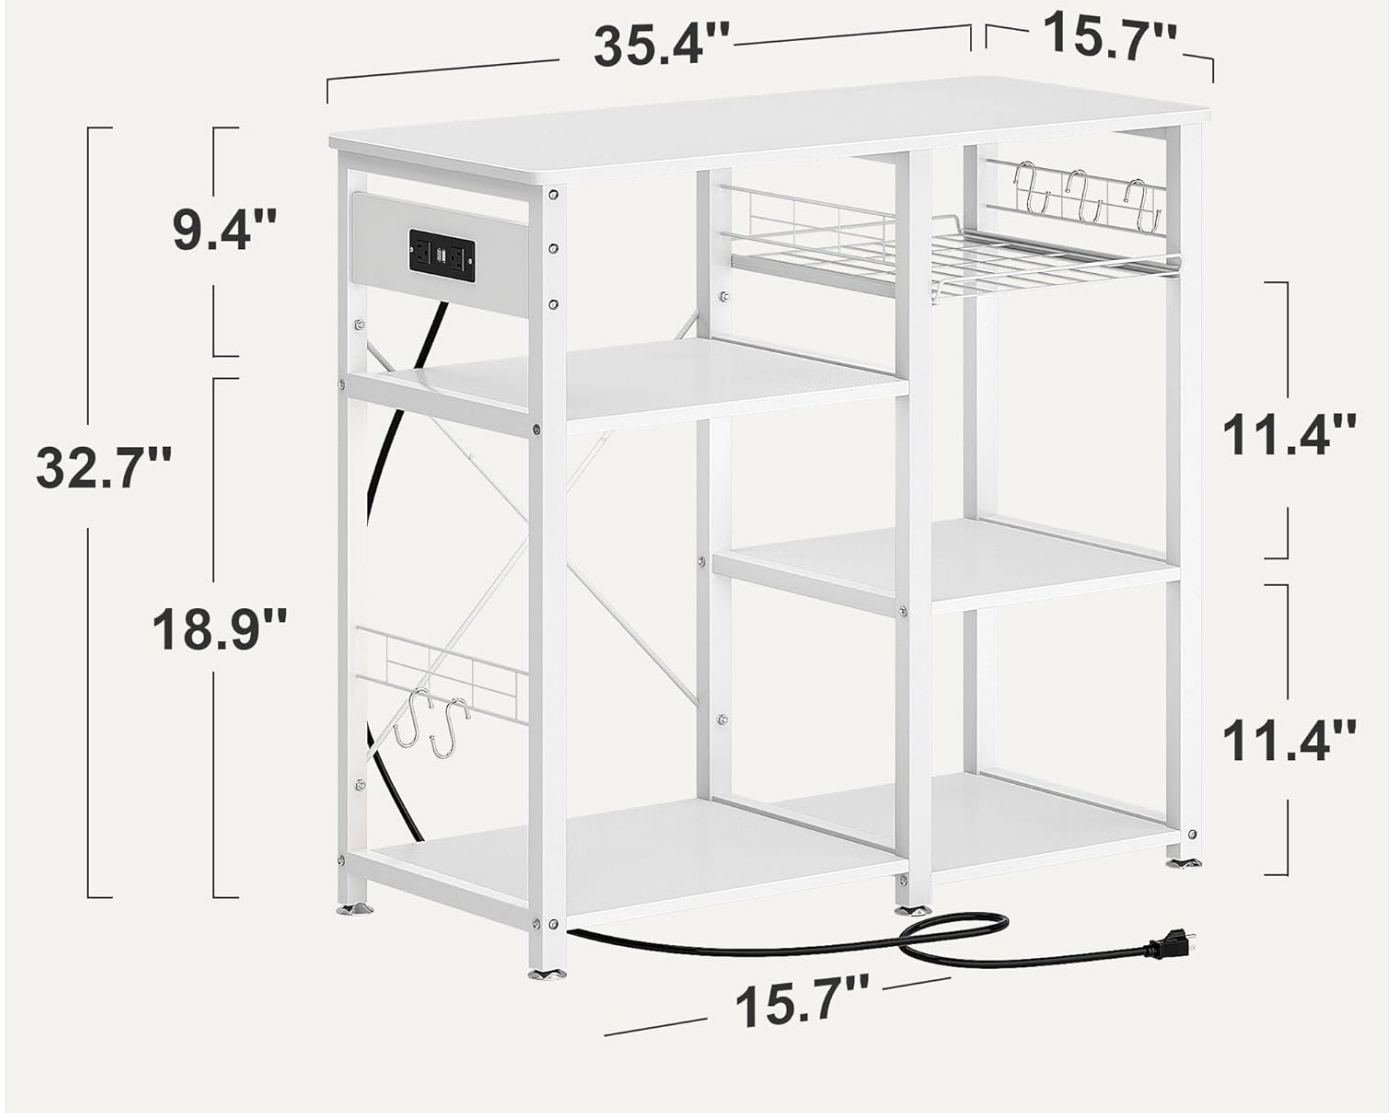 


Image 8.1: Diagram illustrating the precise dimensions of the soges 3-Tier Kitchen Baker's Rack.

## 9. WARRANTY & SUPPORT

soges is committed to providing high-quality products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official soges website. If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact our customer support team:

**Email:** [support@soges.com](mailto:support@soges.com)

**Phone:** 1-800-XXX-XXXX

**Website:** [Visit the soges Store on Amazon](#)

Please have your model number (10CZSSW5S-WH-US) and purchase date ready when contacting support.



