



Manuals.plus /

› Brother /

› Brother DCP-L2665DW - 3-in-1 Multifunction Printer (Print/Scan/Copy) Black and White Laser - WiFi and Ethernet - 50-Sheet Automatic Document Feeder - EcoPro Plan Eligible 34 Pages per minute Standard Print/Scan/Copy WIFI

Brother DCP-L2665DW

Brother DCP-L2665DW Multifunction Laser Printer User Manual

Model: DCP-L2665DW

1. PRODUCT OVERVIEW

The Brother DCP-L2665DW is a versatile 3-in-1 monochrome laser multifunction printer designed to enhance productivity in both home and office environments. It offers high-speed printing, scanning, and copying capabilities, along with automatic duplex printing and efficient paper handling.

Key features include:

- Print speeds up to 34 pages per minute (ppm).
- Automatic duplex printing at up to 16 faces per minute.
- Scan speeds up to 22.5 faces per minute.
- 6.8cm color touchscreen control panel.
- Ethernet, 5GHz WiFi, and USB connectivity.
- 256 MB memory.
- 50-sheet Automatic Document Feeder (ADF).
- 250-sheet paper input tray.
- Comes with a 1,200-page starter toner.
- Optional 3,000-page toner available.



Figure 1.1: Front view of the Brother DCP-L2665DW multifunction laser printer. This image shows the compact design and the main components including the paper tray and control panel.



Triplice livello di sicurezza che interessa dispositivo, rete e documento

Figure 1.2: Diagram highlighting key features of the Brother DCP-L2665DW. This includes the 6.8cm touchscreen display, automatic document feeder (ADF), duplex printing capability, 250-sheet paper capacity, and toner information.

2. SETUP GUIDE

2.1 Unpacking and Initial Placement

Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the exterior and interior of the device. Place the printer on a stable, flat surface with adequate space around it for ventilation and access to connections.



Figure 2.1: A user unboxing and preparing the Brother DCP-L2665DW for initial setup. Ensure all packaging materials are removed before powering on.

2.2 Installing Toner Cartridge and Drum Unit

1. Open the front cover of the printer.
2. Remove the toner cartridge and drum unit assembly from its protective bag.
3. Gently slide the toner cartridge into the drum unit until it clicks into place.
4. Insert the combined toner and drum unit assembly into the printer.
5. Close the front cover securely.

2.3 Loading Paper

Open the paper tray and adjust the paper guides to fit the size of your paper (e.g., A4). Load up to 250 sheets of plain paper into the tray. Ensure the paper is not creased or curled. Close the paper tray.

2.4 Connecting Power and Initial Power On

Connect the power cord to the printer and then to a power outlet. Press the power button to turn on the printer. Follow the on-screen instructions on the 6.8cm color touchscreen for initial setup, including language selection.

2.5 Network and USB Connectivity

The DCP-L2665DW supports Ethernet, 5GHz WiFi, and USB connections.

- **USB Connection:** Connect a USB cable from the printer to your computer.
- **Ethernet Connection:** Connect an Ethernet cable from the printer to your network router or switch.
- **WiFi Connection:** On the printer's touchscreen, navigate to the network settings. Select "WLAN" or "Wi-Fi" and follow the prompts to connect to your wireless network. You may need to enter your network password.



Connettività wireless, USB e mobile tramite l'app Brother Mobile Connect

Figure 2.2: Rear view of the Brother DCP-L2665DW, illustrating the available connectivity ports for USB and Ethernet connections.

2.6 Driver Installation and Mobile Connect App

For full functionality, install the latest drivers from the official Brother support website. For mobile printing and scanning, download the Brother Mobile Connect application from your device's app store. This app allows you to print and scan directly from your smartphone or tablet.



Facile da configurare e connettere, per una stampa impeccabile e veloce

Figure 2.3: A user interacting with the Brother Mobile Connect application on a smartphone, demonstrating wireless control and functionality with the printer.

3. OPERATING INSTRUCTIONS

3.1 Printing Documents

To print from your computer, ensure the printer is connected and drivers are installed. Open the document you wish to print, select "Print" from the application's menu, choose the Brother DCP-L2665DW, and adjust settings as needed (e.g., number of copies, paper size, duplex printing). Confirm to start printing.

For duplex printing, select the two-sided printing option in your print settings. The printer will automatically flip the paper to print on both sides.



Figure 3.1: The Brother DCP-L2665DW actively printing a document, demonstrating its paper output mechanism.



Figure 3.2: A user efficiently printing shipping labels using the Brother DCP-L2665DW, highlighting its utility for business and personal use.

3.2 Scanning Documents

The DCP-L2665DW offers both flatbed scanning and automatic document feeder (ADF) scanning for multiple pages.

- **Flatbed Scanning:** Lift the scanner lid, place the document face down on the scanner glass, align it with the guide marks, and close the lid.
- **ADF Scanning:** Place multiple pages face up into the Automatic Document Feeder. The ADF can hold up to 50 sheets.

From the printer's touchscreen or your computer's scanning software, select the "Scan" function. Choose your desired scan destination (e.g., PC, email, cloud service) and adjust settings like resolution and color mode. Initiate the scan.

3.3 Copying Documents

To make copies, place your document on the scanner glass or in the ADF. On the printer's touchscreen, select "Copy". You can adjust settings such as the number of copies, enlargement/reduction, and quality. Press "Start" to begin copying.

4. MAINTENANCE

4.1 Replacing Toner Cartridge and Drum Unit

The printer will display a message when the toner cartridge or drum unit needs replacement. Follow these steps:

1. Open the front cover.
2. Remove the toner cartridge and drum unit assembly.
3. Press the green lock lever to separate the toner cartridge from the drum unit.
4. Unpack the new toner cartridge and slide it into the drum unit until it locks.
5. Insert the new assembly back into the printer.
6. Close the front cover.

Note: The drum unit typically needs replacement after approximately 12,000 pages, while toner cartridges vary based on capacity (1,200 or 3,000 pages).

4.2 Cleaning the Printer

- **Exterior:** Wipe the exterior of the printer with a soft, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Scanner Glass:** Use a soft, lint-free cloth dampened with a non-abrasive glass cleaner to clean the scanner glass. Ensure it is dry before closing the lid.
- **Corona Wire (Drum Unit):** Periodically clean the corona wire inside the drum unit by gently sliding the green tab back and forth several times. Return the tab to its home position.

4.3 Clearing Paper Jams

If a paper jam occurs, the printer's display will indicate the location of the jam. Carefully open the indicated covers (e.g., front cover, rear cover, duplex tray) and gently pull the jammed paper in the direction of the paper path. Avoid tearing the paper. Close all covers once the jam is cleared.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer not responding / Offline	Loose cable connection, incorrect network settings, printer in sleep mode.	Check power and USB/Ethernet cables. Verify Wi-Fi connection. Restart printer and computer. Check printer status in operating system.
Paper Jam message	Paper stuck in paper path, incorrect paper loading.	Follow on-screen instructions to locate and gently remove jammed paper. Ensure paper is loaded correctly and not overfilled.
Poor Print Quality (streaks, faded prints)	Low toner, dirty drum unit, dirty corona wire, incorrect print settings.	Replace toner cartridge if low. Clean the drum unit's corona wire. Perform a test print and check print settings.
Scanner not working	Loose USB/network connection, scanner driver issue.	Ensure printer is connected and powered on. Reinstall scanner drivers if necessary.

For more detailed troubleshooting, refer to the comprehensive online support resources available on the official Brother website.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	DCP-L2665DW
Product Type	3-in-1 Multifunction (Print/Scan/Copy)
Print Technology	Laser (Monochrome)
Max Print Speed (Monochrome)	34 pages per minute
Duplex Printing	Yes (Automatic)
Max Print Resolution (Black & White)	1200 DPI
Max Copy Speed (Black & White)	34 pages per minute
Scanner Type	Sheetfed (ADF) and Flatbed
Automatic Document Feeder (ADF) Capacity	50 sheets
Paper Input Tray Capacity	250 sheets
Max Media Size	A4
Connectivity	Ethernet, Wi-Fi (5GHz), USB
Memory	256 MB
Control Panel	6.8cm Color Touchscreen
Dimensions (D x W x H)	39.9 x 31.9 x 41 cm
Weight	11.4 Kilograms
Included Components	Power cable, user manual, toner cartridges

7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your product or visit the official Brother support website. Brother offers comprehensive customer support and resources to assist with product setup, operation, and troubleshooting.

- **Online Support:** Visit Brother's official support website for drivers, FAQs, and troubleshooting guides.
- **Contact Support:** Contact Brother customer service for personalized assistance. Contact details can be found on their website.
- **EcoPro Plan:** This product may be eligible for the Brother EcoPro plan, which offers automatic toner delivery. Check the Brother website for details and eligibility, including any promotional offers like free months.