

OKP K3P

OKP K3P Robot Vacuum Cleaner Instruction Manual

Model: K3P

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SETUP

Follow these steps to prepare your OKP K3P Robot Vacuum Cleaner for first use.

1.1 Unboxing and Initial Preparation

Carefully remove all components from the packaging. Ensure all protective films and packing materials are removed from the robot and charging station.

Your browser does not support the video tag.

Video: Unboxing and initial setup of the OKP K3P Robot Vacuum Cleaner, including installation of side brushes and placement of the charging station.

1. **Install Side Brushes:** Attach the side brushes to the designated slots on the underside of the robot.
2. **Place Charging Station:** Position the charging station against a wall in an open area, ensuring there are no reflective objects or obstacles within 0.5 meters to the left/right and 1 meter in front.
3. **Connect Power:** Plug the power adapter into the charging station and an electrical outlet. Ensure the charging station's display light is on.



3000Pa強力吸引
プラスレス吸引口で
髪の毛/ペットの毛に効果

Image: The underside of the OKP K3P robot vacuum cleaner showing the side brush installation points and the charging station.

1.2 Initial Charging

Before first use, fully charge the robot vacuum cleaner. This typically takes several hours.

1. **Power On:** Open the top cover of the robot and locate the red power switch. Turn it on.
2. **Place on Charger:** Manually place the robot onto the charging station, ensuring the charging sensors align. The robot will beep and the power button will light up.
3. **Verify Charging:** Confirm the robot is charging. The indicator light will show charging status.



Image: The robot vacuum cleaner automatically returning to its charging station, illustrating the auto-charge function.

1.3 Wi-Fi and App Connection

Connect your robot to the OKP app for advanced control and scheduling. The robot supports 2.4GHz Wi-Fi networks only.

Your browser does not support the video tag.

Video: Demonstrates the process of connecting the OKP K3P Robot Vacuum Cleaner to the mobile application via Wi-Fi.

1. **Download App:** Download the "OKP" app from your smartphone's app store.
2. **Register/Login:** Create an account or log in to the OKP app.
3. **Add Device:** Follow the in-app instructions to add your K3P robot vacuum cleaner. This typically involves putting the robot into pairing mode (holding the power button for 6 seconds until it beeps and flashes slowly) and connecting to your 2.4GHz Wi-Fi network.

2. OPERATION

Your OKP K3P Robot Vacuum Cleaner offers multiple cleaning modes and control options.

2.1 Cleaning Modes

The robot supports 6 cleaning modes, adjustable via the app:

- **Bow-shaped Mode:** Standard cleaning pattern for general coverage.
- **Edge Mode:** Cleans along walls and furniture edges.
- **Spot Mode:** Concentrates cleaning on a specific dirty area.
- **Random Mode:** Cleans randomly, suitable for complex layouts.
- **Manual Mode:** Control the robot's movement manually via the app.
- **Timer Mode:** Schedule cleaning sessions in advance.

You can also adjust suction power (Silent, Standard, Strong) through the app. The maximum suction power is 3000Pa.

6つ清掃モード

-  弓形モード
-  スポットモード
-  エッジモード
-  ランダムモード
-  手動モード
-  予約掃除モード

 OKP APP

 Alexa

 Google

 2.4GHz
WiFi only



Image: Visual representation of the six cleaning modes (bow-shaped, spot, edge, random, manual, timer) and connectivity options (OKP APP, Alexa, Google Assistant, 2.4GHz WiFi).

2.2 Smart Control

- **One-Touch Start:** Press the power button on the robot for immediate cleaning.
- **App Remote Control:** Use the OKP app to start, stop, schedule cleaning, and change modes from anywhere.
- **Voice Control:** The robot is compatible with Alexa and Google Assistant. Link your OKP account to your smart assistant app to control the robot with voice commands (e.g., "Alexa, turn on K3P").



Image: A robot vacuum cleaner responding to an Alexa voice command, demonstrating smart home integration.

Your browser does not support the video tag.

Video: Guide on how to connect the OKP K3P Robot Vacuum Cleaner to Alexa for voice control.

2.3 Navigation and Safety Features

- **Anti-Collision:** Equipped with sensors to detect and avoid obstacles, protecting furniture.
- **Anti-Drop:** Multiple sensors prevent the robot from falling down stairs or ledges.
- **Automatic Recharging:** The robot automatically returns to its charging station when the battery is low.

落下防止 & 衝突防止機能

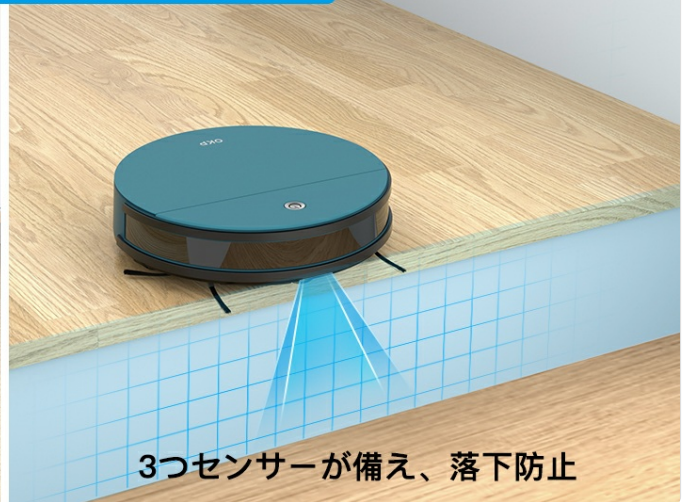


Image: The robot vacuum cleaner avoiding obstacles and detecting a drop-off, highlighting its anti-collision and anti-drop features.

3. MAINTENANCE

Regular maintenance ensures optimal performance of your robot vacuum cleaner.

3.1 Dustbin Cleaning

The K3P features a 500ml dustbin for extended cleaning sessions. Empty the dustbin after each use or when full.

1. **Open Top Cover:** Lift the top cover of the robot.
2. **Remove Dustbin:** Grasp the handle and pull out the dustbin.
3. **Empty and Clean:** Open the dustbin, empty its contents, and clean the filter and dustbin with the provided cleaning tool or a soft brush.
4. **Reinstall:** Place the clean dustbin back into the robot and close the top cover.




Image: The robot vacuum cleaner with its dustbin open, illustrating the ease of emptying collected debris.

3.2 Side Brush Maintenance

The side brushes are detachable for easy cleaning and replacement. Regularly check for tangled hair or debris.


- **Remove Brushes:** Gently pull the side brushes upwards to detach them.
- **Clean:** Remove any hair or debris tangled around the brushes.
- **Reattach:** Push the brushes back into their slots until they click into place.

ブラシレス吸引口設計 髪の毛が絡みともつれがない

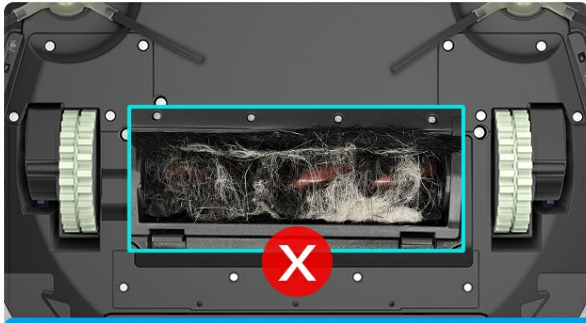

普通ローラーブラシ付き

髪やペットの毛は絡みともつれがあり、処分するのは嫌になる。

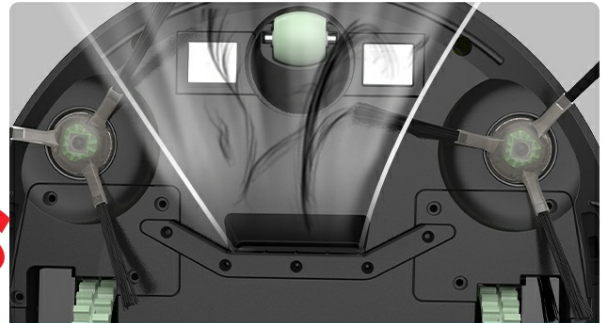

OKP ブラシレス 吸引口

髪やペットの毛は絡みともつれがない、
簡単なゴミ捨て、時間を節約！

Image: A comparison highlighting the brushless suction port design of the OKP K3P, which prevents hair tangling compared to traditional roller brushes.

The K3P features a brushless suction port design to minimize hair tangling, making it ideal for homes with pets or long hair.

3.3 Sensor Cleaning

Wipe the sensors on the robot's bumper and underside with a dry cloth periodically to ensure proper navigation.

4. TROUBLESHOOTING

If you encounter issues with your OKP K3P, refer to the following common solutions:

Problem	Possible Cause	Solution
Robot does not turn on.	Battery is low or off.	Ensure the main power switch is on and charge the robot fully.
Robot does not charge.	Charging contacts are dirty or misaligned.	Clean the charging contacts on both the robot and the charging station. Ensure proper alignment when docking.
Robot gets stuck frequently.	Obstacles, loose cables, or high thresholds.	Clear the cleaning area of obstacles, loose cables, and small rugs. The robot can climb thresholds up to 15mm.
Poor cleaning performance.	Full dustbin, dirty filter, or worn brushes.	Empty the dustbin, clean or replace the filter, and check/clean side brushes.
Cannot connect to Wi-Fi/App.	Incorrect Wi-Fi band (5GHz), wrong password, or robot not in pairing mode.	Ensure your Wi-Fi is 2.4GHz. Re-enter Wi-Fi password carefully. Put the robot into pairing mode (power button held for 6s).
Voice control not working.	Account not linked or incorrect commands.	Verify your OKP account is correctly linked to Alexa/Google Assistant. Use precise commands as instructed in the app.

5. SPECIFICATIONS

Feature	Detail
Brand	OKP
Model Name	K3P-JP
Recommended Surface	Carpet, Hardwood, Tile
Special Features	Obstacle Avoidance, Anti-Drop, Automatic Charging, App Control, Voice Control
Color	Dark Blue
Controller Type	App Control
Battery Life	Up to 150 minutes (in Silent mode)
Battery Composition	Lithium
Dustbin Capacity	500 ml
Control Method	Voice, App
Item Dimensions (L x W x H)	28 x 28 x 7.6 cm (11 x 11 x 3 inches)
Item Weight	2 kg (4.4 lbs)
Noise Level	56 dB (in Silent mode)
Suction Power	Up to 3000Pa
Wi-Fi Compatibility	2.4GHz only (5GHz not supported)

自動充電に戻る

ロボット掃除機はバッテリー残量が不足になると、自動的に充電台に戻って充電します。

2600mAhリン酸鉄リチウム
150分長時間稼働



Image: The compact design of the OKP K3P robot vacuum cleaner (7.6cm height) allowing it to clean under furniture.

6. WARRANTY & SUPPORT

6.1 Warranty Information

The OKP K3P Robot Vacuum Cleaner comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by:

- Accident, abuse, misuse, or improper maintenance.
- Unauthorized modification or repair.
- Use of non-original parts or accessories.

- Normal wear and tear.

6.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact OKP Customer Support:

- **Email:** support@okprobot.com
- **Online Support:** Visit the official OKP website for FAQs and further assistance.

When contacting support, please have your product model (K3P) and purchase information ready.

© 2023 OKP. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question