

[Manuals.plus](#) /

› [URBN](#) /

› URBN 5000 mAh Premium Magsafe Power Bank User Manual

URBN UPR050

URBN 5000 mAh Premium Magsafe Power Bank

Model: UPR050

1. INTRODUCTION

The URBN 5000 mAh Premium Magsafe Power Bank provides portable charging for mobile devices. It features 15W fast wireless charging, a strong magnetic hold, and Type-C input/output for versatile connectivity. The power bank supports pass-through charging and includes a MagTag ring for enhanced compatibility with non-Magsafe devices.



This image displays the URBN 5000 mAh Magsafe Power Bank in its purple color, securely attached to a smartphone via its magnetic connection, highlighting its compact design.

2. WHAT'S IN THE BOX

- 1 x URBN 5000 mAh Premium Magsafe Power Bank (Main Unit)
- 1 x USB Cable (Type-C)
- 1 x User Manual
- 1 x Warranty Card
- 1 x MagTag Ring with Applicator

3. PRODUCT OVERVIEW

The URBN Magsafe Power Bank is designed for convenience and efficiency. Key features include:

- **15W Fast Wireless Charging:** Provides rapid power delivery to compatible devices.
- **Strong Magnetic Hold:** Ensures secure attachment to Magsafe-compatible phones.
- **Type-C Input/Output:** Offers versatile connectivity for charging the power bank and other devices.
- **Pass-Through Charging:** Allows simultaneous charging of the power bank and a connected device.
- **Ultra-Compact Design:** Portable and easy to carry.
- **MagTag Ring Included:** Extends Magsafe compatibility to non-Magsafe phones and cases.
- **LED Indicator Lights:** Display battery status.



This diagram highlights the core features of the URBN 5000 mAh Magsafe Power Bank, including 15W wireless charging, ultra-compact design, Type-C input/output, MagTag Ring inclusion, Mag-safe compatibility, strong magnetic hold, wireless/wired charging options, and universal charging.

ULTRA COMPACT SIZE



This image provides a size comparison of the URBN 5000 mAh Magsafe Power Bank next to a smartphone, detailing its ultra-compact dimensions: 90.9mm length, 62.9mm width, and 15.7mm thickness.

4. SETUP

4.1 Initial Charging of the Power Bank

1. Connect the provided USB Type-C cable to the power bank's Type-C port.
2. Connect the other end of the USB cable to a compatible USB wall adapter (not included).
3. The LED indicator lights on the power bank will illuminate to show the charging progress. All lights will be solid when fully charged.

It is recommended to fully charge the power bank before its first use.

4.2 Understanding LED Indicators

The LED lights indicate the remaining battery capacity and charging status:

- **Solid Lights:** Indicate remaining battery level.
- **Flashing Lights:** Indicate the power bank is currently charging.

5. OPERATING INSTRUCTIONS

5.1 Wireless Charging (Magsafe Compatible)

1. Ensure your device is Magsafe compatible or has the MagTag Ring applied (see Section 6).
2. Align the power bank with the back of your device. The magnets will automatically snap into place, securing the connection.
3. Wireless charging will begin automatically. The LED indicators on the power bank will show its status.

STRONG
MAGNETIC HOLD



A side profile view of the URBN Magsafe Power Bank attached to a smartphone, emphasizing the secure and strong magnetic connection that keeps the power bank firmly in place.

5.2 Wired Charging


1. Connect one end of a USB Type-C cable to the power bank's Type-C port.
2. Connect the other end of the cable to your device's charging port.
3. Charging will commence automatically.

5.3 Pass-Through Charging

The power bank supports pass-through charging, allowing you to charge both your mobile device and the power bank simultaneously.

1. Connect your mobile device to the power bank (either wirelessly or via cable).
2. Connect the power bank to a wall adapter using a USB Type-C cable.
3. Both devices will charge concurrently.

PASS THROUGH CHARGING

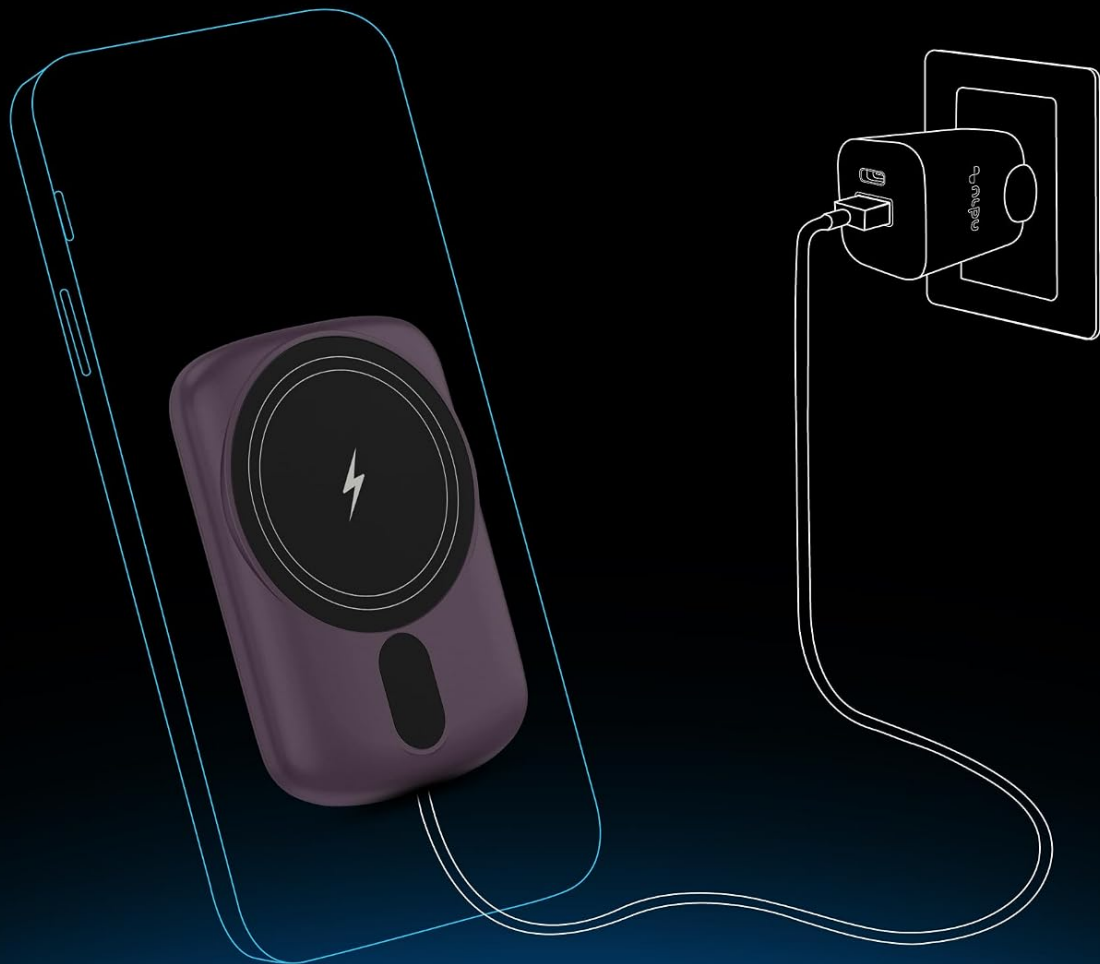

Simultaneously Charge Mobile Device
And Power Bank Together

This diagram visually explains the pass-through charging function, showing how the URBN Magsafe Power Bank can simultaneously charge a connected mobile device and recharge itself from a wall adapter.

DUAL CHARGING



Wireless/Wired
Charging



Type C
Input/Output

This illustration showcases the dual charging functionality of the power bank, demonstrating wireless charging for a smartphone and wired charging for another device (like earbuds) using the Type-C input/output port.

6. MAGTAG RING USAGE

The included MagTag Ring allows non-Magsafe compatible phones or cases to utilize the magnetic attachment feature of the power bank.

6.1 Applying the MagTag Ring

1. Use the provided applicator to find the optimal placement for the MagTag Ring on the back of your phone or phone case.
2. Clean the surface thoroughly before application to ensure strong adhesion.
3. Carefully peel off the adhesive backing from the MagTag Ring.
4. Align the ring using the applicator and firmly press it onto the desired location.
5. Allow sufficient time for the adhesive to set before attaching the power bank.

MagTag™ Ring

Convert your wireless charging compatible phones (Apple & Android) to MagSafe compatible with the MagTag Ring.



Effortless
Setup



Applicator in
the box

This illustration demonstrates how to use the included MagTag Ring to convert standard wireless charging compatible phones (both Apple and Android) into MagSafe-compatible devices, facilitating effortless setup with the power bank.

7. MAINTENANCE

- **Cleaning:** Wipe the power bank with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge and discharge the power bank at least once every three months if not in regular use.

8. TROUBLESHOOTING

- **Power Bank Not Charging:**
 - Ensure the USB cable is securely connected to both the power bank and the wall adapter.

- Verify that the wall adapter is functioning correctly and plugged into a live power outlet.
- Try using a different USB cable or wall adapter.
- **Device Not Charging Wirelessly:**
 - Ensure your device is Magsafe compatible or has the MagTag Ring correctly applied.
 - Check for any obstructions (e.g., thick phone cases, metal objects) between the power bank and your device.
 - Ensure the power bank has sufficient charge.
 - Realign the power bank with your device to ensure proper magnetic connection.
- **Slow Charging:**
 - Ensure you are using a compatible fast-charging wall adapter for the power bank.
 - Wireless charging is generally slower than wired charging.
 - Environmental factors (e.g., high temperature) can affect charging speed.
- **Power Bank or Device Heating During Charging:**
 - Some heat generation during wireless charging is normal.
 - If excessive heat is observed, discontinue use and ensure there are no obstructions or misalignments.
 - Avoid charging in direct sunlight or enclosed spaces.

9. SPECIFICATIONS

Model Number	UPR050
Battery Capacity	5000 mAh
Wireless Charging Output	Up to 15W
Input/Output Port	USB Type-C
Special Features	LED Indicator Lights, Pocket Size, Slim, Wireless Charging, Strong Magnetic Hold, Pass-Through Charging, MagTag Ring Included
Product Dimensions	9.3 x 14.5 x 2.9 cm
Item Weight	119 g
Country of Origin	India

10. WARRANTY AND SUPPORT

The URBN 5000 mAh Premium Magsafe Power Bank comes with a**1-year replacement warranty** from the date of purchase. Please retain your purchase receipt for warranty claims.

For support or warranty claims, please refer to the contact information provided on the warranty card included in your product packaging or visit the official URBN website.

We've got you covered!

**1 YEAR
REPLACEMENT
WARRANTY**



This image confirms the product's quality and support, featuring a '1 Year Replacement Warranty' statement, along with 'BIS Approved' and 'Made in India' certifications.

11. SAFETY INFORMATION

- Do not expose the power bank to extreme temperatures, direct sunlight, or fire.
- Avoid dropping, disassembling, or attempting to repair the device yourself.
- Keep out of reach of children.
- Do not place metal objects or foreign materials on the wireless charging surface.
- Dispose of the power bank responsibly according to local regulations.
- Use only the provided or certified cables and adapters.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question