

## YITAHOME MAYIHmnQGZ

# YITAHOME Folding Shopping Cart (Medium) User Manual

Model: MAYIHmnQGZ | Brand: YITAHOME

## 1. INTRODUCTION

Thank you for choosing the YITAHOME Folding Shopping Cart. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new utility cart. Please read these instructions thoroughly before first use and retain them for future reference.

## 2. SAFETY INFORMATION

**WARNING:** This cart is not designed to be leaned on to support your weight. Do not use the frame and/or handle to balance or support yourself. Exerting too much force can cause the cart to break, resulting in damage to the cart and/or injury to you.

**Important:** Not adhering to all safety and warning statements on this cart is considered improper use. YITAHOME is not liable for any damage to personal property and/or personal injuries caused by improper use.

- Ensure all parts are securely assembled before use.
- Do not exceed the maximum weight limit of 88 pounds (40 kg).
- Keep hands and fingers clear of moving parts during folding and unfolding.
- Use on stable, level surfaces. Avoid steep inclines or uneven terrain when heavily loaded.
- This cart is intended for transporting goods, not people.

## 3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Cart Frame (x1)
- Large Wheels (x2)
- Small Wheels (x2)
- Washers (x4)
- Cap Cotter Pins (x2)
- End Caps (x2)

- Long Axle (x1)

## 4. ASSEMBLY INSTRUCTIONS

Assembly is quick and easy. Follow these steps:

1. **Attach Large Wheels:** Slide the long axle through the large holes in the rear legs of the cart frame. Place one washer and one large wheel onto each end of the axle.
2. **Secure Large Wheels:** Push the wheel assembly to expose the outer cotter pin hole in the axle. Insert a cap cotter pin through the hole. Use pliers to spread and bend the cotter pin around the end cap to secure it. Repeat for the other side.
3. **Attach End Caps:** Place an end cap onto each end of the axle and align the end cap with the hole in the axle. Insert a cap cotter pin through the hole and secure it by spreading and bending.
4. **Attach Small Wheels:** The small wheels are typically pre-attached or snap into place on the front legs. Ensure they are firmly seated.



Figure 4.1: Assembly diagram illustrating the components and steps for attaching the wheels to the cart frame.

## 5. OPERATING INSTRUCTIONS

Your YITAHOME Folding Shopping Cart is designed for versatile use. To operate:

- **Unfolding:** Gently pull the cart open until it locks into its upright position. Ensure all four wheels are on the ground and the cart is stable before loading.
- **Loading:** Place items evenly within the basket. Do not exceed the maximum weight capacity of 88 pounds (40 kg). Overloading can damage the cart and compromise stability.
- **Maneuvering:** Push the cart using the foam-covered handle. The four smooth-rolling wheels are designed to navigate various surfaces. Be mindful of obstacles and uneven terrain.
- **Versatile Use:** This cart is suitable for transporting groceries, laundry, gardening supplies, sports equipment, and other sundries.



Figure 5.1: The cart loaded with groceries, showcasing its practical capacity.



Figure 5.2: The cart being used for grocery shopping.

## COMFORTABLE GRIP

Thickened, soft sponge handle for a secure and comfortable hold.



Figure 5.3: Examples of multipurpose use for the cart, including laundry, sports equipment, and groceries.

## 6. FOLDING AND STORAGE

The cart features a compact foldable design for convenient storage.

1. **Empty the Cart:** Ensure the cart is empty before folding.

2. **Collapse the Basket:** Push the sides of the basket inwards to collapse it.
3. **Fold the Frame:** Gently push the handle downwards and the base upwards until the cart folds flat.
4. **Secure (if applicable):** Some models may have a fixing hook to fasten the cart in the folding condition.
5. **Storage:** Once folded, the cart can be easily stored in a trunk, closet, or small space.



Figure 6.1: Visual guide for folding the shopping cart into a compact size.



Figure 6.2: The folded cart being stored in a car trunk, highlighting its portability.

## 7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your cart.

- **Cleaning:** Wipe the metal frame with a damp cloth and mild detergent as needed. Dry thoroughly to prevent rust.
- **Wheel Inspection:** Periodically check the wheels for debris or wear. Clean any obstructions and ensure they spin freely.
- **Fastener Check:** Ensure all screws, pins, and connections remain tight. Tighten any loose fasteners to maintain stability.
- **Storage:** Store the cart in a dry place when not in use to prevent corrosion.

## 8. TROUBLESHOOTING

If you encounter issues with your YITAHOME Folding Shopping Cart, refer to the following common solutions:

- **Cart is difficult to fold/unfold:** Ensure no items are obstructing the folding mechanism. Check for bent parts that might hinder movement.
- **Wheels are not rolling smoothly:** Inspect wheels for tangled hair, string, or other debris. Clean the axles and ensure they are free of obstructions. If wheels are damaged, contact customer support for replacement.

options.

- **Cart feels unstable or wobbly:** Verify that all assembly fasteners (cotter pins, etc.) are securely in place. Ensure the cart is fully unfolded and locked into position before loading. Do not exceed the weight limit.
- **Back wheels come apart:** This indicates an issue with the cotter pins or axle. Re-check the assembly steps for securing the large wheels (Section 4). Ensure the cap cotter pins are properly spread and bent to prevent the wheels from detaching. If the pins are damaged, replacements may be needed.

## 9. SPECIFICATIONS

|                                  |   |
|----------------------------------|---|
| <b>Model Number</b>              | MAYIHmnQGZ  |
| <b>Product Dimensions (Open)</b> | 15.35"D x 17.32"W x 35.43"H (39cm D x 44cm W x 90cm H)          |
| <b>Folded Dimensions</b>         | Approx. 6.4"D x 16.5"W x 40.3"H (16.5cm D x 42cm W x 102.5cm H) |
| <b>Material</b>                  | Carbon Steel  |
| <b>Color</b>                     | Black   |
| <b>Item Weight</b>               | 5.51 Pounds (2.5 kg)  |
| <b>Weight Limit</b>              | 88 Pounds (40 kg)   |
| <b>Number of Wheels</b>          | 4 (Solid Rubber)  |
| <b>Special Feature</b>           | Easy Assembly, Foldable Design                                  |



Figure 9.1: Dimensional overview of the cart, including open and folded measurements.

## 10. WARRANTY AND SUPPORT

YITAHOME is committed to providing quality products. For warranty information, technical support, or assistance with parts, please contact YITAHOME customer service through their official channels or the retailer where the product was purchased. Please have your model number (MAYIHmnQGZ) and purchase date available when contacting support.

You can visit the YITAHOME store for more information: [YITAHOME Store](#)