

Inalsa Multi Cook Nu

INALSA MultiCook Nu Stainless Steel Kettle 1.5 Litre Instruction Manual

Comprehensive instruction manual for the INALSA MultiCook Nu Stainless Steel Kettle, covering setup, operation, maintenance, and safety guidelines for its 1.5-litre capacity and 700-watt power.

1. INTRODUCTION

Thank you for choosing the INALSA MultiCook Nu Stainless Steel Kettle. This appliance is designed for versatility and convenience, offering multiple cooking functions in a compact design. Please read this manual carefully before use to ensure safe and efficient operation.

The INALSA MultiCook Nu kettle features a durable stainless steel interior and a tempered glass lid, ensuring food safety and easy monitoring. It is equipped with three power settings for boiling, heating, and keeping warm, making it suitable for preparing various items like soup, porridge, oatmeal, boiled eggs, noodles, and pasta.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- **Overheating and Boil-Dry Protection:** The kettle is equipped with dual safety features, including overheating protection and boil-dry protection technology. The appliance will automatically shut off if the temperature exceeds the selected value or if there is no water inside.
- **Hot Surfaces:** The exterior of the kettle may become hot during use. Always use the handle and avoid touching hot surfaces directly. Use caution when opening the lid to avoid steam burns.
- **Children and Vulnerable Persons:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the

appliance.

- **Placement:** Place the kettle on a stable, flat, heat-resistant surface, away from the edge of the countertop to prevent tipping. Do not place on or near a hot gas or electric burner, or in a heated oven.
- **Filling:** Do not fill above the maximum level indicator or below the minimum level. Overfilling may cause boiling water to eject.
- **Maintenance:** Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

3. PRODUCT OVERVIEW

The INALSA MultiCook Nu is a versatile 1.5-litre stainless steel kettle designed for various cooking needs. Its robust construction and intelligent features ensure both durability and ease of use.



Figure 1: INALSA MultiCook Nu Kettle with included egg boiling rack.

Key Features:

- **1.5 Litre Capacity:** Ideal for daily use, suitable for small families or individuals.
- **700 Watt Power:** Ensures rapid boiling and efficient heating.
- **3 Heating Modes:** Features "Boiling", "Heating", and "Keep Warm" functions for diverse cooking

requirements.

- **Durable Stainless Steel Interior:** Ensures no food contamination and easy cleaning.
- **Tempered Glass Lid:** Allows for easy monitoring of cooking progress.
- **Over-Heat & Boil Dry Protection:** Automatic shut-off for enhanced safety.
- **360° Cordless Base:** Provides convenience for lifting and placing the kettle from any angle.
- **Cool Touch Body:** Designed for safe handling.
- **Included Egg Boiling Rack:** Adds to the versatility of the appliance.



Figure 2: The control knob indicating the three preset functions: Keep Warm, Heating, and Boiling.



Figure 3: Illustration of the kettle's brush finish stainless steel body and non-toxic interior, emphasizing durability, health, and

4. COMPONENTS INCLUDED

The product package contains the following items:

- 1 N Multi Kettle Unit
- 1 N Power Base
- 1 N Egg Boiling Rack and Handle
- 1 N Instruction Manual cum Warranty Card

5. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and check for any damage. Retain packaging for future transport or storage.
2. **Initial Cleaning:** Before first use, wipe the exterior of the kettle with a damp cloth. Fill the kettle with water to the MAX level, boil it, then discard the water. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, and stable surface. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Connecting Power:** Plug the power cord into a suitable electrical outlet.

6. OPERATING INSTRUCTIONS

The INALSA MultiCook Nu kettle offers three distinct operating modes:

COOL TOUCH BODY SAFETY DESIGN

The More Care About You



Figure 4: Key operational features including the transparent lid, power indicator, and control knob.

1. Filling the Kettle:

- Open the lid and fill the kettle with the desired amount of water or food.
- Do not exceed the MAX fill line (1.5 litres) to prevent overflow.
- Ensure the lid is securely closed before operation.

2. Selecting a Mode:

- Place the kettle onto the power base.
- Rotate the control knob to select one of the following modes:
 - **BOILING:** For rapid heating of water, milk, or cooking items like noodles and pasta. The kettle will heat until boiling point and then automatically shut off due to boil-dry protection if left unattended after boiling.
 - **HEATING:** For general heating purposes, such as warming milk or preparing soup.
 - **KEEP WARM:** To maintain the temperature of your food or beverage after heating.
- The power indicator light will illuminate when the kettle is operating.

3. **Using the Egg Boiling Rack:**

- Place the egg boiling rack inside the kettle.
- Carefully place eggs into the designated slots on the rack.
- Add water to cover the eggs.
- Select the "BOILING" mode.

4. **Switching Off:**

- To turn off the kettle, rotate the control knob to the "OFF" position.
- Unplug the appliance from the power outlet when not in use.

Your browser does not support the video tag.

Video 1: An overview of the INALSA MultiCook Nu Kettle's features and functions, demonstrating its versatility for various cooking tasks.

7. **MAINTENANCE AND CLEANING**

Regular cleaning and maintenance will prolong the life of your INALSA MultiCook Nu Kettle.

- **Always Unplug:** Before cleaning, ensure the kettle is unplugged from the power outlet and has cooled down completely.
- **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Interior Cleaning:** The interior is made of stainless steel. For general cleaning, rinse with water. For stubborn stains or mineral deposits (limescale), fill the kettle with a mixture of water and vinegar (1:1 ratio) and let it sit for an hour, or boil the mixture. Then, rinse thoroughly several times with fresh water.
- **Lid and Egg Rack:** The tempered glass lid and egg boiling rack can be hand washed with mild detergent and water. Rinse thoroughly and dry.
- **Do Not Immerse:** Never immerse the kettle unit or the power base in water or any other liquid.
- **Storage:** When not in use, store the kettle in a dry place.

8. **TROUBLESHOOTING**

If you encounter any issues with your INALSA MultiCook Nu Kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; power outlet not working; kettle not properly seated on base; control knob not in desired position.	Check power plug and outlet; ensure kettle is correctly placed on the power base; rotate control knob to "BOILING", "HEATING", or "KEEP WARM".
Water not boiling/heating.	Insufficient water; boil-dry protection activated; incorrect mode selected.	Ensure water level is above MIN mark; if boil-dry activated, let kettle cool down before refilling; select "BOILING" or "HEATING" mode.
Kettle switches off too quickly.	Boil-dry protection activated due to low water level or no water.	Ensure sufficient water is added. If it still occurs, contact customer support.

Problem	Possible Cause	Solution
Unusual taste in water/food.	New appliance residue; mineral deposits (limescale).	Perform initial cleaning steps (boil and discard water several times); descale the kettle as per maintenance instructions.

If the problem persists after trying these solutions, please contact INALSA customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	Inalsa
Model Name	Multi Cook Nu
Capacity	1.5 Litres
Wattage	700 Watts
Voltage	240 Volts
Material	Stainless Steel
Colour	Silver
Special Features	Indicator Light, Portable, Over-Heat Protection, Boil Dry Protection
Product Dimensions	23L x 18.2W x 20.5H Centimeters
Item Weight	800 Grams
Country of Origin	India

10. WARRANTY AND SUPPORT

The INALSA MultiCook Nu Kettle comes with a standard brand warranty. Please refer to the included "Instruction Manual cum Warranty Card" for detailed terms and conditions of your warranty.

For any product-related queries, service requests, or support, please contact:

Manufacturer: Tuareg Marketing Pvt. Ltd.

Khasra No- 1189, Bhalswa, New Delhi-110033, India.

Contact: 9773982065

Please have your product model number (Multi Cook Nu) and purchase details ready when contacting support.