

[Manuals.plus](#) /

› [Yanharma](#) /

› Yanharma H3 Cordless Upright Vacuum Cleaner User Manual

Yanharma H3

Yanharma H3 Cordless Upright Vacuum Cleaner User Manual

Model: H3

1. PRODUCT OVERVIEW

The Yanharma H3 Cordless Upright Vacuum Cleaner is a powerful and versatile cleaning solution designed for various floor types, including hard floors, carpets, and for picking up pet hair. It features a high-performance brushless motor, multiple suction modes, and an advanced filtration system to ensure thorough cleaning and improved air quality.

Key Features:

- **Powerful Suction:** Equipped with a 550W brushless motor, delivering up to 42,000 Pa of suction power.
- **Extended Runtime:** High-capacity 6*3000mAh lithium battery provides up to 60 minutes of continuous cleaning.
- **Multiple Suction Modes:** Four adjustable modes (Auto, Low, Mid, High) for diverse cleaning needs.
- **Advanced Filtration:** 7-layer cyclonic filtration system with H13 HEPA filter captures 99.99% of fine dust and allergens.
- **Large Dust Cup:** 1.6-liter dust container minimizes emptying frequency.
- **Flexible Design:** 180° folding tube for easy cleaning under furniture and a 270° rotating floor brush with LED lights for enhanced visibility.
- **Versatile Attachments:** Includes a 2-in-1 brush, long flat suction brush, and sofa brush for comprehensive cleaning.

2. WHAT'S IN THE BOX

Carefully unpack all components and check against the list below. If any items are missing or damaged, please contact customer support.



Image: The Yanhama H3 Cordless Upright Vacuum Cleaner shown with its main body, extension tube, floor brush with green LED lights, and various accessories including filters, a wall mount, a 2-in-1 brush, a long flat suction brush, a sofa brush, and cleaning tools.

- Cordless Vacuum Cleaner Main Body
- Extension Tube (with 180° folding joint)
- LED Floor Brush (270° rotating)
- 2-in-1 Brush
- Long Flat Suction Brush
- Sofa Brush
- Charger
- Wall Bracket
- HEPA Filter (pre-installed + 1 spare)
- Inlet Filter (pre-installed + 1 spare)
- Cleaning Tools
- Installation Tools
- Instruction Manual (this document)

3. SETUP AND ASSEMBLY

Follow these steps to assemble your Yanhama H3 vacuum cleaner.

1. **Attach the Extension Tube:** Insert the top end of the extension tube into the main vacuum body until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the LED floor brush to the bottom end of the extension tube, ensuring it clicks firmly.
3. **Install Wall Bracket (Optional):** Choose a suitable location near a power outlet. Use the provided installation tools to mount the wall bracket securely. This allows for convenient storage and charging.
4. **Charge the Battery:** Before first use, fully charge the vacuum cleaner. Connect the charger to the charging port on the main body or the wall bracket. The battery indicator lights will show charging progress. A full charge takes approximately 4-5 hours.
5. **Attach Accessories:** For handheld use or specific cleaning tasks, detach the extension tube and floor brush. Attach desired accessories (e.g., 2-in-1 brush, long flat suction brush, sofa brush) directly to the main vacuum body.

4. OPERATING INSTRUCTIONS

Power On/Off and Suction Modes:

- **Power On:** Press the power button on the main body to turn on the vacuum cleaner.
- **Adjust Suction:** Use the mode selection button to cycle through the four suction modes:
 - **Auto Mode:** Automatically adjusts suction power based on floor type.
 - **Low Mode:** Ideal for light cleaning and extended runtime.
 - **Mid Mode:** Suitable for everyday cleaning tasks.
 - **High Mode:** Provides maximum suction for deep cleaning and stubborn dirt.
- **Power Off:** Press the power button again to turn off the vacuum cleaner.

Cleaning Tips:

- **Floor Cleaning:** Use the LED floor brush for general floor cleaning. The green LED lights illuminate fine dust, making it visible on various surfaces.
- **Under Furniture:** Utilize the 180° folding tube to easily reach under beds, sofas, and other low-clearance furniture without bending.
- **Tight Corners:** The 270° rotating floor brush allows for agile maneuvering around obstacles and into tight corners.
- **Above Floor Cleaning:** Detach the extension tube and attach the appropriate accessory for cleaning upholstery, curtains, car interiors, or high-up areas.
- **Battery Life:** The vacuum provides up to 60 minutes of runtime on a single charge, depending on the selected suction mode. Monitor the battery indicator on the main body.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Cup:

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button on the main body.
3. Press the button to detach the 1.6-liter dust cup.

4. Hold the dust cup over a trash bin and press the bottom release latch to open the dust cup and empty its contents.
5. Close the dust cup bottom and reattach it to the main body until it clicks.

Cleaning the Filters:

The Yanhama H3 features a 7-layer filtration system, including an H13 HEPA filter and an inlet filter. Clean these regularly to maintain suction power.

1. Remove the dust cup as described above.
2. Twist and pull out the HEPA filter and the inlet filter from inside the dust cup.
3. Tap the filters gently over a trash bin to remove loose dust. For a more thorough clean, rinse the filters under cool running water.
4. **Important:** Ensure filters are completely dry before reinserting them into the vacuum cleaner. Allow at least 24 hours for air drying.
5. Reassemble the filters and dust cup.

Cleaning the Brush Roll:

Periodically check the brush roll for tangled hair or debris.

1. Turn off the vacuum and detach the floor brush.
2. Locate the brush roll access latch on the bottom of the floor brush. Open it to remove the brush roll.
3. Use the provided cleaning tool or scissors to cut and remove any tangled hair or fibers from the brush roll.
4. Reinsert the clean brush roll and secure the access latch.

6. TROUBLESHOOTING

If you encounter issues with your Yanhama H3 vacuum cleaner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted. Power button not pressed correctly.	Charge the battery fully. Ensure the power button is pressed firmly.
Loss of suction.	Dust cup is full. Filters are clogged. Blockage in the tube or brush roll.	Empty the dust cup. Clean or replace the filters. Check for and remove any blockages.
Brush roll not spinning.	Tangled hair or debris. Brush roll not properly installed.	Clean the brush roll. Ensure the brush roll is securely reinserted.
Battery not charging.	Charger not connected properly. Faulty charger or battery.	Ensure charger is firmly plugged into the vacuum and power outlet. Contact customer support if the issue persists.

If the problem persists after trying these solutions, please contact Yanhama customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Yanhamama
Model Name	H3
Power	550 Watts
Suction Power	Up to 42,000 Pa (42KPa)
Battery Type	Lithium-Ion (6*3000mAh)
Runtime	Up to 60 minutes
Dust Cup Capacity	1.6 Liters
Filter Type	HEPA Filter (H13-class)
Noise Level	65 dB
Product Dimensions	13"L x 12"W x 8"H
Item Weight	7.1 ounces

8. WARRANTY AND SUPPORT

Yanhamama is committed to providing high-quality products and excellent customer service.

- **Warranty:** This product comes with a 3-year warranty service.
- **Return & Exchange:** We offer a 1-year return and exchange service.
- **Customer Service:** Our customer service team is available 24 hours to assist you with any issues or questions regarding your Yanhamama H3 vacuum cleaner. Please do not hesitate to contact us.

For support, please refer to the contact information provided on the product packaging or the official Yanhamama website.

© 2024 Yanhamama. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question