

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Zilan](#) /

› [Zilan Double Wall Kettle ZLN7859 User Manual](#)

## Zilan ZLN7859

# Zilan Double Wall Kettle ZLN7859 User Manual

Your guide to safe and efficient use of your new Zilan Kettle.

### IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting the kettle.
- Always place the kettle on a firm, flat, heat-resistant surface.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Keep the appliance and its cord out of reach of children.
- Do not fill the kettle above the MAX fill line to prevent boiling water from overflowing.
- Always ensure the lid is securely closed before operating the kettle.
- Avoid contact with steam escaping from the spout or lid during or after boiling.
- Unplug the kettle from the outlet when not in use and before cleaning.
- This appliance is for household use only. Do not use outdoors.

### PRODUCT OVERVIEW

The Zilan Double Wall Kettle ZLN7859 is designed for efficient and safe water boiling with advanced features. It boasts a 1.7-liter capacity, a large digital display for precise temperature control, and a double-wall construction for improved insulation and safety.



Figure 1: Front view of the Zilan Double Wall Kettle, showcasing its sleek black design and digital temperature display.

## Components

- Kettle Body (Double-wall: Inner Glass, Outer Plastic)
- Lid with Automatic One-Button Opening
- Spout
- Handle

- Digital Temperature Display and Control Panel
- 360-Degree Swivel Power Base
- Concealed 304 Stainless Steel Heating Element

## SETUP

Before first use, follow these steps to prepare your kettle:

1. Unpack the kettle and all accessories from the packaging. Remove any protective films or stickers.
2. Place the power base on a stable, flat, and dry surface near a power outlet.
3. Press the lid release button to open the lid.
4. Fill the kettle with clean water up to the MAX fill line (1.7 Liters). Do not overfill.
5. Close the lid securely until it clicks into place.
6. Place the kettle firmly onto the power base.
7. Plug the power cord into a grounded electrical outlet.
8. For initial cleaning, boil a full kettle of water and discard it. Repeat this process two to three times to remove any manufacturing residues.



Figure 2: The kettle with its lid open, showing the interior, ready to be filled with water.

## OPERATING INSTRUCTIONS

### Basic Operation

1. Ensure the kettle is filled with water and placed on the power base, and the power cord is plugged in.
2. The digital display will illuminate, showing the current water temperature.
3. Press the power button ( ) to start the boiling process. The kettle will automatically heat water to 100°C.
4. The kettle will automatically shut off once the water reaches boiling point.
5. Carefully lift the kettle from the base and pour the hot water.

### Temperature Settings

The Zilan Kettle allows you to select specific temperatures for different beverages:

- Press the temperature selection buttons (e.g., 40, 60, 80, 100) on the control panel to choose your desired temperature.
- The kettle offers preset temperatures: 40°C, 45°C, 50°C, 55°C, 60°C, 65°C, 70°C, 75°C, 80°C, 85°C, 90°C, 95°C, and 100°C.
- The digital display will show the target temperature, and the kettle will begin heating.

### Keep Warm Function

To maintain water at a specific temperature:

- After selecting a desired temperature, press the Keep Warm button (☺).
- The kettle will heat the water to the selected temperature and then maintain it for a set period (refer to specifications for exact duration, typically 30-60 minutes).
- To deactivate the Keep Warm function, press the button again or remove the kettle from the base.



Figure 3: The kettle actively boiling water, with the digital display indicating the current temperature.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your kettle.

### Cleaning the Exterior

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Ensure no water enters the control panel or power base.

### Descaling

Mineral deposits (limescale) can build up inside the kettle, especially in hard water areas. Descale your kettle regularly to maintain efficiency.

- Fill the kettle with a mixture of one part white vinegar and two parts water. Alternatively, use a commercial descaling solution following its instructions.
- Bring the mixture to a boil and then let it stand for at least 30 minutes, or longer for heavy scale.
- Empty the kettle and rinse it thoroughly several times with fresh water.
- If necessary, repeat the process until all limescale is removed.

## TROUBLESHOOTING

If you encounter any issues with your kettle, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; power outage; kettle not properly seated on base; dry boil protection activated.	Check power connection; check circuit breaker; ensure kettle is correctly placed on base; allow kettle to cool down if dry boil protection was activated.
Water not boiling or heating slowly.	Limescale buildup; insufficient power supply; lid not closed properly.	Descal the kettle; ensure kettle is plugged into a suitable outlet; ensure lid is securely closed.
Kettle leaks.	Overfilled; lid not closed properly; damage to kettle body.	Do not fill above MAX line; ensure lid is securely closed; if damaged, discontinue use and contact support.
Unusual noise during operation.	Limescale buildup.	Descal the kettle.

## SPECIFICATIONS

Feature	Value
Model Number	ZLN7859
Capacity	1.7 Liters
Power	1850-2200W
Voltage	220-240V~, 50-60Hz
Material	Glass (inner), Plastic (outer)
Heating Element	Concealed 304 Stainless Steel
Dimensions (L x W x H)	15 x 21 x 27 cm (approx.)
Weight	1.2 Kilograms (approx.)
Special Features	Digital Display, Preset Temperatures (40-100°C), Keep Warm Function, Dry Boil Protection, Automatic Shut-off

## WARRANTY AND SUPPORT

Your Zilan Kettle is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or spare parts, please contact your retailer or the Zilan customer service department. Contact information can typically be found on the product packaging or the official Zilan website.

*Note: Damage caused by improper use, neglect, unauthorized repairs, or failure to follow the instructions in this manual is not covered under warranty.*