

Bewinner Bewinner0x3oh9nugs-12

Vintage Gramophone Bluetooth Speaker Instruction Manual

Model: Bewinner0x3oh9nugs-12

1. INTRODUCTION

Thank you for purchasing the Bewinner Vintage Gramophone Bluetooth Speaker. This manual provides comprehensive instructions for the safe and efficient operation of your new device. Please read this manual thoroughly before use and retain it for future reference.

This speaker combines classic aesthetics with modern audio technology, offering Bluetooth 5.0 connectivity, FM radio, and USB/AUX playback options, all delivered through dual HiFi full-range speakers.

2. SAFETY INFORMATION

- Do not expose the device to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from heat sources such as radiators, stoves, or other heat-producing appliances.
- Use only the provided USB cable for charging.
- Ensure proper ventilation around the speaker during operation.
- This product is an imitation of a vintage phonograph appearance and cannot play actual records.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- 1 x Vintage Gramophone Bluetooth Speaker Unit
- 1 x Decorative Horn (for assembly)
- 1 x USB Type-C Charging Cable
- 1 x Remote Control (requires 2 AAA batteries, not included)
- 1 x Instruction Manual (this document)



Image: All components included in the package: the main speaker unit, the detachable horn, a remote control, and a USB charging cable.

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts of your Vintage Gramophone Bluetooth Speaker.





Image: A full front view of the speaker, showcasing its vintage design with the large horn, faux record player, and control panel.

4.1 Main Components

- **Decorative Horn:** The large, ornate horn at the top, contributing to the vintage aesthetic.
- **Faux Record Player:** A non-functional decorative record player on the top surface.
- **Control Panel:** Located on the front, featuring buttons, a display, USB port, and AUX input.
- **Speaker Grilles:** Integrated into the main unit for audio output.
- **USB-C Charging Port:** Located at the rear or side for power input.



Image: A detailed view of the speaker's control panel, showing the display screen, various control buttons, USB port, and AUX input jack.

4.2 Dual Speakers and Bass Enhancement

The speaker is equipped with two HiFi full-range speakers and a passive diaphragm at the bottom, designed to enhance bass output for a richer sound experience.

Dual Speakers

Built in 2 HiFi full range speakers with passive diaphragm at the bottom to enhance the bass output.



Image: The speaker placed on a desk next to a laptop, with text overlay indicating "Dual Speakers" and explaining the bass enhancement feature.

5. SETUP

5.1 Initial Charging

1. Before first use, fully charge the speaker. Connect the provided USB Type-C cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer USB port.
2. The charging indicator light will illuminate during charging and turn off or change color once fully charged.

5.2 Horn Assembly

1. Carefully unpack the decorative horn.
2. Align the base of the horn with the designated slot on top of the main speaker unit.
3. Gently push and twist (if necessary) until the horn is securely in place. Do not force it.



Image: A side profile view of the gramophone speaker, illustrating how the horn connects to the main unit.

5.3 Powering On/Off

- **To Power On:** Press and hold the power button on the control panel or the remote control until the display illuminates and you hear a power-on prompt.
- **To Power Off:** Press and hold the power button again until the display turns off and you hear a power-off prompt.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Mode (BT 5.0)

The speaker features Bluetooth 5.0 for stable and efficient wireless connection.

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display.
2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Bewinner Gramophone Speaker" (or similar name) from the list of devices.
4. Once connected, the Bluetooth icon on the speaker's display will become solid, and you will hear a confirmation tone.
5. You can now play audio from your device through the speaker. The speaker will automatically reconnect to the last paired device when in range.

6.2 FM Radio Mode

The speaker has a built-in high-sensitivity FM radio module.

1. Press the "Mode" button on the control panel or remote control to switch to FM Radio mode. The display will show the FM frequency.
2. To auto-scan and save stations: Press and hold the "Play/Pause" button. The speaker will scan for available FM stations and save them automatically.
3. To manually tune: Use the "Previous Track" and "Next Track" buttons to adjust the frequency incrementally.
4. To switch between saved stations: Briefly press the "Previous Track" or "Next Track" buttons.



Image: The speaker on a desk, with text highlighting its FM Radio capability and high-sensitivity module.

6.3 USB and AUX Mode

- **USB Playback:** Insert a USB flash drive containing MP3 audio files into the USB port on the control panel. The speaker will automatically switch to USB mode and begin playing.

- **AUX Input:** Connect an external audio device (e.g., MP3 player, computer) to the AUX input jack on the control panel using a 3.5mm audio cable (not included). The speaker will automatically switch to AUX mode.

6.4 Remote Control Functions

The included remote control provides convenient operation from a distance. Ensure 2 AAA batteries are inserted correctly.

- **Power Button:** Turn the speaker on or off.
- **Mode Button:** Switch between Bluetooth, FM, USB, and AUX modes.
- **Play/Pause Button:** Play or pause audio playback.
- **Previous/Next Track Buttons:** Skip tracks in Bluetooth/USB mode, or change stations/frequencies in FM mode.
- **Volume Up/Down Buttons:** Adjust the speaker's volume.
- Other buttons may include EQ settings, number pad for direct frequency input (if applicable), etc. Refer to the remote's labels.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the speaker. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the remote control will not be used for a long time, remove the AAA batteries to prevent leakage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; power cable not connected properly.	Charge the speaker fully. Ensure the USB-C cable is securely connected.
No sound.	Volume too low; incorrect mode selected; device not connected.	Increase volume. Check if the correct mode (Bluetooth, FM, USB, AUX) is selected. Ensure Bluetooth device is paired or AUX/USB is connected.
Bluetooth pairing fails.	Speaker not in pairing mode; device too far; interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker. Turn off other Bluetooth devices nearby.
FM radio static or poor reception.	Weak signal; environmental interference.	Reposition the speaker for better reception. Try auto-scanning again.
Speaker speaks in a foreign language (e.g., Asian language) on power on/off.	Default voice prompt setting.	This is a known characteristic for some units and currently cannot be changed by the user. It does not affect functionality.

9. SPECIFICATIONS

Feature	Detail
Model Number	Bewinner0x3oh9nugs-12
Brand	Bewinner
Power Output	20 W
Charging Interface	USB Type-C
Function Modes	Bluetooth, USB, AUX, FM Radio
Bluetooth Version	5.0
FM Frequency Range	87.5-108 MHz
Gramophone Battery	Built-in 2000 mAh Polymer Lithium Battery
Remote Control Battery	2 x AAA batteries (not included)
Dimensions (L*W*H)	200 x 250 x 380 mm (approx. 7.87 x 9.84 x 14.96 inches)
Material	Zinc Alloy, Wood boards
Weight	2221 Grams (approx. 4.9 lbs)
Color	White

10. WARRANTY AND SUPPORT

Bewinner products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Bewinner website.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question