

[Manuals.plus](#) /

› [DONGFXK](#) /

› DONGFXK Motorized Blackout Roller Shades (Model S3-black 32"W x 72"H) - Instruction Manual

DONGFXK S3-black 32W x 72H

DONGFXK Motorized Blackout Roller Shades (Model S3-black 32"W x 72"H) - Instruction Manual

Your guide to installation, operation, and maintenance.

[Introduction](#)
[Instructions](#)

[Safety Information](#)
[Maintenance](#)

[Package Contents](#)
[Troubleshooting](#)

[Setup & Installation](#)
[Specifications](#)

[Operating](#)
[Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the DONGFXK Motorized Blackout Roller Shades. These shades are designed for ease of installation with a no-drill, cordless design, offering smart control options and 100% blackout capability. This manual provides detailed instructions to ensure proper setup, operation, and maintenance of your new roller shades.



Image: DONGFXK Motorized Blackout Roller Shade in black, showcasing its sleek design.

2. SAFETY INFORMATION

Please read all safety instructions before installation and use. Keep this manual for future reference.

- **Children and Pet Safety:** The cordless design ensures safety for children and pets. Keep remote controls out of reach of children.
- **Installation:** Ensure the shades are securely mounted according to the instructions to prevent accidental falls.
- **Battery Handling:** Use only specified AA batteries. Do not mix old and new batteries. Dispose of used batteries responsibly.
- **Operation:** Do not attempt to manually pull the shade fabric. Always use the remote control or smart control features.
- **Environment:** For indoor use only. Do not expose to excessive moisture or extreme temperatures.



Image: Icons indicating 100% safe for pets, anti-tangle, and 100% safe for children, highlighting the cordless design.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Motorized Roller Shade Unit
- Single-Channel Remote Control
- Installation Instructions Manual
- Mounting Accessories (brackets, screws, wall anchors, anti-slip pads, hex key)
- 6 AA Batteries (pre-installed or included separately)

4. SETUP & INSTALLATION

4.1. Measuring Your Window

Accurate measurements are crucial for proper fit and function. Determine if you will use an Inside Mount or Outside Mount.

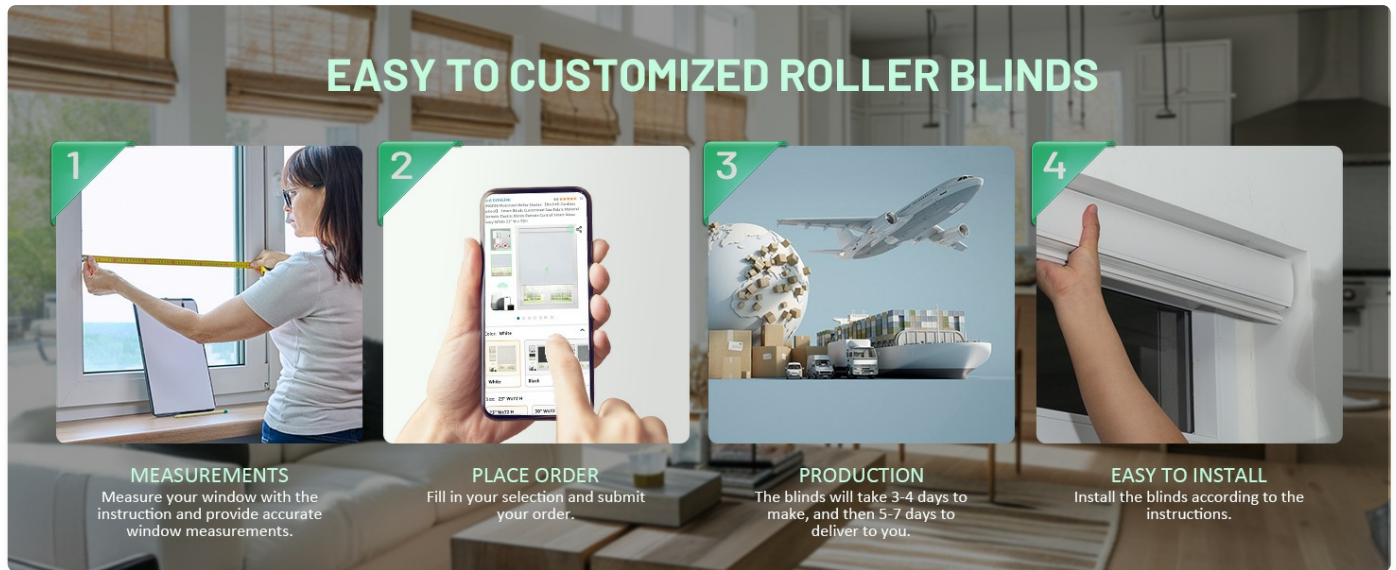


Image: Visual guide for measuring window dimensions for both inside and outside mount installations.

- **Inside Mount:** Measure the exact width of your window opening at the top, middle, and bottom. Use the smallest measurement. Subtract 1/4 inch from the width for the shade. Window depth should be at least 2 inches.
- **Outside Mount:** Measure the desired width and height to cover the window frame. Add at least 4 inches to the window width for optimal light blocking.
- The adjustable height range of shades is up to 72 inches.

Size Selection Recommendation

For Inside Mount: Order width $\leq$ window width - $\frac{1}{4}$ " For Outside Mount: Order width $\geq$ window width + $\frac{1}{4}$ "

Actual Width of your window	$23 \leq W \leq 23\frac{1}{2}$	$23\frac{1}{2} < W < 24$	$24 \leq W \leq 24\frac{1}{2}$	$24\frac{1}{2} < W < 25$	$27 \leq W \leq 27\frac{1}{2}$	$27\frac{1}{2} < W < 28$
Order Width	23	Custom Size	24	Custom Size	27	Custom Size
Actual Width of your window	$28 \leq W \leq 28\frac{1}{2}$	$28\frac{1}{2} < W < 29$	$29 \leq W \leq 29\frac{1}{2}$	$29\frac{1}{2} < W < 30$	$30 \leq W \leq 30\frac{1}{2}$	$30\frac{1}{2} < W < 31$
Order Width	28	Custom Size	29	Custom Size	30	Custom Size
Actual Width of your window	$31 \leq W \leq 31\frac{1}{2}$	$31\frac{1}{2} < W < 32$	$32 \leq W \leq 32\frac{1}{2}$	$32\frac{1}{2} < W < 33$	$33 \leq W \leq 33\frac{1}{2}$	$33\frac{1}{2} < W < 34$
Order Width	31	Custom Size	32	Custom Size	33	Custom Size
Actual Width of your window	$34 \leq W \leq 34\frac{1}{2}$	$34\frac{1}{2} < W < 35$	$35 \leq W \leq 35\frac{1}{2}$	$35\frac{1}{2} < W < 36$	$36 \leq W \leq 36\frac{1}{2}$	$36\frac{1}{2} < W < 37$
Order Width	34	Custom Size	35	Custom Size	36	Custom Size
Actual Width of your window	$38 \leq W \leq 38\frac{1}{2}$	$38\frac{1}{2} < W < 39$	$39 \leq W \leq 39\frac{1}{2}$	$39\frac{1}{2} < W < 40$	$46 \leq W \leq 46\frac{1}{2}$	$46\frac{1}{2} < W < 47$
Order Width	38	Custom Size	39	Custom Size	46	Custom Size
Actual Width of your window	$48 \leq W \leq 48\frac{1}{2}$	$48\frac{1}{2} < W < 49$				
Order Width	48	Custom Size				

For other widths and colors, please select "Custom Size"(16"-58" width)

No drill blind is most suitable for inside mount, but the mounting accessories are included in the packaging.

Image: Table providing size selection recommendations based on actual window width for ordering.

4.2. No-Drill Installation Steps

These shades feature a no-drill design for easy installation, especially suitable for inside mounts. Mounting accessories are included for both no-drill and traditional screw-in methods.

- Step 1:** Place the end of the shade with the no-drill device to the left side of the window frame. Push it up against the wall.
- Step 2:** If there is a gap between the top rail and the window frame, use a silicone pad to stick to the right side of the top rail. Insert the opposite side of the shade into the window frame.
- Step 3:** After installation, tighten the safety lock using the provided hex key to secure the shade in place.

NO DRILL BLINDS

1. Place the end with the no-drill device to the left side of the window frame

2. If there is a gap between the top rail and the window frame, use a silicone pad to stick to the right side of the top rail and then push the right side of the smart blind

3. After installation, please do not forget to fasten non-drill device.

ACCESSORY

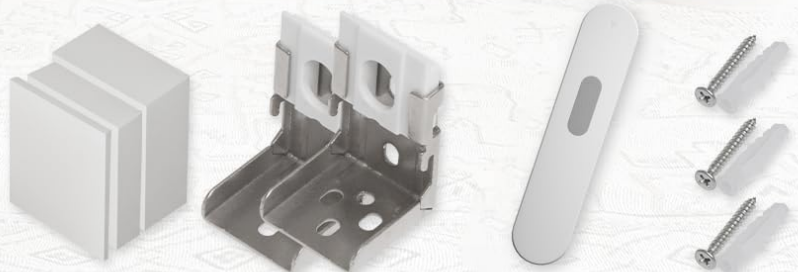


Image: Detailed diagram showing the no-drill installation steps and included accessories.

Your browser does not support the video tag.

Video: Step-by-step guide on installing DONGFXK No Drill Motorized Blinds with Remote Control.

5. OPERATING INSTRUCTIONS

5.1. Remote Control

Your shades come with a single-channel remote control. Optional 15-channel remotes are available for controlling multiple blinds.

Smart Blinds



Image: Visual representation of remote control, voice control, and app control options for the smart blinds.

- **Up Button:** Raises the shade.
- **Down Button:** Lowers the shade.
- **Stop/Pause Button:** Stops the shade at its current position.
- Refer to the remote's specific instructions for programming upper and lower limits.

5.2. Smart Control (Optional)

For advanced control, you can connect your shades to a smart home system via an optional hub (not included). This allows control through smartphone apps or voice commands with compatible devices like Alexa or Google Home.



Image: Depiction of smart control integration, showing a hub, smartphone app interface, and voice assistant devices.

5.3. Battery Operation

The shades are powered by 6 AA batteries (included). These are designed for easy replacement, typically lasting 4-6 months.

Your browser does not support the video tag.

Video: Animation demonstrating the quiet operation and blackout capability of the motorized shades.

6. MAINTENANCE

6.1. Cleaning

The blackout fabric is durable and easy to maintain.

- **Fabric:** Spot clean only. Use a soft, damp cloth with mild soap for stains. Do not immerse in water or use harsh chemicals.
- **Hardware:** Wipe the valance and other components with a dry or slightly damp cloth.

6.2. Battery Replacement

When the shades stop responding or operate slowly, it's time to replace the batteries.

1. Roll up the blinds completely and lay the unit flat on a stable surface.
2. Slide the protruding board aside to access the battery compartment.
3. Pull out the old battery box and replace the 6 AA dry batteries.
4. Install the new battery box back into the valance, ensuring it clicks into place.



Image: Diagram showing 4 steps for easy battery replacement in motorized blinds.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Possible Cause	Solution
Shade does not move.	Dead batteries in shade or remote. Remote not paired.	Replace batteries in both shade and remote. Re-pair remote if necessary (refer to remote instructions).
Shade moves slowly or inconsistently.	Low batteries in shade.	Replace the 6 AA batteries in the shade unit.
Remote control not responding.	Remote batteries dead. Remote out of range. Interference.	Replace remote batteries. Move closer to the shade. Ensure no obstructions.
Shade stops at incorrect positions.	Upper/lower limits need adjustment.	Refer to the remote control's instructions for setting or resetting the upper and lower limits.

8. SPECIFICATIONS

Feature	Detail
Brand	DONGFXK
Model	S3-black 32"W x 72"H
Material	Polycotton
Product Dimensions	72"L x 32"W
Color	S3-black
Opacity	100% Blackout
Operation Mode	Automatic, Motorized
Special Feature	Cordless, No-Drill Installation
Power Source	6 AA batteries (included)
Mounting Type	Inside Mount (No-Drill), Outside Mount (Optional Screws)
Product Care	Spot Clean Only

9. WARRANTY & SUPPORT

DONGFXK automatic blinds come with a **60-day repair & replacement policy** and a **2-year warranty**. For customer service and support, please contact DONGFXK directly. They are happy to assist with customized selections and any product-related inquiries.

For further assistance, please refer to the contact information provided with your purchase or visit the official DONGFXK website.

© 2026 DONGFXK. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question