

Philips BT3415/15

Philips 3000 Series Beard Trimmer BT3415/15 User Manual

Model: BT3415/15

INTRODUCTION

This user manual provides essential information for the safe and effective operation, maintenance, and care of your Philips 3000 Series Beard Trimmer BT3415/15. Please read these instructions thoroughly before first use and retain them for future reference.

IMPORTANT SAFETY INFORMATION

- Ensure the appliance is fully charged before initial use.
- Do not immerse the appliance in water. The head is washable, but the main body is not designed for full immersion.
- Keep the appliance dry when charging.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Only use the original charger provided with the appliance.
- Do not use the appliance if it is damaged, especially the blades or charging cable.
- For hygiene reasons, do not share the trimmer with other individuals.

PRODUCT OVERVIEW

Key Features

- **Lift & Trim System:** Lifts and guides hairs for an even trim.

- **Titanium-Coated Blades:** Self-sharpening for long-lasting sharpness and durability.
- **DuraPower Technology:** Ensures longer battery life and reduced friction.
- **20 Length Settings:** Precision dial for settings from 0.4mm to 10mm in 0.5mm increments.
- **Cordless Operation:** Up to 90 minutes of cordless use after a 1-hour charge.
- **Washable Head:** Easy cleaning under running water.
- **Battery Indicator:** Lights show battery status (low, empty, full, charging).
- **Skin-Friendly Blades:** Rounded tips to prevent scratches and irritation.
- **BeardSense Technology:** Adapts power for an even trim.

Components

The Philips 3000 Series Beard Trimmer BT3415/15 typically includes the following components:

- Beard Trimmer Unit
- Adjustable Trimming Comb
- USB Charging Cable
- Cleaning Brush
- Travel Pouch



Image: Overview of the Philips 3000 Series Beard Trimmer BT3415/15 and its included accessories: the trimmer unit, an adjustable trimming comb, a travel pouch, and a USB charging cable.



Image: Visual representation of the Philips 3000 Series Beard Trimmer BT3415/15 highlighting its main features and specifications, including washable head, wet/dry operation, run time, charging details, blade material, trimming range, cord type, and warranty period.

SETUP

Charging the Trimmer

1. Ensure the trimmer is switched off.
2. Insert the small plug of the USB charging cable into the charging socket at the bottom of the trimmer.
3. Plug the USB connector into a compatible USB power adapter (not included) or a USB port.
4. The battery indicator light will illuminate to show charging status. A full charge takes approximately 1 hour and provides up to 90 minutes of cordless use.
5. Unplug the trimmer once fully charged.

Attaching the Trimming Comb

- Align the trimming comb with the grooves on the trimmer head.
- Slide the comb onto the trimmer head until it clicks into place.
- To remove, gently push the comb upwards and slide it off.

Turning On/Off

- To turn on, press the power button once.
- To turn off, press the power button again.

Adjusting Length Settings

The trimmer offers 20 length settings from 0.4mm to 10mm. Rotate the zoom wheel on the trimmer handle to select your desired length. The selected length will be displayed on the wheel.

Maximum precision. Be in control of your beard.

BeardSense Technology for an even trim.

- Self-sharpening blades
- 60 min runtime/1h charge time
- Integrated 0.2mm precision steps
- BeardSense Technology



Image: A hand demonstrating how to adjust the precision length setting dial on the Philips 3000 Series Beard Trimmer BT3415/15, showing the numerical indicators for various trim lengths.

Trimming Your Beard or Moustache

1. Ensure your beard or moustache is clean and dry.
2. Select the desired length setting using the zoom wheel. If unsure, start with a longer setting and gradually reduce it.
3. Turn on the trimmer.
4. Place the flat top of the comb against your skin and move the trimmer slowly against the direction of hair growth.
5. For detailing or shaping, remove the comb and use the bare blades carefully.

MAINTENANCE AND CLEANING

Cleaning the Trimmer Head

1. Turn off the trimmer and unplug it from the charger.
2. Remove the trimming comb.
3. Rinse the trimmer head and comb under running tap water. Ensure no water enters the main body of the trimmer.
4. Use the provided cleaning brush to remove any stubborn hair particles from the blades.
5. Allow all parts to air dry completely before reattaching the comb or storing the trimmer.

Blade Care

- The titanium-coated blades are self-sharpening and generally do not require oiling.
- Handle the blades with care to avoid damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is empty.	Charge the trimmer for at least 1 hour.
Trimmer does not cut effectively.	Blades are clogged with hair or damaged.	Clean the trimmer head and blades thoroughly. If blades are damaged, contact customer support.
Trimmer makes unusual noise.	Hair or debris caught in the motor/blades.	Clean the trimmer thoroughly. If the noise persists, contact customer support.
Battery indicator not working.	Faulty unit or charging cable.	Ensure the charging cable is properly connected. If the issue persists, contact customer support.

SPECIFICATIONS

- **Model:** BT3415/15
- **Power Source:** Battery Powered (Rechargeable)
- **Blade Material:** Titanium-coated Steel
- **Trimming Range:** 0.4 mm to 10 mm

- **Length Settings:** 20 precision settings (0.5 mm increments)
- **Run Time:** Up to 90 minutes cordless use
- **Charging Time:** Approximately 1 hour for full charge
- **Input Voltage:** 5V (via USB cable)
- **Dimensions (LxWxH):** 23 x 13 x 5 cm
- **Weight:** 450 g
- **Included Components:** Beard Trimmer, Adjustable Comb, USB Charging Cable, Cleaning Brush, Travel Pouch

WARRANTY AND SUPPORT

Your Philips 3000 Series Beard Trimmer BT3415/15 comes with a **24-month manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or product inquiries, please contact Philips customer service. You may find additional resources and support information on the official Philips website or by visiting philips.to/groomingpacks.