

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tefal](#) /

› [Tefal Easy Fry Max 5L Air Fryer User Manual](#)

## Tefal EY245310

# Tefal Easy Fry Max 5L Air Fryer User Manual

Model: EY245310

## 1. INTRODUCTION

---

Thank you for choosing the Tefal Easy Fry Max 5L Air Fryer. This appliance is designed to help you prepare delicious and healthy meals with little to no added oil, utilizing advanced hot air technology for crispy results. With its generous 5-liter capacity, it is ideal for families of up to six people. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new air fryer.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

### 3. PRODUCT OVERVIEW

---

The Tefal Easy Fry Max Air Fryer features a sleek design with a digital control panel for easy operation. Below are the main components:

- Main Unit
- Removable Frying Basket
- Digital Touch Screen Control Panel
- Air Inlet and Outlet Vents
- Power Cord



Image: Front view of the Tefal Easy Fry Max Air Fryer, showcasing its compact and modern design.



Image: The Tefal Easy Fry Max Air Fryer with its frying basket partially pulled out, showing crispy golden fries inside. This illustrates the appliance in use.

## 4. SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Keep packaging for future storage if needed.
2. **Cleaning:** Before first use, clean the frying basket and any removable parts with hot water, dish soap, and a non-abrasive sponge. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 10 cm of free space on the back and sides, and 20 cm above the appliance.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight odor may be present, which is normal.

and will dissipate.

## 5. OPERATING INSTRUCTIONS

---

The Tefal Easy Fry Max features a digital control panel and 10 automatic cooking programs for ease of use.

### 5.1 Basic Operation

1. Place food in the frying basket. Do not overfill the basket to ensure even cooking.
2. Slide the basket back into the main unit until it clicks into place.
3. Press the power button to turn on the appliance.
4. Select a preset program or manually set the temperature and time using the digital controls.
5. Press the start button to begin cooking.
6. During cooking, you may pull out the basket to shake or turn food for even browning. The appliance will pause automatically and resume when the basket is reinserted.
7. Once cooking is complete, the timer will sound. Carefully remove the basket and transfer food to a serving dish.

### 5.2 Automatic Cooking Programs

The air fryer comes with 10 pre-set programs for common dishes. Refer to the icons on the digital panel for specific programs. These programs automatically adjust temperature and time for optimal results.

### 5.3 Manual Mode

To manually set cooking parameters:

- After turning on, use the temperature control buttons to adjust the desired temperature (e.g., 80°C - 200°C).
- Use the timer control buttons to set the desired cooking time (e.g., 1 - 60 minutes).
- Press the start button.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Frying Basket:** The removable frying basket is dishwasher safe. Alternatively, wash it with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak the basket in hot water for about 10 minutes.
3. **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element inside the appliance. Do not use abrasive materials.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

## 7. TROUBLESHOOTING

---

If you encounter issues with your air fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; Power outlet not working; Basket not inserted correctly.	Check power cord connection; Test outlet with another appliance; Ensure basket is fully pushed in until it clicks.
Food is not cooked evenly.	Basket is overfilled; Food pieces are too large; Not shaken or turned during cooking.	Reduce food quantity; Cut food into smaller, more uniform pieces; Shake or turn food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; Fatty ingredients being cooked.	Clean the basket and heating element thoroughly; For fatty foods, add a little water to the bottom of the drawer to prevent smoke.
Fries are not crispy.	Too much oil; Not enough shaking; Wrong potato type.	Use only a small amount of oil; Shake fries frequently; Use fresh potatoes and pat them dry before frying.

## 8. SPECIFICATIONS

---

Detailed technical specifications for the Tefal Easy Fry Max 5L Air Fryer.

Feature	Specification
Brand	Tefal
Model Number	EY245310
Capacity	5 Liters
Power	1500 Watts
Color	Forest Green
Material	Plastic
Dimensions (L x W x H)	37.5 x 27.3 x 32.5 cm
Weight	5.76 Kilograms



Image: Diagram showing the dimensions of the Tefal Easy Fry Max Air Fryer: 37.5 cm length, 27.3 cm width, and 32.5 cm height.

## 9. WARRANTY AND SUPPORT

---

Tefal is committed to providing high-quality products. This appliance is designed for long-term use, with parts available for repair for up to 15 years through our global network of 6200 repair centers. This commitment is part of our effort to protect the environment and reduce waste.

For warranty claims, technical support, or to find a repair center, please visit the official Tefal website or contact their customer service. Keep your proof of purchase for warranty purposes.



