

[Manuals.plus](#) /

› [Play-Doh](#) /

› Play-Doh Hasbro Kitchen Creations Magical Mixer Playset Instruction Manual

Play-Doh F4718

Play-Doh Hasbro Kitchen Creations Magical Mixer Playset Instruction Manual

Model: F4718

INTRODUCTION

Welcome to the world of Play-Doh Kitchen Creations! This Magical Mixer Playset allows children aged 3 and up to engage in creative play by making various Play-Doh treats. This manual provides essential information for safe assembly, operation, and maintenance of your new playset.



Image: A child is shown actively using the Play-Doh Magical Mixer, pressing the handle to stamp out Play-Doh creations. Various colorful Play-Doh treats are visible on the table.

SAFETY INFORMATION

- **Recommended Age:** This playset is suitable for children aged 3 years and up.
- **Do Not Ingest:** Play-Doh modeling compound is non-toxic but not intended for consumption.
- **Adult Assembly Required:** Initial assembly of the playset components must be performed by an adult.
- **Note to Parents:** Play-Doh compound contains wheat. It is non-toxic and conforms to ASTM D-4236 standards.
- **Creative Outcomes:** The results of creations may vary depending on the child's age and skill level.

COMPONENTS INCLUDED

The Play-Doh Kitchen Creations Magical Mixer Playset includes the following items:

- 1 x Mixer with removable bowl
- 1 x Extruder tool

- 1 x Spatula
- 2 x Mold trays
- 5 x Cans of Play-Doh modeling compound (net content: 283 g)



Image: A complete overview of the Play-Doh Magical Mixer Playset components, showing the red mixer, two different mold trays, a blue spatula, a white extruder, and five colorful Play-Doh cans.

SETUP

Follow these steps to set up your Play-Doh Magical Mixer Playset:

1. Unpack all components from the packaging.
2. Ensure the mixer is placed on a flat, stable surface.
3. Attach the removable bowl to the base of the mixer.
4. Select one of the mold trays and place it securely into the mixer's bowl.



Image: A close-up of hands carefully placing a blue mold tray into the gray mixing bowl of the red Play-Doh Magical Mixer.

OPERATING INSTRUCTIONS

Create delicious-looking Play-Doh treats with these simple steps:

1. **Place Mold Trays:** Securely place one or two mold trays onto the mixer's bowl.
2. **Fill Molds:** Fill each mold with your desired Play-Doh color.
3. **Stamp Treats:** Pull the mixer handle down to stamp out two toy treats simultaneously.
4. **Decorate with Extruder:** Use the extruder tool to add Play-Doh frosting and sprinkles.
5. **Create Toppings:** Utilize the half-molds located on the side of the toy mixer to create fun Play-Doh

toppings and candies.

6. **Final Touches:** Decorate and shape your Play-Doh treats as you wish.



Image: A three-panel image showing the mixer stamping a cupcake, a finished Play-Doh cupcake with colorful sprinkles, and various Play-Doh shapes being created with an extruder tool.



Image: A child's hands are shown using the white extruder tool with a purple plunger to add Play-Doh frosting onto a Play-Doh creation in the mixer's bowl.



Image: A close-up of the red Play-Doh mixer's side, featuring several small molds like stars, hearts, and shells, used for creating decorative Play-Doh toppings.

MAINTENANCE

To ensure the longevity of your Play-Doh Magical Mixer Playset and modeling compound:

- **Cleaning the Playset:** Wipe down plastic parts with a damp cloth after each use. Do not submerge the mixer in water.
- **Cleaning Molds and Tools:** Remove any excess Play-Doh from molds and tools. If Play-Doh dries in crevices, allow it to dry completely, then scrape it out with a blunt tool or stiff brush.
- **Storing Play-Doh:** Always return Play-Doh compound to its airtight containers after play to prevent it from drying out. If the compound becomes a little dry, add a few drops of water and knead it to restore its softness.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Play-Doh is too hard:** If the Play-Doh compound feels stiff, add a few drops of water to it and knead thoroughly. Repeat until the desired consistency is achieved.
- **Play-Doh stuck in molds:** Ensure the Play-Doh is soft enough before pressing into molds. If it gets stuck, let it dry completely, then it should be easier to remove.
- **Mixer handle is stiff:** Check for any Play-Doh residue obstructing the mechanism. Clean as per the maintenance instructions. Do not force the handle.

SPECIFICATIONS

Feature	Detail
Brand Name	Play-Doh
Model Number	F4718
Manufacturer	Hasbro
Recommended Minimum Age	36 months
Recommended Maximum Age	72 months
Item Dimensions (L x W x H)	8.1 x 27.9 x 21.6 cm
Material	Plastic
Color	Multicolor
Power Source Type	Manual
Battery Type	No batteries required
Assembly Required	No
Educational Objective	Imagination development and fine motor skills

WARRANTY

This product is covered by the standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for any warranty claims. For specific warranty details, refer to the packaging or contact Play-Doh customer support.

SUPPORT

For further assistance, questions, or to purchase replacement parts or additional Play-Doh compound, please visit the official Play-Doh website or contact Hasbro customer service. Contact information can typically be found on the product packaging or the brand's official website.

You can also visit the [Play-Doh Brand Store on Amazon](#) for more products and information.

