

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER BL2010BP Crush Master Blender and 2-Slice Extra Wide Slot Toaster User Manual](#)

BLACK+DECKER BL2010BP, 2-Slice Extra Wide Slot Toaster

BLACK+DECKER BL2010BP Crush Master Blender and 2-Slice Extra Wide Slot Toaster User Manual

Model: BL2010BP (Blender), 2-Slice Extra Wide Slot Toaster

[Safety Information](#)
[Cleaning](#)

[Blender Setup](#)
[Troubleshooting](#)

[Blender Operation](#)
[Specifications](#)

[Toaster Operation](#)
[Warranty & Support](#)

[Care &](#)

INTRODUCTION

This manual provides important instructions for the safe operation, maintenance, and care of your BLACK+DECKER BL2010BP Crush Master Blender and BLACK+DECKER 2-Slice Extra Wide Slot Toaster. Please read all instructions thoroughly before using the appliances and retain this manual for future reference.



This image displays both the BLACK+DECKER BL2010BP Crush Master Blender and the BLACK+DECKER 2-Slice Extra Wide Slot Toaster. The blender features a black base with a control panel and a clear plastic jar. The toaster is also black with two wide slots and control buttons.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury:

- Read all instructions before using the appliance.

- Do not immerse the appliance base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Always operate on a level surface.

BLENDER OVERVIEW



This image displays the BLACK+DECKER BL2010BP Crush Master Blender. It features a black base with a control panel, a clear plastic blending jar, and a black lid. The blender is designed for various blending tasks with its 10-speed settings.



This diagram shows the main components of the blender: (1) the motor base, (2) the 6-cup (48-oz) plastic blending jar, and (3) the control panel with speed settings and pulse function.



An exploded view of the blender illustrates its components: the motor base, the removable blade assembly, the blending jar, and the lid with a removable measuring cup insert. This shows how the parts fit together for assembly.



This close-up image shows the 4-point stainless steel blade assembly, designed for efficient blending and crushing of ingredients.

BLENDER SETUP AND ASSEMBLY

1. Before first use, wash all parts except the blender base in warm, soapy water. Rinse and dry thoroughly.
2. Place the blender base on a clean, dry, level surface.
3. Turn the blending jar upside down and place the blade assembly into the opening at the bottom of the jar.
4. Place the jar collar onto the blade assembly and twist clockwise until securely tightened.
5. Place the assembled jar onto the blender base, ensuring it is seated firmly.
6. Place the lid onto the blending jar and insert the measuring cup into the lid opening.

BLENDER OPERATION



This image shows a close-up of the blender's control panel. It features an "Off" switch, a "Pulse" button, and ten numbered speed buttons (1-10) for precise control over blending tasks.

1. Ensure the blender is unplugged before adding ingredients.
2. Add ingredients to the blending jar. Do not fill past the maximum fill line.
3. Securely place the lid on the jar.
4. Plug the blender into a standard electrical outlet.
5. Select the desired speed (1-10) by pressing the corresponding button. For short bursts of power, use the "Pulse" button.
6. Blend until desired consistency is achieved.

7. To stop blending, press the "Off" button.
8. Unplug the blender before removing the jar or pouring contents.

Tips for Blending:

- For best results, add liquids first, then soft ingredients, then hard ingredients, and finally ice.
- Use the pulse function for chopping or to break up larger pieces of food.
- The measuring cup insert in the lid allows you to add ingredients while blending.



This image demonstrates how to add ingredients, such as liquids, through the measuring cup opening in the blender lid while the blender is operating. This allows for continuous blending without stopping.

TOASTER OVERVIEW



This image shows the BLACK+DECKER 2-Slice Extra Wide Slot Toaster. It features a sleek black design with two wide toasting slots, a shade control dial, and function buttons on the side.

EXTRA-WIDE TOASTING SLOTS
TOAST BAGELS AND
THICK ARTISAN BREADS WITH EASE



A close-up view highlights the extra-wide toasting slots of the BLACK+DECKER toaster, designed to accommodate various bread types, including bagels and thick artisan slices.

TOASTER OPERATION



This image displays the toaster's control panel, featuring a rotary dial for selecting toast shade settings (from light to dark) and three dedicated buttons for "Bagel," "Frozen," and "Cancel" functions.

1. Place the toaster on a stable, heat-resistant surface away from flammable materials.
2. Plug the toaster into a standard electrical outlet.
3. Insert up to two slices of bread, bagels, or other items into the extra-wide toasting slots.
4. Select your desired toast shade using the shade control dial (1 for lightest, 6 for darkest).
5. Press the toast lever down until it locks into place. The toasting cycle will begin.
6. **Special Functions:**
 - Press the **BAGEL** button for toasting bagels (toasts the cut side and warms the other).
 - Press the **FROZEN** button for toasting frozen items (adds extra time to defrost).
7. To stop the toasting cycle at any time, press the **CANCEL** button.
8. Once the cycle is complete, the toast will automatically pop up.
9. Unplug the toaster when not in use.

CARE AND CLEANING

Blender Cleaning

1. Always unplug the blender before cleaning.
2. Disassemble the blending jar, blade assembly, and lid.
3. The blending jar, lid, and blade assembly are dishwasher safe. Place them on the top rack of your dishwasher.



This image shows various removable blender parts, including the blade assembly and lid, being placed into a dishwasher for convenient cleaning. The jar is also dishwasher safe.

4. Wipe the blender base with a damp cloth. Do not immerse the base in water.
5. Ensure all parts are completely dry before reassembling or storing.

Toaster Cleaning

1. Always unplug the toaster and allow it to cool completely before cleaning.
2. Locate the slide-out crumb tray at the bottom of the toaster. Pull it out to remove crumbs.
3. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
4. Wipe the exterior of the toaster with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Never insert utensils or fingers into the toasting slots.

TROUBLESHOOTING

Blender Troubleshooting

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; jar not properly seated.	Ensure plug is firmly in outlet; check circuit breaker; ensure jar is securely locked onto base.
Ingredients not blending smoothly.	Too little liquid; too many ingredients; ingredients too large.	Add more liquid; reduce ingredient quantity; cut ingredients into smaller pieces; use pulse function.
Blender leaks.	Blade assembly not tightened; jar not seated correctly.	Ensure blade assembly is securely twisted onto the jar; ensure jar is firmly on the base.

Toaster Troubleshooting

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet not working; toast lever not fully depressed.	Ensure plug is firmly in outlet; check circuit breaker; push toast lever down until it locks.
Toast is too light/dark.	Shade setting incorrect.	Adjust the shade control dial to a higher number for darker toast or a lower number for lighter toast.

Problem	Possible Cause	Solution
Toast gets stuck.	Item too large or irregularly shaped.	Unplug toaster, allow to cool, then carefully remove the item. Do not use metal utensils.

SPECIFICATIONS

BLACK+DECKER BL2010BP Crush Master Blender

- **Model:** BL2010BP
- **Power:** 550 Watts
- **Speeds:** 10 speeds + Pulse function
- **Jar Capacity:** 6-cup (48-oz) plastic jar
- **Blades:** 4-point Stainless Steel
- **Color:** Black
- **Voltage:** 120 Volts
- **Special Feature:** Lightweight jar, PerfectPour spout

BLACK+DECKER 2-Slice Extra Wide Slot Toaster

- **Slots:** 2 Extra-Wide Slots
- **Power:** 850 Watts
- **Shade Settings:** 6 timed settings
- **Functions:** Bagel, Frozen, Cancel
- **Color:** Black
- **Feature:** Slide-out crumb tray

WARRANTY INFORMATION

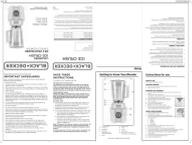
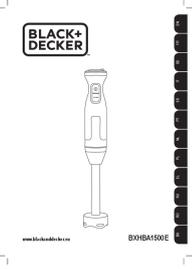
These BLACK+DECKER appliances come with a limited warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official BLACK+DECKER website.

CUSTOMER SUPPORT

For any questions, assistance, or to register your product, please visit the official BLACK+DECKER website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.

Online Support: www.blackanddecker.com/support

© 2023 BLACK+DECKER. All rights reserved.

	<p>BLACK+DECKER 4-Slice Toaster Oven: Instructions for Use, Features, and Specifications</p> <p>Comprehensive guide to the BLACK+DECKER 4-Slice Toaster Oven (Model TO1745SSG-1A). Learn about its four cooking functions, 30-minute timer, extra-wide viewing window, and technical specifications including dimensions, voltage, and wattage.</p>
	<p>BLACK+DECKER 2-Slice Toaster: User Manual, Safety, and Operation Guide</p> <p>Your guide to the BLACK+DECKER 2-Slice Toaster (TR1278 series). Learn about important safety precautions, how to use your toaster, cleaning, and warranty information.</p>
	<p>BLACK+DECKER Toaster Oven & Amazon Basics Bakeware Set User Guides</p> <p>User manuals and safety instructions for the BLACK+DECKER 4-Slice Natural Convection Toaster Oven (TO1755SBC) and the Amazon Basics 6-Piece Nonstick, Carbon Steel Oven Bakeware Baking Set.</p>
	<p>BLACK+DECKER ICE CRUSH 2-Speed Blender User Manual & Care Guide</p> <p>Comprehensive user manual and care guide for the BLACK+DECKER ICE CRUSH 2-Speed Blender (models BL0877, BL0876). Includes safety instructions, operating procedures, cleaning tips, and assembly.</p>
	<p>Black+Decker Extra-Wide Convection Oven User Manual and Care Guide</p> <p>Comprehensive user manual and care guide for the Black+Decker Extra-Wide Convection Oven (Models TO3265XSSD, TO3265XSSC), covering safety precautions, operating instructions for toasting, broiling, air frying, and baking, care and cleaning procedures, and warranty information.</p>
	<p>BLACK+DECKER BXHBA1500E Hand Blender User Manual and Safety Guide</p> <p>Comprehensive user manual for the BLACK+DECKER BXHBA1500E hand blender, covering safety instructions, operation, accessories, cleaning, and technical support.</p>