

[Manuals.plus](#) /

> [CURECURE](#) /

> CURECURE HMP-140160 Heated Mattress Topper User Manual

CURECURE HMP-140160

CURECURE HMP-140160 Heated Mattress Topper

User Manual

Model: HMP-140160 | Brand: CURECURE

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your CURECURE Heated Mattress Topper. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not use with infants, children, incapacitated persons, or anyone insensitive to heat.
- Do not use if wet.
- Do not use with damaged cords or plugs. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Do not use with adjustable beds unless the topper is designed for such use and the cord is not pinched or damaged.
- Do not use pins or other metallic objects with this appliance.
- Do not fold, crease, or bunch the topper during use. Ensure it lies flat on the mattress.
- Always unplug the appliance from the power outlet when not in use or before cleaning.
- Keep controllers away from moisture.
- This appliance is for household use only.
- Do not use with other heating devices.
- Regularly inspect the appliance for any signs of wear or damage.

PRODUCT OVERVIEW

Components

- Heated Mattress Topper (140 x 160 cm)

- Two Removable Controllers with Power Cords

Key Features

- **Dual Control & Heating Zones:** Two independent controllers manage two separate heating zones, allowing personalized temperature settings for each user.
- **4 Temperature Levels:** Choose from four distinct heat settings for optimal comfort.
- **10-Hour Automatic Shut-Off:** For safety and energy efficiency, the topper automatically turns off after 10 hours of continuous operation.
- **Soft Coral Fleece Material:** Made from thick, skin-friendly coral velvet for a comfortable sleeping experience without feeling internal wires.
- **Elastic Strap Design:** Ensures the topper remains securely attached to your mattress, preventing movement.
- **Machine Washable:** Easy to clean for hygiene and convenience (controllers must be removed).
- **Overheating Protection:** Built-in safety mechanism to prevent overheating.



Image: The CURECURE Heated Mattress Topper laid flat on a bed, showcasing its design and coverage.



Soft Coral Fleece Material

Say Goodbye to the Cold and Embrace the Warmth



Image: A detailed view of the soft coral fleece material used for the mattress topper, emphasizing its plush and skin-friendly texture.

SETUP INSTRUCTIONS

- 1. Unpack the Topper:** Carefully remove the heated mattress topper and its components from the packaging. Ensure all parts are present and undamaged.
- 2. Position on Mattress:** Lay the heated mattress topper flat on your mattress. Ensure it is evenly spread and covers the desired area without any folds or creases.
- 3. Secure with Elastic Straps:** Use the elastic straps located at each corner of the topper to firmly attach it to your mattress. Pull the straps under the mattress corners to prevent the topper from shifting during use.



Elastic Strap Design

Can be firmly attached to your mattress

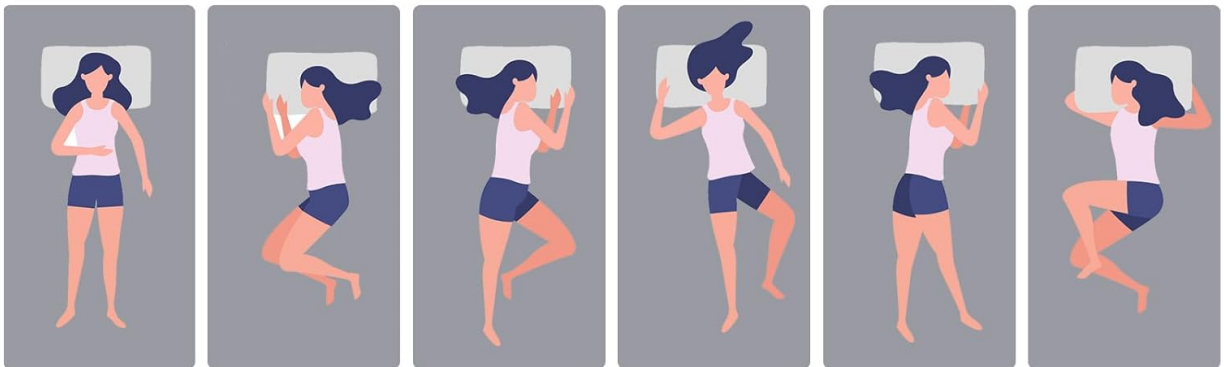


Image: The elastic strap design of the mattress topper, ensuring it remains firmly attached to the mattress.

4. **Connect Controllers:** Locate the connection ports on the topper and the corresponding plugs on the removable controllers. Firmly insert the controller plugs into the topper's ports. Ensure a secure connection.

Dual Controllers



Image: Two independent controllers for the CURECURE heated mattress topper, each with controls for heating levels and auto shut-off.

5. **Plug into Power Outlet:** Plug the power cords of the controllers into a standard 220V electrical outlet.

OPERATING INSTRUCTIONS

Powering On and Adjusting Heat

1. **Power On:** With the topper plugged in, press the power switch on the controller once. The control light for the lowest speed will flash. This indicates standby mode. If no further action is taken, the topper will automatically shut off after 10 seconds.
2. **Select Heating Level:** To activate heating, press the power switch again. This will typically engage the 1st heating level. Continue pressing the power switch to cycle through the 4 available heating levels. The indicator lights on the controller will show the selected level.
3. **Dual Zone Control:** Since there are two independent controllers, each user can adjust their side of the

mattress topper to their preferred temperature setting.

Two Independent Heating Zones

Customize Your Own Warm Side



Image: An illustration demonstrating the two independent heating zones, allowing personalized warmth for each user.

Automatic Shut-Off

- The heated mattress topper is equipped with a 10-hour automatic shut-off function. This safety feature will turn off the heating elements after 10 hours of continuous operation.
- To restart the topper after an automatic shut-off, simply turn it off and then on again using the power switch on the controller.

Powering Off

- To turn off the heated mattress topper, press and hold the power switch on the controller for 2 seconds in any heating mode.
- Always unplug the topper from the wall outlet when not in use for extended periods.

MAINTENANCE AND CLEANING

Proper care and maintenance will extend the life of your heated mattress topper.

1. **Before Cleaning:** Always ensure the heated mattress topper is unplugged from the power outlet and the controllers are detached from the topper. Allow the topper and controllers to cool completely.

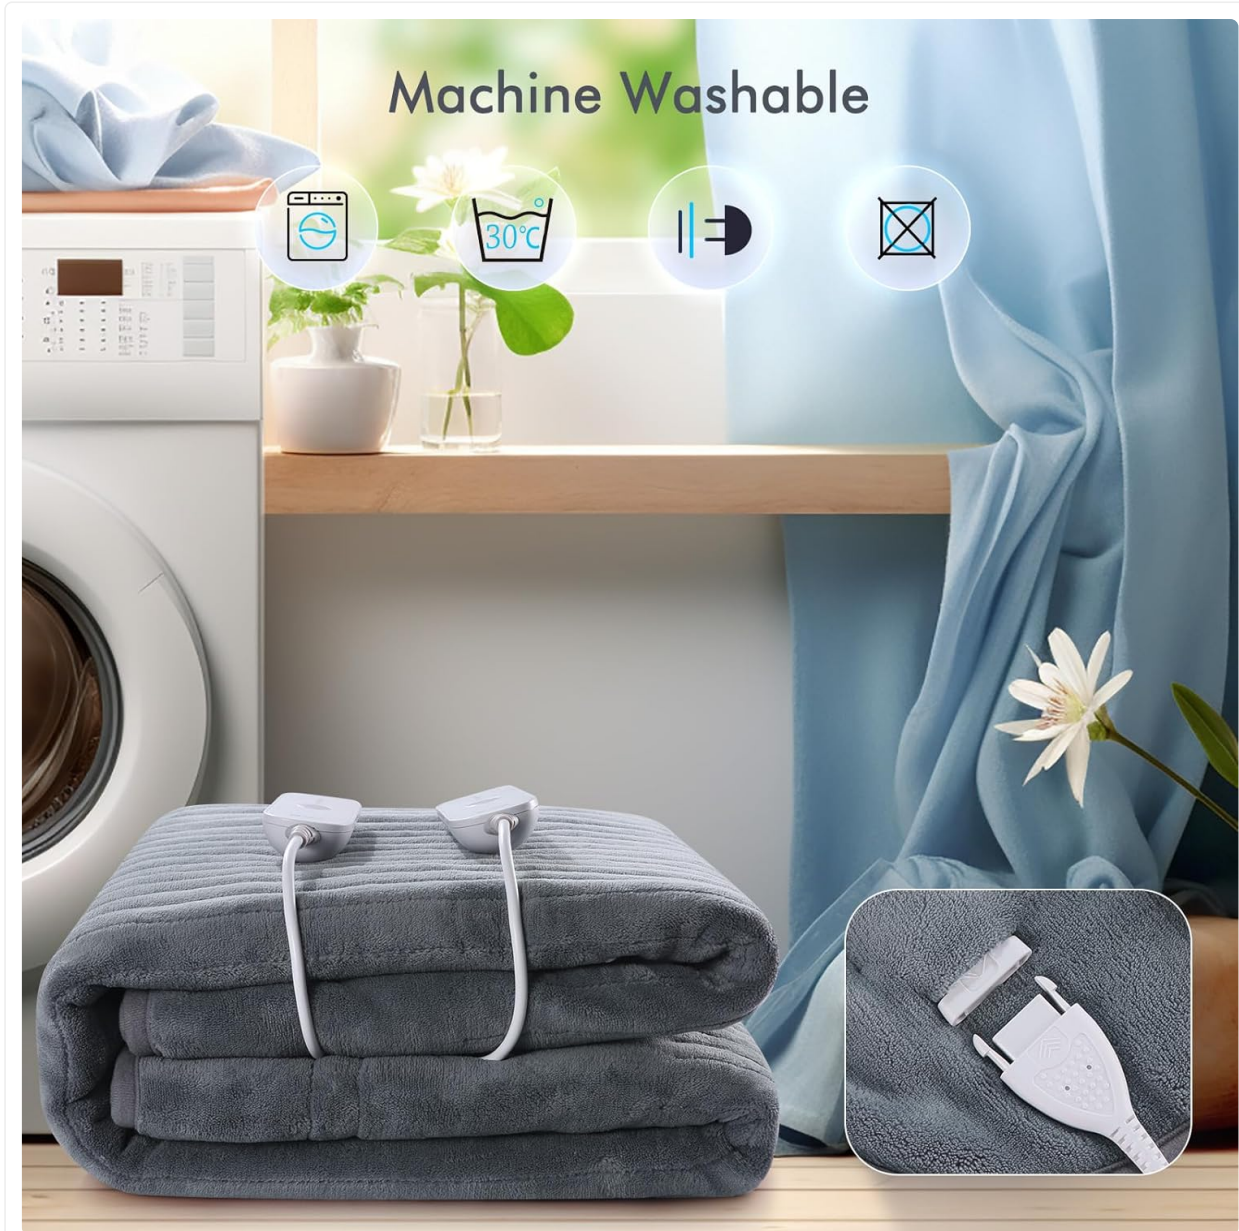


Image: The mattress topper folded, illustrating its machine washable feature and the detachable controller for safe cleaning.

2. **Machine Washing:** The topper is machine washable. Use cold water on a gentle cycle. Do not use bleach.
3. **Drying:** Tumble dry on a low temperature setting. Ensure the topper is completely dry before reconnecting the controllers or storing.
4. **Do Not Iron:** Do not iron the heated mattress topper.
5. **Do Not Dry Clean:** Do not dry clean the heated mattress topper.
6. **Storage:** When not in use, store the topper in a cool, dry place. Avoid placing heavy objects on it to prevent damage to the heating elements.

TROUBLESHOOTING

If you experience issues with your heated mattress topper, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Topper does not heat.	Not plugged in; controller not connected properly; power switch not pressed; automatic shut-off activated.	Ensure power cord is securely plugged into a working outlet. Check that controllers are firmly connected to the topper. Press the power switch to turn on and select a heating level. If auto shut-off occurred, cycle power off and on.
Topper heats unevenly.	Topper is folded or creased.	Ensure the topper is spread flat on the mattress without any folds or bunches.
Controller lights are flashing or not responding.	Loose connection; internal error; standby mode.	Check controller connection to the topper and power outlet. Unplug and re-plug the unit. If flashing, it might be in standby mode; press the power button again to select a heating level. If the issue persists, contact customer support.
Topper feels too hot or not hot enough.	Incorrect temperature setting.	Adjust the temperature level using the controller to your desired comfort.

SPECIFICATIONS

Model Number	HMP-140160
Dimensions	140 x 160 cm
Material	Coral Fleece
Color	Grey
Voltage	220 Volts
Power	1260 Watts
Frequency	60 Hz
Number of Heating Levels	4
Automatic Shut-Off	10 Hours

Special Features	Automatic Shut-Off, Timer, Overheating Protection, Dual Zone Control
Care Instructions	Machine Washable (cold water), Tumble Dry Low. Do not iron, bleach, or dry clean.

Size: 140×160cm



Image: The CURECURE Heated Mattress Topper on a bed, illustrating its dimensions of 140 cm by 160 cm.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact CURECURE customer service directly. Contact details can typically be found on the product packaging or the official CURECURE website.

Please retain your proof of purchase for any warranty claims.

