

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› RG57A4-BGEF RG57E1/BGEU1 Replaced Remote Control User Manual

ECONTROLLY RG57A4-BGEF

RG57A4-BGEF RG57E1/BGEU1 Replaced Remote Control User Manual

Model: RG57A4-BGEF | Brand: ECONTROLLY

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY RG57A4-BGEF replacement remote control, designed for use with various ECOX, Midea, and Osaka AC Air Conditioners, including models like RG57E1/BGEU1. This remote is a direct replacement and functions similarly to the original, offering a cost-effective solution for lost or damaged controls. It is constructed from durable ABS material, ensuring wear resistance and a long lifespan.

No programming or setup is required; simply insert batteries to begin operation. All units are tested to ensure perfect functionality upon delivery.





Figure 1: Front view of the RG57A4-BGEF replacement remote control, showing the display screen and button layout.

2. SETUP: BATTERY INSTALLATION

The RG57A4-BGEF remote control requires two (2) AA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Important: Use only new alkaline batteries. Rechargeable batteries may not provide sufficient power for optimal performance. If the remote does not work, ensure nothing is blocking the infrared sensor on your AC unit.



Figure 2: Back view of the remote control, showing the battery compartment ready for AA battery insertion.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your RG57A4-BGEF remote control.

- **ON/OFF:** Press to turn the air conditioner on or off.
- **MODE:** Cycles through operating modes such as Auto, Cool, Dry, Fan, and Heat (if supported by your AC unit).
- **FAN:** Adjusts the fan speed (e.g., Auto, Low, Medium, High).
- **TEMP (Up/Down Arrows):** Increases or decreases the desired temperature setting.
- **SILENCE FP:** Activates or deactivates the silent operation mode or "Follow People" function, depending on your AC model.
- **TIMER ON:** Sets a timer for the air conditioner to turn on automatically.
- **TIMER OFF:** Sets a timer for the air conditioner to turn off automatically.
- **SLEEP:** Activates the sleep mode, which adjusts temperature and fan speed for comfortable sleep.
- **FRESH:** Activates the fresh air or air purification function (if available on your AC unit).
- **TURBO:** Engages maximum cooling or heating power for rapid temperature adjustment.
- **SELF CLEAN:** Initiates the self-cleaning function of the indoor unit (if supported).
- **LED:** Toggles the display light on the indoor unit.
- **FOLLOW ME:** Activates the "Follow Me" function, where the remote's built-in sensor measures the temperature at its location and adjusts the AC accordingly (if supported by your AC unit).



Figure 3: Angled view of the remote control, providing a clear perspective of the button arrangement.

4. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote control or exposing it to excessive force, moisture, or direct heat.

5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Ensure new, fresh alkaline batteries are correctly installed (check polarity).
 - Verify there are no obstructions between the remote control and the infrared receiver on your AC unit.
 - Point the remote directly at the AC unit's receiver.
 - Check the distance; ensure you are within the effective operating range.
- **Buttons Not Working:**
 - Clean the remote's surface and buttons with a soft, dry cloth to remove any dirt or residue.
 - Replace batteries, even if they seem to have some power left.
- **Incorrect Functionality:**
 - Confirm that your AC unit model is listed as compatible (e.g., RG57A4-BGEF, RG57E1/BGEU1).
 - Some advanced functions may only work if your specific AC unit supports them.

If the issue persists after trying these steps, please contact customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	RG57A4-BGEF
Compatible Models	RG57A4-BGEF, RG57E1/BGEU1 (and others from ECOX, Midea, Osaka AC)
Brand	ECONTROLLY
Power Source	2 x AA Alkaline Batteries (not included)
Material	ABS
Color	Black
Product Dimensions	6 x 3 x 0.5 inches
Item Weight	2.39 ounces
Special Feature	Ergonomic
Max Number of Supported Devices	1 (Controls one AC unit)
Connectivity Technology	Infrared (IR)

7. WARRANTY AND SUPPORT

This replacement remote control is designed for reliable performance. While specific warranty details are not provided in this manual, ECONTROLLY products are typically backed by customer support.

If you have any questions, encounter issues, or require assistance with your remote control, please contact the seller or ECONTROLLY customer service through the platform where you purchased the product. Provide your order details and a clear description of the issue for prompt support.

© 2024 ECONTROLLY. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.