

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY 100024646 Voice Replaced Remote Control User Manual for ONN Android 4K UHD Stick TV Box Models 100024646 and 100026240

ECONTROLLY ONN-8-100024646

ECONTROLLY 100024646 Voice Replaced Remote Control User Manual

For ONN Android 4K UHD Stick TV Box Models 100024646 and 100026240

INTRODUCTION

This manual provides instructions for the ECONTROLLY 100024646 Voice Replaced Remote Control. This remote is designed as a replacement for the original remote control compatible with ONN Android 4K UHD Stick TV Box models 100024646 and 100026240. It offers essential functions for controlling your device.

SETUP

The ECONTROLLY 100024646 remote control is designed for immediate use without complex programming. Follow these steps to begin operation:

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) new AA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for inserting two AA batteries.

Important: Use only new alkaline batteries. Rechargeable batteries may not provide sufficient power for optimal performance. Ensure nothing obstructs the front of your ONN Android 4K UHD Stick TV Box for proper signal reception.

OPERATING INSTRUCTIONS

This remote control utilizes infrared technology for communication with your ONN Android 4K UHD Stick TV Box. Point the remote directly at your device for best performance.

Remote Control Layout





Image: Front view of the ECONTROLLY 100024646 remote control, displaying the arrangement of all buttons.

The remote features an ergonomic design with clearly labeled buttons for intuitive control. Key functions include:

- **Power Button ():** Turns the ONN TV Box on or off.
- **Voice Assistant Button (Microphone icon):** Activates the voice control feature for your ONN TV Box.
- **Navigation Pad (Circular):** Used to navigate menus and select items. Press the center button to confirm selections.
- **Back Button (←):** Returns to the previous screen or menu.
- **Home Button (House icon):** Returns to the main home screen of your ONN TV Box.
- **Volume Up/Down (+/-):** Adjusts the volume level.
- **Mute Button (Speaker with X):** Mutes or unmutes the audio.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services like YouTube and Netflix.

Using Voice Control

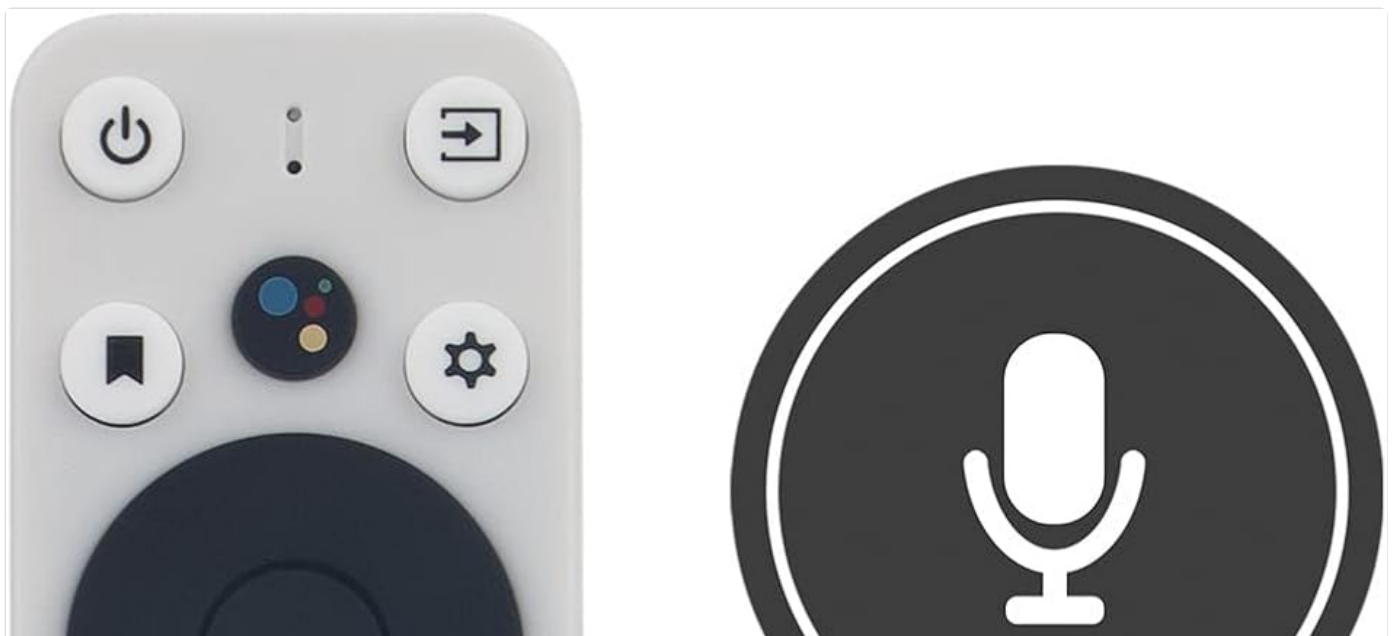




Image: The ECONTROLLY 100024646 remote control, with a prominent microphone icon indicating its voice control capability.

To use the voice control feature, press and hold the Voice Assistant button (microphone icon) on the remote. Speak clearly into the remote, then release the button. Your ONN Android 4K UHD Stick TV Box will process your command.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries.

- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, remove the batteries to prevent leakage.
- **Avoid Drops:** While the remote is designed to be durable, avoid dropping it or subjecting it to strong impacts, which can damage internal circuitry.

TROUBLESHOOTING

If you experience issues with your ECONTROLLY remote control, refer to the following common solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace with new alkaline AA batteries, ensuring correct polarity.
Remote has intermittent response.	Low battery power; obstruction between remote and TV Box; remote too far from TV Box.	Replace batteries. Ensure a clear line of sight to the TV Box. Move closer to the TV Box.
Voice control not working.	Voice Assistant button not held down; microphone obstructed; TV Box settings.	Press and hold the Voice Assistant button while speaking. Ensure no obstruction over the microphone. Check your ONN TV Box settings for voice control activation.
Specific buttons not working.	Button stuck or damaged; internal fault.	Gently press the button multiple times. If issue persists after battery replacement, contact customer support.

If these solutions do not resolve the issue, please contact ECONTROLLY customer support for further assistance.

SPECIFICATIONS

- **Brand:** ECONTROLLY
- **Model Number:** ONN-8-100024646 (Compatible with ONN Android 4K UHD Stick TV Box Models 100024646, 100026240)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AA Alkaline Batteries (not included)
- **Material:** ABS
- **Color:** Black
- **Product Dimensions:** 6 x 3 x 0.5 inches (approximately)
- **Item Weight:** 2 ounces (approximately, without batteries)
- **Special Feature:** Ergonomic design, Voice Control

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller's policy at the time of purchase. For technical support or further inquiries, please contact ECONTROLLY customer service through the platform where the product was purchased. You can often find contact information for the seller on your order details page or by visiting the [ECONTROLLY brand page on Amazon](#).

