

COLSUR S29-Schwarz

COLSUR Digital Alarm Clock with Wireless Charging

Model: S29-Schwarz

1. INTRODUCTION

Thank you for choosing the COLSUR Digital Alarm Clock with Wireless Charging. This multifunctional device combines a Bluetooth speaker, digital alarm clock, 15W wireless charger, FM radio, adjustable night lamp, and a portable phone stand into one elegant unit. Designed for convenience and efficiency, it aims to simplify your daily routine and enhance your living space.



Image 1.1: The COLSUR Digital Alarm Clock with a phone wirelessly charging and the power adapter.

2. PACKAGE CONTENTS

Please check the box for the following items:

- COLSUR Digital Alarm Clock (Main Unit)
- Power Adapter
- Type-C Data Cable
- User Manual (This document)

Multi-Functional Speakers



Image 2.1: Labeled diagram of the alarm clock and its accessories.

3. PRODUCT FEATURES

- **6-in-1 Multifunctionality:** Integrates a Bluetooth Speaker, Digital Alarm Clock, 15W Wireless Charger, FM Radio, 4-level Adjustable Night Lamp, and a Portable Phone Stand.

- **High-Fidelity Bluetooth Speaker:** Enjoy enhanced HD sound performance with a Bluetooth 5.3 chip, maintaining connection within 10 meters (33 feet).

High-Fidelity Sound Bluetooth Speaker

The greater wireless range of **33ft** provides a hearing feast exclusively for you.



2500mAh

battery for long-lasting use

Image 3.1: The alarm clock functioning as a high-fidelity Bluetooth speaker.

- **Digital Alarm Clock with LED Display:** Features a clear LED display with 3 brightness levels (low, medium, high). Adjustable alarm volume and dual active/passive snooze modes ensure a peaceful wake-up.

Surprisingly Loud Alarm Clock

16 precision volume levels, ideal for heavy sleepers



Volume 0-16 Levels



Big Snooze Function extra 5 mins



Image 3.2: The alarm clock with its snooze function and adjustable volume.

- **15W Wireless Charging:** Smart charging protocol provides fast wireless charging for iOS and Android devices. Ensure the power adapter is connected for this function. Compatible with phone cases less than 5mm thick.

Universal Compatibility Wireless Charging

iPhone



15/ 15 Pro /15 Pro Max/14/14 Plus /14 Pro Max/iphone 13 / 13pro / 13pro MAX
iphone12 1 12Pro / 12 Pro MAX
iphone11/11Pro /11Pro MAX

Samsung



Galaxy Note 10/S10S10+
/S9/S9+/S8/S8+

More qi enable phone



Pixel3XL Pixel3 LG V40 LG G7 Compatible
with All Qi-Certified & QC2.0 Phones

AirPods



Air Pods2 Air Pods Pro

Note:The phone caseis < 5mm



Magnetic Case



Phone Holder



Metal Case



Credit Card



Image 3.3: Wireless charging compatibility for various devices.

- **Adjustable Night Lamp:** The integrated lamp offers 4 levels of brightness, suitable for various needs from dim sleep light to brighter illumination.

Individual Control Brightness

Adjustable 4 Levels Display and Lamp

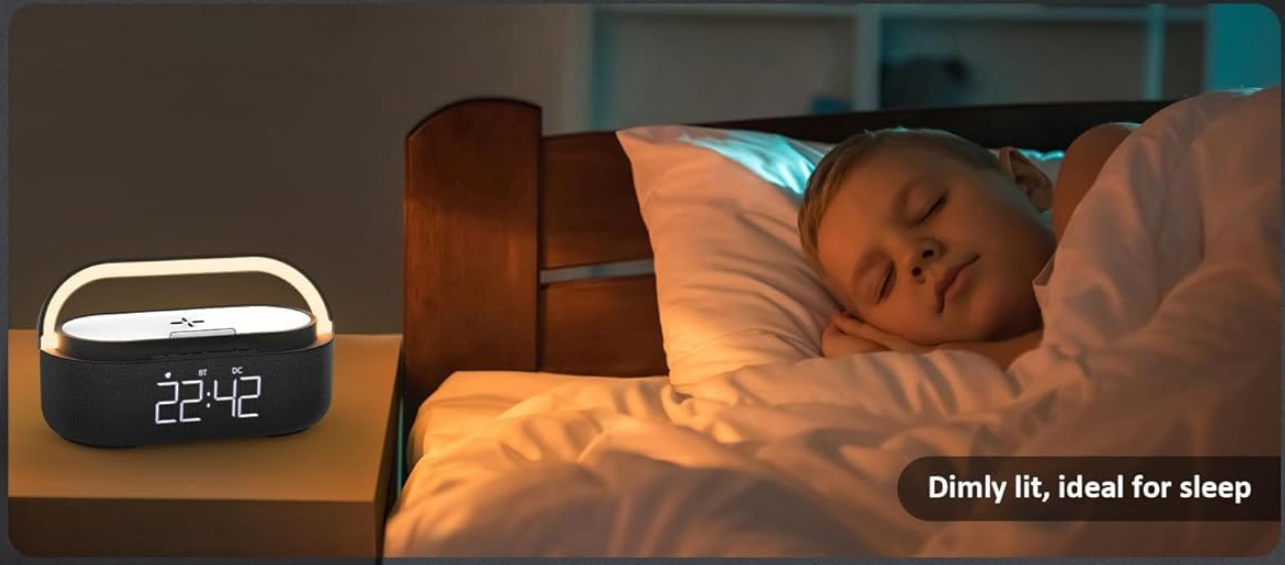


Image 3.4: Adjustable brightness levels of the night lamp.

- **Portable Phone Stand:** Features a 180° adjustable phone holder for convenient viewing.



Image 3.5: The 180° adjustable phone holder in use.

- **Long Battery Life:** Built-in 2500mAh battery provides up to 16 hours of audio playback (at 50% volume), 100 hours for the lamp, or 180 hours for the alarm function.
- **Elegant Design:** Combines high-quality materials with a smooth finish and a fabric-wrapped speaker, making it a stylish addition to any room.
- **Portable Design:** Equipped with a portable curve handle for easy carrying.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Connect Power:** Insert the Type-C data cable into the DC IN port on the back of the alarm clock and connect the other end to the provided power adapter. Plug the adapter into a wall outlet. The display will light up.
3. **Initial Charge:** For optimal performance, fully charge the device before first use, especially if you plan to use it wirelessly.
4. **Placement:** Place the alarm clock on a stable, flat surface away from direct sunlight, heat sources, and moisture.

5. OPERATING INSTRUCTIONS

5.1. Time Setting

1. Press and hold the **TIME SET** button (or similar button, refer to physical buttons on device) to enter time setting mode.
2. Use the +/- buttons to adjust the hour. Press **TIME SET** again to confirm and move to minute setting.
3. Use the +/- buttons to adjust the minute. Press **TIME SET** again to save and exit.

5.2. Alarm Setting

1. Press the **ALARM SET** button (or similar button) to enter alarm setting mode.
2. Use the +/- buttons to adjust the alarm hour. Press **ALARM SET** again to confirm and move to minute setting.
3. Use the +/- buttons to adjust the alarm minute. Press **ALARM SET** again to save.
4. To activate/deactivate the alarm, press the **ALARM ON/OFF** button. An alarm icon will appear/disappear on the display.

5. When the alarm sounds, press the **SNOOZE** button for an additional 5 minutes of sleep. To turn off the alarm, press any other button.

5.3. Brightness Adjustment (Display & Lamp)

- **Display Brightness:** Press the **DIMMER** button (or similar) to cycle through 3 levels of display brightness (low, medium, high).
- **Lamp Brightness:** Touch the light bar or press the **LIGHT** button (or similar) to cycle through 4 levels of lamp brightness (Off, Dim, Medium, Light).

5.4. Bluetooth Speaker Operation

1. Press the **MODE** button to switch to Bluetooth mode. The Bluetooth indicator will flash.
2. On your mobile device, enable Bluetooth and search for "COLSUR S29" (or similar device name).
3. Select the device to pair. Once connected, the Bluetooth indicator will stop flashing and remain solid.
4. You can now play audio through the alarm clock's speaker. Use the **+/-** buttons to adjust volume.

5.5. FM Radio Operation

1. Press the **MODE** button to switch to FM Radio mode.
2. Press and hold the **PLAY/PAUSE** button to auto-scan and save available FM stations.
3. Press the **PREV/NEXT** buttons to switch between saved stations.
4. Use the **+/-** buttons to adjust the radio volume (16 levels).



Image 5.1: Using the FM Radio function.

5.6. Wireless Charging

1. Ensure the alarm clock is connected to the power adapter.
2. Place your Qi-enabled smartphone or earbuds case on the wireless charging area on top of the alarm clock.
3. The charging indicator on your device will show that charging has begun. Ensure the device is centered on the charging pad for optimal performance.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the device. Do not use abrasive cleaners or solvents.
- **Avoid Water:** Keep the device away from water and high humidity.
- **Temperature:** Do not expose the device to extreme temperatures.
- **Battery Care:** If not used for a long period, charge the battery at least once every three months to prolong its lifespan.

Premium Material

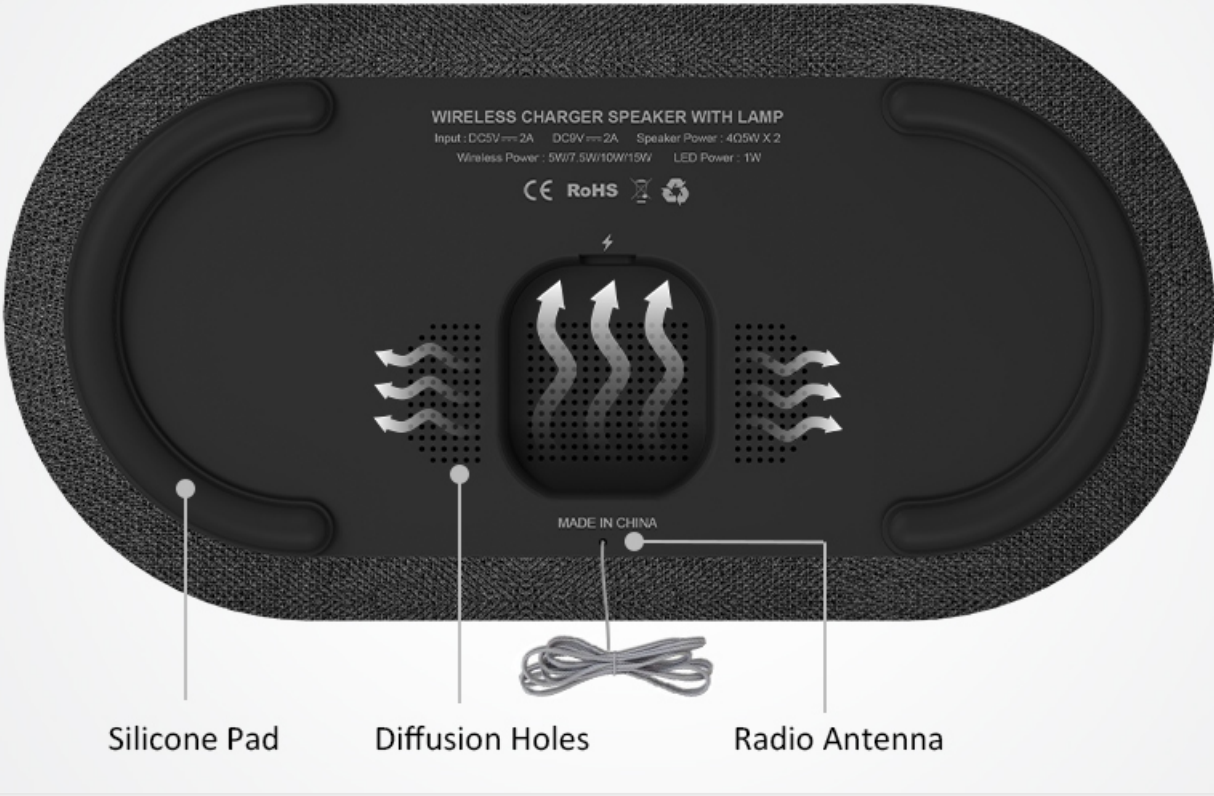


Image 6.1: View of the device's underside, showing ventilation and antenna.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	No power connection or low battery.	Ensure power adapter is securely plugged in. Charge the device if using battery power.
Wireless charging not working.	Not connected to power adapter; phone not centered; phone case too thick; device not Qi-enabled.	Connect to power adapter. Reposition phone. Remove thick phone case. Ensure device supports Qi wireless charging.
Bluetooth not connecting.	Device not in pairing mode; Bluetooth disabled on phone; too far from device.	Ensure alarm clock is in Bluetooth mode (flashing indicator). Enable Bluetooth on your phone. Move phone closer to the alarm clock.
Alarm not sounding.	Alarm not activated; volume too low.	Check if the alarm icon is displayed. Increase alarm volume.

Problem	Possible Cause	Solution
FM Radio static/poor reception.	Weak signal; antenna not extended.	Adjust the position of the device. Ensure the external antenna is fully extended.

8. SPECIFICATIONS

Feature	Specification
Model Number	S29-Schwarz
Dimensions (L x W x H)	8 x 3.81 x 10 cm
Weight	508 Grams
Power Source	Cable Electric
Battery	1 Lithium-ion (2500 mAh)
Display Type	Digital LED
Wireless Charging Output	15W (Max)
Special Features	Alarm, Large Display, Adjustable Brightness, Radio, Snooze
Color	Black
Usage	Indoor

9. WARRANTY AND SUPPORT

COLSUR provides a comprehensive **3-year warranty** for this product, covering manufacturing defects and malfunctions under normal use. For any inquiries or support needs, please contact our dedicated customer service team. We aim to provide a response within **24 hours**.

For further assistance, please visit the official COLSUR brand store or contact us through the platform where you purchased the product.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question