

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [CyberpowerPC](#) /
- › [CyberpowerPC Gamer Xtreme VR Gaming PC User Manual - Model GXiVR8800A2](#)

## CyberpowerPC GXiVR8800A2

# CyberpowerPC Gamer Xtreme VR Gaming PC User Manual

Model: GXiVR8800A2

## INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your CyberpowerPC Gamer Xtreme VR Gaming PC, Model GXiVR8800A2. Please read this manual thoroughly before using your new computer to ensure optimal performance and longevity.

## SAFETY INFORMATION

- Ensure the power supply is connected to a grounded outlet.
- Do not expose the computer to water or excessive humidity.
- Avoid placing the computer in direct sunlight or near heat sources.
- Maintain adequate ventilation around the computer to prevent overheating.
- Do not open the computer case unless instructed by technical support, as it may void your warranty.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- CyberpowerPC Gamer Xtreme VR Gaming Desktop (Model GXiVR8800A2)
- Gaming Keyboard
- Gaming Mouse
- Power Cord

## SETUP

### 1. Unpacking and Placement

Carefully remove the computer and all accessories from the packaging. Place the computer on a stable, flat surface with adequate space for ventilation. Ensure the rear of the computer is not obstructed.



Image: The CyberpowerPC Gamer Xtreme VR Gaming PC desktop tower, accompanied by its included gaming keyboard and mouse.

## 2. Connecting Peripherals

1. **Monitor:** Connect your monitor to the graphics card's HDMI or DisplayPort outputs located at the rear of the PC. Ensure you connect to the dedicated graphics card (NVIDIA GeForce RTX 4060 Ti), not the motherboard's integrated graphics ports.
2. **Keyboard and Mouse:** Connect the included keyboard and mouse to any available USB ports.
3. **Power:** Connect the power cord to the power supply unit (PSU) at the rear of the PC, then plug it into a grounded electrical outlet.
4. **Network (Optional):** For a wired internet connection, connect an Ethernet cable from your router to the RJ-45 network port. For wireless connectivity, ensure the Wi-Fi antennas (if included) are attached.



Image: A detailed view of the top-mounted I/O ports, including USB 3.0 ports, audio jacks, and power/reset buttons.

### 3. Initial Power On

Press the power button on the front of the computer. The system will boot into Windows 11 Home. Follow the on-screen instructions to complete the initial Windows setup, including language, region, and user account creation.

## OPERATING YOUR PC

### Basic Operation

- **Power On/Off:** Press the power button to turn on the PC. To shut down, click the Start button, then Power > Shut down.
- **Restart:** To restart the PC, click the Start button, then Power > Restart.
- **Sleep Mode:** To put the PC into sleep mode, click the Start button, then Power > Sleep.

### Windows 11 Home

Your CyberpowerPC comes pre-installed with Windows 11 Home, offering a modern and intuitive user experience.

Familiarize yourself with the Start Menu, Taskbar, and File Explorer for efficient navigation.

## Gaming and Performance

This system is designed for high-performance gaming and VR experiences. The Intel Core i5-14600KF processor and NVIDIA GeForce RTX 4060 Ti graphics card provide robust power for demanding applications and modern game titles. The 16GB DDR5 RAM and 1TB NVMe SSD ensure fast loading times and smooth multitasking.



Image: An internal view of the PC case, highlighting the liquid-cooled CPU, graphics card, and RGB lighting.

## MAINTENANCE

### Cleaning

- **Exterior:** Use a soft, damp cloth to clean the exterior surfaces. Avoid abrasive cleaners.

- **Dust:** Periodically use compressed air to clear dust from ventilation grilles and internal components. Ensure the PC is powered off and unplugged before cleaning.

## Software Updates

Regularly update your operating system (Windows Update) and graphics drivers (NVIDIA GeForce Experience) to ensure optimal performance, security, and compatibility with the latest games and applications.

## TROUBLESHOOTING

- **No Power:** Check all power cable connections, including the wall outlet and the PSU. Ensure the power switch on the PSU (if present) is in the 'On' position.
- **No Display:** Verify that your monitor is connected to the graphics card (NVIDIA GeForce RTX 4060 Ti) and not the motherboard. Ensure the monitor is powered on and set to the correct input source.
- **Slow Performance:** Close unnecessary background applications. Check for system updates and driver updates. Ensure adequate ventilation to prevent thermal throttling.
- **System Freezes/Crashes:** Restart the computer. If issues persist, check for software conflicts or consult the operating system's troubleshooting guides.

## SPECIFICATIONS

Component	Detail
Processor	Intel Core i5-14600KF 3.5GHz (6+8 Cores)
Chipset	Intel B760
Graphics Card	NVIDIA GeForce RTX 4060 Ti 8GB
RAM	16GB DDR5
Storage	1TB PCIe Gen4 NVMe SSD
Operating System	Windows 11 Home 64-bit
Connectivity	4 x USB 3.1, 4 x USB 2.0, 1x RJ-45 Ethernet, 802.11AC Wi-Fi
Audio	7.1 Channel
Special Features	Tempered glass side panel, Custom RGB case lighting, Liquid Cool CPU
Dimensions	21.65 x 20.47 x 12.99 inches
Weight	29.9 pounds

## WARRANTY AND SUPPORT

Your CyberpowerPC Gamer Xtreme VR Gaming PC comes with a **1 Year Parts and Labor Warranty**. Additionally, you receive **Free Lifetime Technical Support**.

For technical assistance, warranty claims, or further information, please visit the official CyberpowerPC support website or contact their customer service. Keep your purchase receipt and model number (GXIVR8800A2) handy when contacting

support.

For more information, you can visit the [CyberpowerPC Store on Amazon](#).