

FRIDEKO HOME L02229-89-US

FRIDEKO HOME Rattan Chandelier Instruction Manual

Model: L02229-89-US | Brand: FRIDEKO HOME

1. SAFETY INFORMATION

Please read these instructions carefully before installation and retain them for future reference. Incorrect installation can lead to electrical shock or fire hazards. Always follow local electrical codes.

- **WARNING:** To avoid electric shock, disconnect power at the main circuit breaker or fuse box before beginning installation.
- All electrical connections must be in accordance with local and National Electrical Code (NEC) standards. If you are unfamiliar with proper electrical wiring connections, consult a qualified electrician.
- Do not exceed the maximum wattage specified for the bulbs.
- Ensure the fixture is securely mounted to a structural part of the ceiling.
- Do not connect this fixture to an ungrounded electrical system.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- Rattan Chandelier Fixture (with fabric shade and 4 E12 sockets)
- Ceiling Canopy
- Adjustable Hanging Chain
- Mounting Bracket
- Mounting Screws
- Wire Nuts
- Installation Instructions



Figure 2.1: Chandelier dimensions and compatible bulb types (bulbs not included).

3. SPECIFICATIONS

Feature	Detail
Brand	FRIDEKO HOME
Model Number	L02229-89-US
Dimensions (L x W x H)	4.7" x 15.74" x 8.66" (Fixture only)
Material	Natural Rattan, Fabric Shade, Metal
Color	Brown (Rattan), White (Shade), Black (Metal)
Bulb Base	E12 (Candelabra)
Number of Lights	4
Max Wattage per Bulb	40 Watts

Voltage	110-120 Volts
Installation Type	Semi Flush Mount / Hanging (Adjustable Height)
Special Feature	Adjustable Height
Indoor/Outdoor Usage	Indoor

4. SETUP (INSTALLATION INSTRUCTIONS)

Follow these steps to install your FRIDEKO HOME Rattan Chandelier. It is recommended to have a second person assist during installation due to the size and weight of the fixture.

1. **Turn Off Power:** Before starting, ensure the power supply to the junction box is turned off at the circuit breaker.
2. **Prepare Mounting Bracket:** Attach the mounting bracket to the junction box in the ceiling using the provided screws. Ensure it is securely fastened.
3. **Adjust Hanging Height:** Determine the desired hanging length for your chandelier. The chain can be adjusted by opening and removing links as needed. Use the removable buckle to secure the chain to the canopy.
4. **Wire Connections:** Carefully connect the electrical wires:
 - Connect the **black** wire from the fixture to the **black** (Live) wire from the ceiling using a wire nut.
 - Connect the **white** wire from the fixture to the **white** (Neutral) wire from the ceiling using a wire nut.
 - Connect the **ground** wire from the fixture to the **ground** wire from the ceiling (usually bare copper or green) using a wire nut.

Ensure all connections are tight and secure.

5. **Mount Canopy:** Carefully push the wired mounting bracket and wires into the junction box. Raise the ceiling canopy to the ceiling, aligning the mounting screws on the bracket with the holes in the canopy. Secure the canopy with the decorative nuts.
6. **Install Bulbs:** Screw four E12 base bulbs (not included) into the sockets. Do not exceed 40 watts per bulb.
7. **Restore Power:** Turn the power back on at the circuit breaker.



Figure 4.1: Detailed view of chandelier components including rattan, canopy, and bulb sockets.

5. OPERATING INSTRUCTIONS

This chandelier is designed for simple operation once installed.

- **Power On/Off:** Control the light using a standard wall switch connected to the fixture's electrical circuit.
- **Bulb Compatibility:** The fixture is compatible with LED, CFL, incandescent, and halogen bulbs with an E12 (candelabra) base.
- **Dimming:** If you wish to use dimmable bulbs, ensure they are compatible with your dimmer switch.

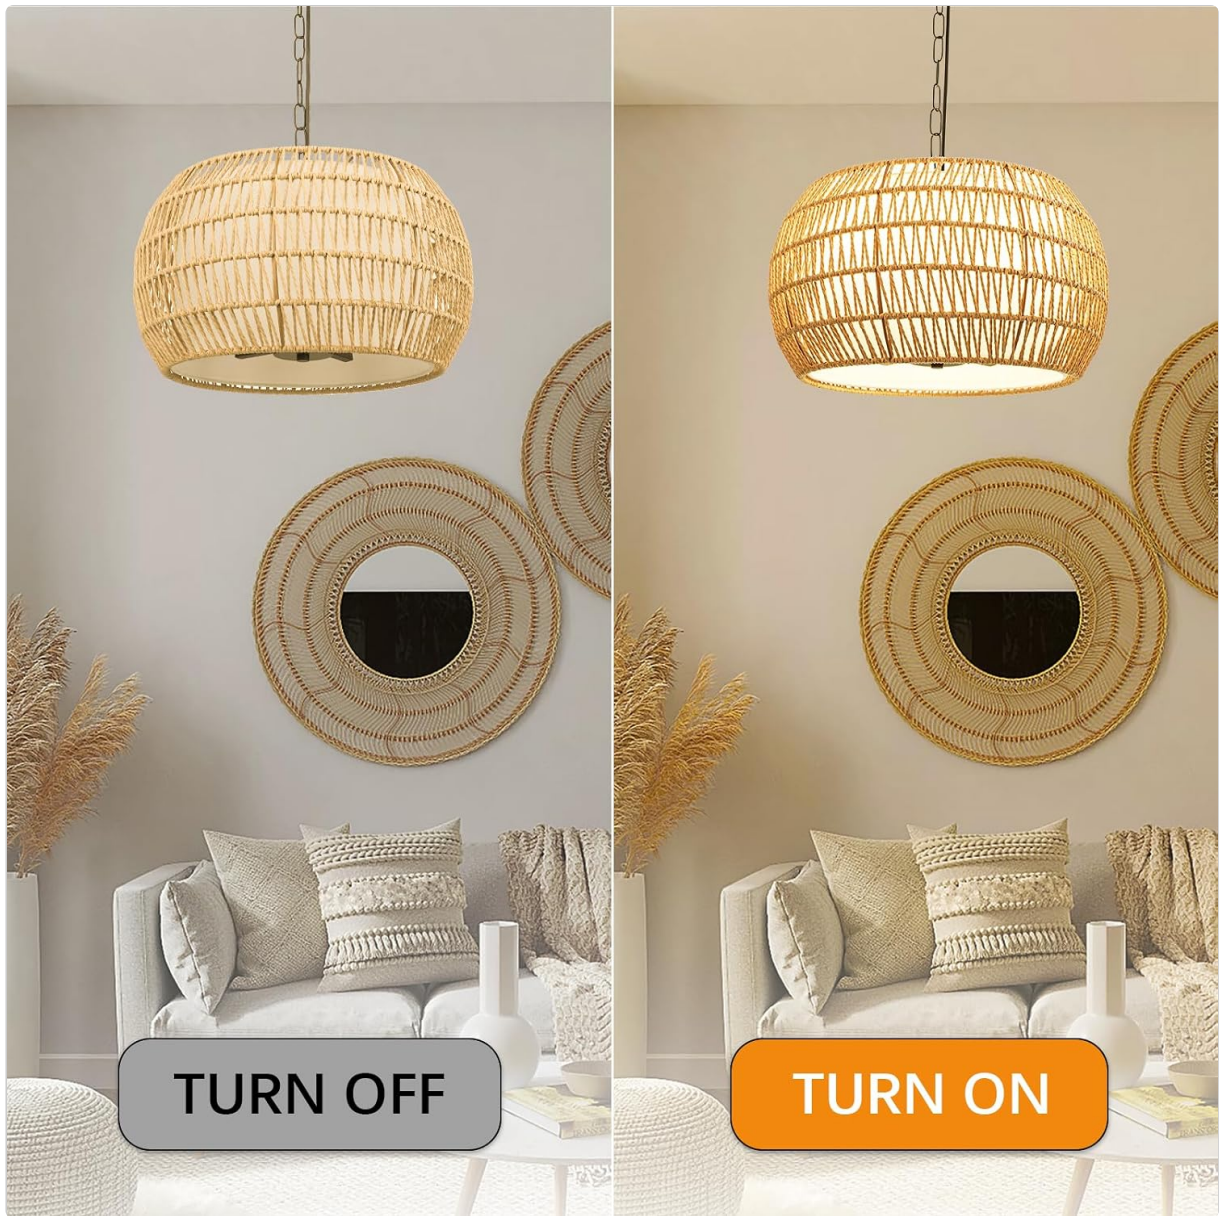


Figure 5.1: Chandelier illumination comparison (Off vs. On).

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your chandelier.

- **Cleaning:** To clean the fixture, ensure the power is off. Wipe the rattan and metal parts with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Always turn off the power before replacing bulbs. Allow bulbs to cool completely before touching them. Replace with E12 base bulbs, not exceeding 40 watts.

7. TROUBLESHOOTING

If you encounter issues with your chandelier, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to fixture, loose wiring, faulty bulb, tripped circuit breaker.	Check circuit breaker. Ensure wall switch is on. Verify all wire connections are secure. Replace bulbs.

Light flickers	Loose bulb, incorrect bulb type for dimmer, loose wiring.	Tighten bulbs. Ensure bulbs are dimmable if using a dimmer switch. Check wire connections.
Fixture hangs unevenly	Improperly adjusted chain or mounting.	Adjust chain links to balance the fixture. Re-check mounting bracket installation.

8. WARRANTY AND SUPPORT

FRIDEKO HOME is committed to customer satisfaction. If you have any questions, concerns, or require assistance with your Rattan Chandelier, please do not hesitate to contact us.

For support, please reach out to us via the Amazon message box. Our customer service team will assist you with any product-related inquiries or issues.

Please retain your proof of purchase for any warranty claims.