

[Manuals.plus](#) /

› [Playmobil](#) /

› Playmobil 71598 Rescue Boat and Fire Brigade Playset Instruction Manual

Playmobil 71598

Playmobil 71598 Rescue Boat and Fire Brigade Playset Instruction Manual

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Playmobil 71598 Rescue Boat and Fire Brigade Action Heroes playset. Designed for children aged 4 and above, this set offers an engaging play experience with its floating rescue boat, figures, and accessories. Please read all instructions carefully before use.

SAFETY INFORMATION

WARNING: Not suitable for children under the age of 3 years. This product contains small parts which may present a choking hazard.

- Always supervise children during play.
- Ensure all parts are securely assembled before play.
- Keep batteries out of reach of small children.

BOX CONTENTS

Your Playmobil 71598 set includes a total of 70 pieces, designed for comprehensive play. The main components are:

- 1 x Fire Rescue Boat (floats)
- 2 x Playmobil Figures (firefighters)
- 1 x Underwater Motor (requires 1 AAA battery, not included)
- 1 x Winch with hose
- 1 x Lifeline
- 1 x Megaphone

- Various other accessories (68 pieces in total)
- Instruction manual



Image: Overview of the Playmobil 71598 playset components.

SETUP AND ASSEMBLY

Follow the detailed instructions provided in the box for step-by-step assembly. Key assembly points include:

1. **Boat Hull:** Ensure the main boat hull is securely connected.

2. **Removable Roof:** Attach the boat's roof securely.
3. **Underwater Motor:** Insert 1 AAA battery (not included) into the underwater motor and attach it to the designated slot at the rear of the boat.
4. **Accessories:** Attach the winch, hose, lifeline, megaphone, and other accessories as indicated in the manual.
5. **Figures:** Place the two firefighter figures in their positions on the boat.



Image: The Playmobil 71598 Rescue Boat fully assembled with figures.

OPERATING INSTRUCTIONS

The Playmobil 71598 Rescue Boat is designed for interactive play, both on land and in water.

- **Floating Action:** The boat is designed to float in water. Ensure all compartments are closed before placing it in water.
- **Underwater Motor:** Activate the underwater motor to propel the boat through water. Refer to the motor's specific instructions for battery installation and operation.
- **Firefighting Operations:** Use the winch and hose to simulate firefighting scenarios. The hose can be extended and retracted.
- **Rescue Missions:** Utilize the lifeline and megaphone with the figures to conduct imaginative rescue operations.

Your browser does not support the video tag.

Video: A Playmobil water rescue boat in action, demonstrating its floating capabilities and interaction with figures and accessories.

Your browser does not support the video tag.

Video: A product overview showcasing various features and play possibilities of a Playmobil boat set.

MAINTENANCE

To ensure the longevity of your Playmobil playset:

- **Cleaning:** All parts (without stickers) can be easily cleaned under running water. Avoid using harsh chemicals.
- **Drying:** After water play, thoroughly dry all components, especially the motor, to prevent damage.
- **Storage:** Store the playset in a dry, cool place away from direct sunlight when not in use.

SPECIFICATIONS

Feature	Detail
Product Dimensions	18.11 x 11.18 x 5.91 inches
Item Weight	2.29 pounds
Item Model Number	71598
Manufacturer Recommended Age	3 years and up
Batteries Required	1 AAA battery (for underwater motor, not included)

TROUBLESHOOTING

- **Boat not floating correctly:** Ensure all parts are correctly assembled and the boat is not overloaded.
- **Motor not working:** Check if the AAA battery is correctly inserted and has sufficient charge. Ensure the motor is properly attached to the boat.
- **Missing parts:** Refer to the box contents list. If a part is genuinely missing from a new set, contact Playmobil customer support.

WARRANTY AND SUPPORT

For any questions, concerns, or to inquire about warranty information, please contact Playmobil customer support directly. Refer to the packaging or the official Playmobil website for contact details specific to your region.