

[manuals.plus](#) /

› [AIYAPLAY](#) /

› [AIYAPLAY 32-Key Electronic Piano and Drum Set for Children \(Model 390-024V00MX\) - Instruction Manual](#)

AIYAPLAY 390-024V00MX

AIYAPLAY 32-Key Electronic Piano and Drum Set for Children

MODEL: 390-024V00MX - INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the AIYAPLAY 32-Key Electronic Piano and Drum Set. This multifunctional musical instrument is designed to provide an immersive and complete musical experience for children aged 3 to 6 years. It combines a 32-key piano with interactive drum pads, cymbals, a microphone, and MP3/USB playback capabilities. Please read this manual carefully to ensure proper setup, operation, and maintenance of the product.



Image 1: A child enjoying the AIYAPLAY Electronic Piano and Drum Set.

2. Safety Information

- To be used under adult supervision.
- Ensure all parts are securely assembled before use.
- Keep small parts away from young children to prevent choking hazards.
- Do not expose the product to water or excessive moisture.
- Use only the recommended battery type (4 AA batteries).

- The stool has a maximum weight capacity of 50 kg.

3. What's in the Box

Please check the contents of the package to ensure all items are present:

- 1 x Electronic Keyboard Organ Unit
- 1 x Microphone
- 2 x Drumsticks
- 1 x Stool



Image 2: Included components of the AIYAPLAY Electronic Piano and Drum Set.

4. Setup

1. **Assemble the Main Unit:** Carefully attach the four legs to the electronic keyboard unit. Ensure they click securely into place.
2. **Install Batteries:** The piano requires 4 AA batteries (not included). Open the battery compartment, insert the batteries with correct polarity, and close the compartment.
3. **Assemble the Stool:** The stool typically comes in a few pieces. Assemble it according to the visual

instructions, ensuring all parts are firmly connected.

4. **Connect Microphone:** Plug the microphone cable into the designated microphone jack on the keyboard unit.
5. **Positioning Options:** The legs are detachable, allowing the keyboard to be used on a table or with its stand. Choose the desired setup for your child.



Image 3: The electronic piano can be used on its stand or as a tabletop unit by detaching the legs.

5. Operating Instructions

This electronic piano and drum set offers a variety of features for musical exploration:

- **Power On/Off:** Locate the power switch, usually on the side or back of the unit, and slide it to the 'ON' position.
- **Piano Keys:** The 32 keys allow children to play melodies.
- **Drum Pads and Cymbals:** Use the drumsticks to play on the interactive drum pads and cymbals for rhythmic accompaniment.
- **Multifunction Panel:** Access 19 demonstration melodies, 6 rhythms (blues, rock, pop, waltz, latin, drum rhythm), and 4 instrument sounds (piano, organ, mandolin, music box).
- **Microphone:** Use the included microphone for singing along. It features amplification for an

enhanced performance.

- **MP3/USB Playback:** Connect an external device via the MP3 or USB port to play your child's favorite songs.
- **LED Lights:** The illuminated keys and other LED lights dance to the rhythm of the music, adding a visual element to the play.
- **Volume Control:** Adjust the volume to a comfortable level using the dedicated volume buttons.
- **Recording and Playback:** The unit includes functions to record and play back your child's compositions, fostering creativity.
- **Sleep Mode:** To conserve battery life, the piano automatically enters sleep mode after 3 minutes of inactivity.

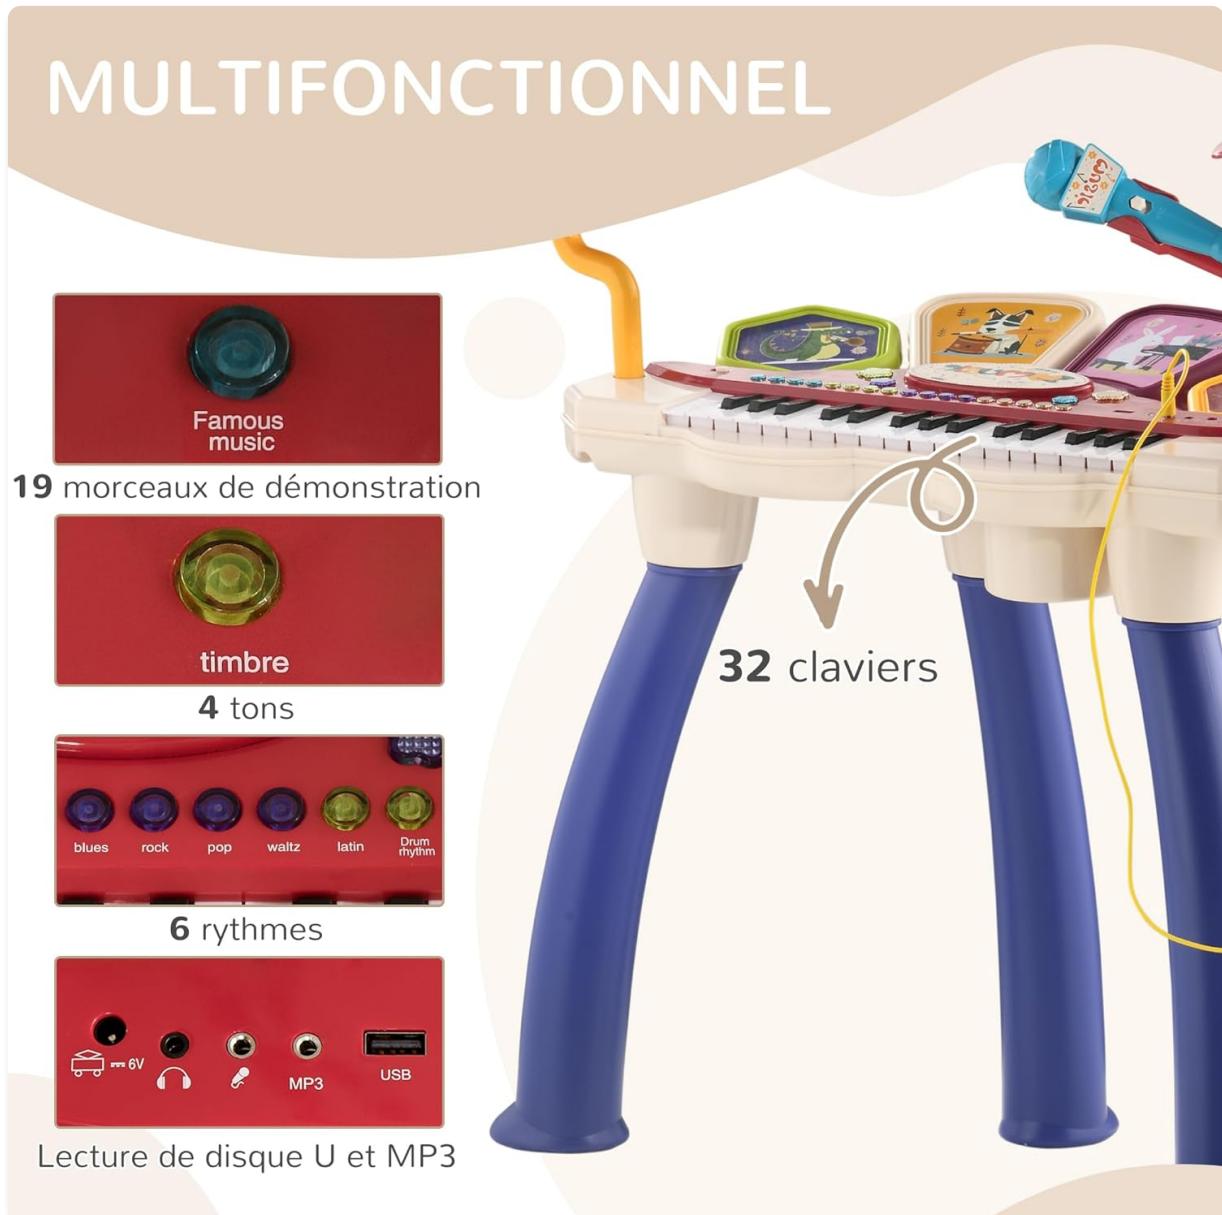


Image 4: Multifunctional control panel for various sounds and rhythms.

INTERACTION RENFORCÉE



Enregistrement et lecture



Microphone avec amplification



Tambour et cymbale



Feux clignotants



Image 5: Interactive features including recording, microphone, and drum elements.

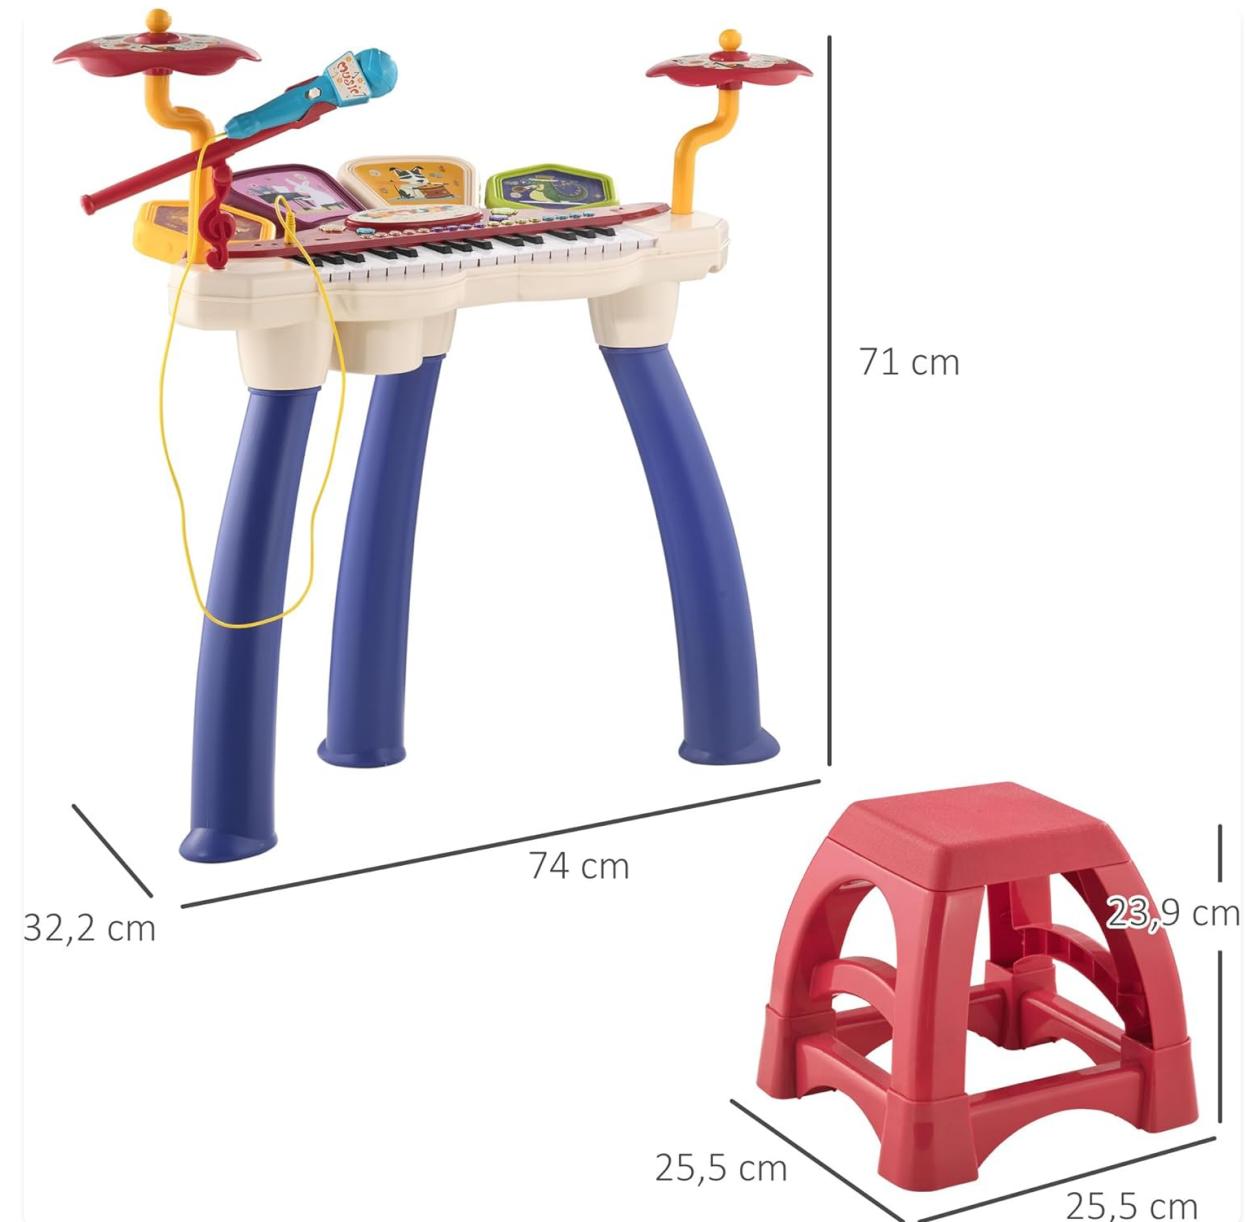


Image 6: Musical light effects and various electronic drum sounds.

6. Maintenance

- **Cleaning:** Wipe the surface of the piano and stool with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Battery Care:** Remove batteries if the product will not be used for an extended period. Replace all batteries at the same time.
- **Storage:** Store the product in a cool, dry place away from direct sunlight when not in use. The detachable feet allow for more compact storage.

7. Troubleshooting

- **No Sound:** Check if the unit is powered on and if the volume is turned up. Ensure batteries are correctly installed and not depleted.
- **Intermittent Sound:** Replace batteries with new ones. Check all connections, especially the microphone.
- **Lights Not Working:** Ensure the unit is powered on. If only specific lights are not working, contact customer support.
- **Microphone Not Working:** Ensure the microphone is securely plugged in. Check if the microphone's

own switch (if any) is on.

8. Specifications

Feature	Detail
Model Number	390-024V00MX
Number of Keys	32
Recommended Age	36 months - 6 years
Product Dimensions (L x W x H)	74 x 32.2 x 71 cm
Item Weight	3 Kilograms
Stool Weight Capacity	50 Kilograms
Main Material	Plastic (ABS and PP)
Batteries Required	Yes (4 AA batteries)
Batteries Included	No
Assembly Required	Yes

UN CADEAU PARFAIT

UN PLAISIR POUR LES ENFANTS



Facile à nettoyer



Convient aux enfants de 3 à 6 ans



Capacité de charge de 50 kg



Son de qualité supérieure

Image 7: Product dimensions for the electronic piano and stool.

9. Warranty and Support

For warranty information, product support, or to inquire about spare parts, please contact AIYAPLAY customer service through your retailer or the official AIYAPLAY website. Please have your model number (390-024V00MX) and proof of purchase ready when contacting support.